

ACONATIC

คู่มือการใช้งาน

เครื่องเล่น **SOUNDBAR SPEAKER SYSTEM**

รุ่น AN-SP158



สำหรับลูกค้า:

โปรดอ่านและทำความเข้าใจคู่มือนี้ให้รอบคอบและเก็บไว้อ้างอิง

ข้อมูลทางเทคนิค

Output power: 70W (RMS)

Driver Units: 5.25"+2.25"x2

Frequency response: 20Hz-20KHz

Separation: ≥ 40 dB

S / N: ≥ 55 dB

Distortion: $\leq 1\%$ (1K, 1W)

Power supply: 100-240V~ 50/60 Hz

Dimensions : soundbar: L960 x H70 x D65 (mm)

subwoofer: L380 x H120 x D260(mm)


คุณสมบัติ:

- คุณภาพของชาวด์บาร์มาพร้อมกับเครื่องขยายเสียงในตัว
- คลื่นเสียงเต็มรูปแบบเหมาะสำหรับคุณที่ชื่นชอบความบันเทิงจาก MP3, Mp4, ภาพยนตร์ CD / DVD และการเล่นเกมดิจิตอล
- วัสดุที่มีคุณภาพ: ใช้ส่วนประกอบที่ดีที่สุดเท่านั้น เพื่อให้ได้เสียงที่มีคุณภาพในทุกๆย่านความถี่

อุปกรณ์ที่มีภายในกล่อง

ลำโพง Soundbar	-----	1 ชิ้น
ลำโพง Subwoofer	-----	1 ชิ้น
รีโมทคอนโทรล	-----	1 ชิ้น
คู่มือการใช้งาน	-----	1 ชิ้น
สายสัญญาณเสียง 3.5 mm	-----	1 เส้น
สายไฟ	-----	1 เส้น
บัตรรับประกัน	-----	1 ชิ้น

ด้านหน้าเครื่อง

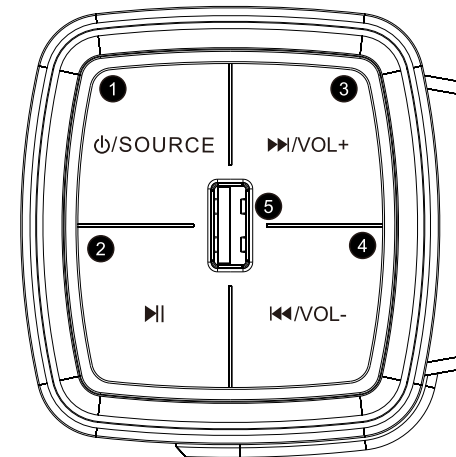

1. ระบบลำโพงขณะอยู่ในโหมด “๑” (สแตนด์บาย) ไฟ LED สีส้มจะกระพริบ กดปุ่ม “๑ / SOURCE” เพื่อทำการเปิดเครื่อง จากนั้นเลือกแหล่งสัญญาณที่ต้องการ กดปุ่ม “๑ / SOURCE” ค้างไว้ ลำโพงจะกลับมาในโหมด “๑” (สแตนด์บาย)


* คุณสามารถเลือกแหล่งสัญญาณที่ต้องการได้โดยกดปุ่ม “๑/SOURCE ” “ BT ” หมายถึงโหมด บลูทูธ “ AU ” หมายถึงโหมด AUX “ USB ” หมายถึงโหมด USB “ HD ” หมายถึงโหมด HDMI (ARC) “ OPT ” หมายถึงโหมด OPTICAL

2. ปุ่ม เล่น/หยุดเล่นชั่วคราว
3. กดปุ่ม ค้าง ไว้ เพื่อ เพิ่มระดับเสียง / กด 1 ครั้ง เพื่อเล่น รายการ ถัดไป
4. กดปุ่ม ค้าง ไว้ เพื่อ ลดระดับเสียง / กด 1 ครั้ง เพื่อเล่น รายการก่อนหน้า
5. ช่องเสียบ USB



***อย่าใช้ช่องเสียบ USB ขารจุอุปกรณ์ซึ่งอาจทำให้อุปกรณ์ของคุณเกิดความเสียหายได้

การใช้งานรีโมทคอนโทรล

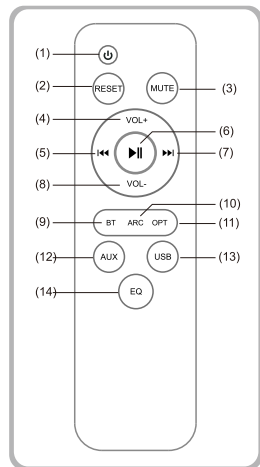


1. ปุ่ม
2. RESET
3. MUTE
4. VOL+
5. <<
6. >>
7. >>>
8. VOL-
9. BT
10. ARC
11. OPT
12. AUX
13. USB
14. EQ

การเชื่อมต่อบลูทูธ


กดปุ่ม “ BT ” บนรีโมทคอนโทรลเพื่อเปลี่ยนเป็นโหมดบลูทูธ ไฟ LED ตรงจุดด้านล่างขวา จะเริ่มกะพริบอย่างรวดเร็วเพื่อค้นหาอุปกรณ์บลูทูธ เปิดอุปกรณ์ Bluetooth มือถือของคุณ และค้นหาชื่ออุปกรณ์ “ AN-SP158 ” และจับคู่ เมื่อคุณจับคู่มือถือของคุณกับลำโพง ไฟ LED ตรงจุดด้านล่างขวาจะกะพริบช้าๆ เมื่อเริ่มเล่นเพลงมือถือของคุณ ไฟ LED ตรงจุดที่ด้านล่างขวาจะหยุดกะพริบ โดยฟังก์ชัน "PREVIOUS / NEXT", "PLAY / PAUSE" สามารถใช้งานได้ผ่านแผงด้านหน้าเครื่อง กดปุ่ม “>>>” เป็นเวลา 3 วินาที เพื่อตัดการเชื่อมต่อ

ด้านหลังเครื่อง

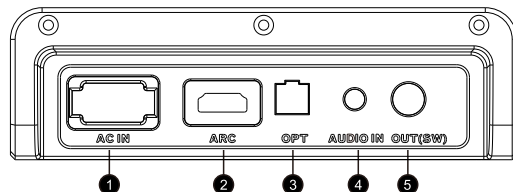


1. ช่องเสียบสายไฟ AC
2. ช่องเสียบสายสัญญาณ HDMI (ARC)
3. ช่องเสียบสาย OPTICAL
4. ช่องเสียบสาย Audio in
5. ช่องเสียบ สาย OUT Subwoofer

ตำแหน่งการวางลำโพง

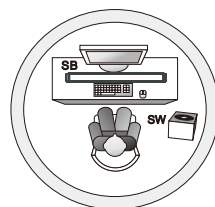


การวางตำแหน่งและ
การฟังในอุดมคติ

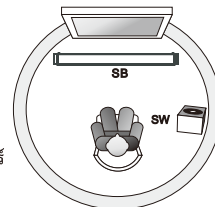

- ① **Sub-woofer** วางซับวูฟเฟอร์ไว้ที่ใดก็ได้บนพื้น
- ② **Soundbar Speaker** วางไว้ใกล้กับทีวีหรือเครื่องเล่นดีวีดี

ข้อควรระวังในการใช้งานแสดงดังรูปภาพต่อไปนี้

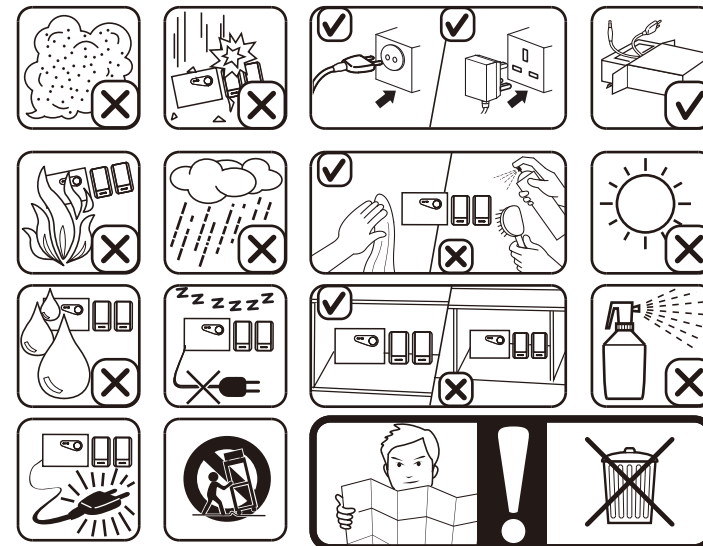

*ถ้ารีโมทไม่ทำงาน กรุณาเปลี่ยนแบตเตอรี่และลองอีกครั้ง

ACONATIC

SOUNDBAR SPEAKER SYSTEM AN-SP158



DEAR CUSTOMER:

Thank you for buying this product !
Prior to first use, please read the manual carefully.

Specifications

Output power: 50W (RMS)
Driver Unist: 5.25"+2.25"x2
Frequency response: 20Hz-20KHz
Separation: ≥ 40 dB
S / N: ≥ 55 dB
Distortion: $\leq 1\%$ (1K, 1W)
Power supply: 100 -240V~ 50/60Hz
Dimensions : soundbar: L960 x H70 x D65 (mm)
subwoofer:L380 x H120 x D260(mm)

Features:


- Quality Soundbar with built-in amplifier
- Full audio spectrum performances, ideal for your favourite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks.
- Quality materials : Only the best components to recreate sound faithfully across all frequencies.

Package contents

Soundbar	-----	1 pc
Subwoofer	-----	1 pc
Remote control	-----	1 pc
User manual	-----	1 pc
Audio input cord	-----	1 pc
Power cord	-----	1 pc
Warranty card	-----	1 pc

NO.1

Front panel

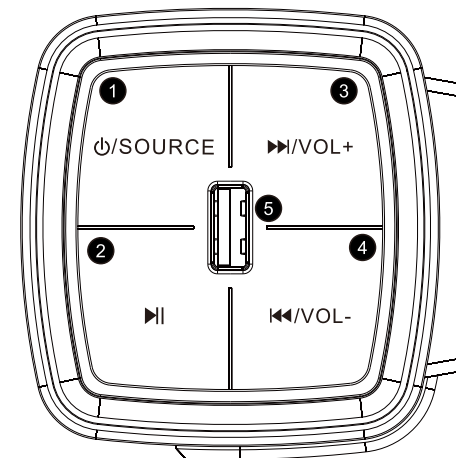


1. The Speaker system is in "Φ" (stand by) mode when power on, with the orange LED Flashing. Please press the "Φ / SOURCE" to select appropriate source. Keeping the "Φ / SOURCE" key pressed for long will put it back in "Φ" (stand by) mode.
- * You can toggle through the input modes by pressing the "Φ / SOURCE" key. "BT" Denotes Bluetooth Mode. "AU" Denotes AUX Mode. "USB" Denotes USB mode. "HD" Denotes HDMI ARC Mode. "OPT" Denotes OPTICAL Mode .
2. Play/Pause the songs.
3. Long press for volume decrease / short press for prev track.
4. Long press for volume increase / short press for next track.
5. USB Slot.



***Do NOT use USB for charging devices which can cause damage to your external devices.thank you.

NO.2

How to use the remote control

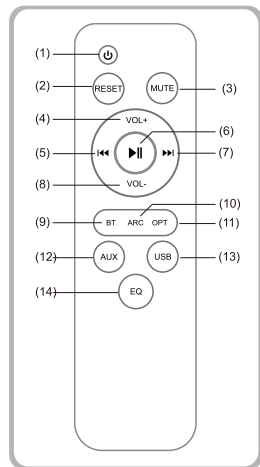


1. ⏻
2. RESET
3. MUTE
4. VOL+
5. ⏮
6. ⏪
7. ⏩
8. VOL-
9. BT
10. ARC
11. OPT
12. AUX
13. USB
14. EQ

1. ⏻ : Power ON or Standby modes.
2. RESET: To reset the system. All settings change to default level after pressing.
3. MUTE: Turn volume off. Depress again to activate the sound.
4. VOL+: To increase the Volume by short or long press of VOL+.
5. ⏮ : Play the previous song by pressing "⏮" but not in AUX mode.
6. ⏪ : Play/pause in USB/BT mode and MUTE in AUX mode.
7. ⏩ : Play next song by pressing "⏩", but not in AUX mode.
8. VOL-: To decrease the Volume by short or long press of VOL-
9. BT: Bluetooth mode selection.
10. ARC: HDMI ARC mode selection.
11. OPT: OPTDIG mode selection.
12. AUX: AUX input mode selection.
13. USB: USB mode selection.
14. EQ: POP, CLASSIC, JAZZ, COUNTRY, NORMAL, ROCK

BT Pairing Method


Press "BT" button on the remote to convert to Bluetooth input mode, LED display right bottom start to flash fast to search the Bluetooth device. Turn on your mobile Bluetooth device and search the devicename "AN-SP158", paired them well. When you have successfully paired your mobile to the speaker system, the LED right bottom flashes slowly. When starting to play your mobile music, the LED dot on the right bottom is on. The functions as "PREVIOUS/NEXT", "PLAY/PAUSE", can operate via the front panel. On BT mode, when connecting with mobile, press "⏪" for 3 seconds, bluetooth function can be force-disconnected.

Rear panel

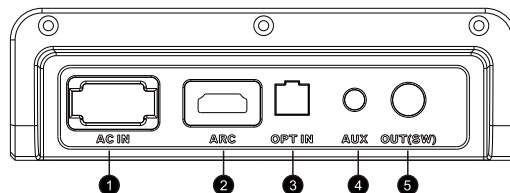


1. AC Power cord
2. ARC Input
3. OPTICAL Input
4. Input Connect to sound sources such as computer, CD player, MP3, etc
5. OUT Subwoofer

Positioning the speakers

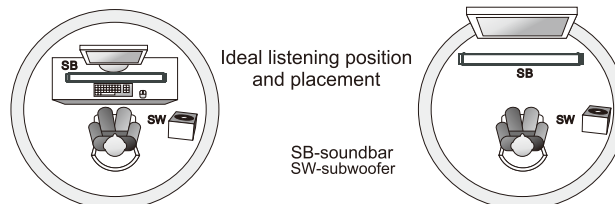

- ① **Sub-woofer** Place the sub-woofer any place on the floor.
- ② **Soundbar Speaker** Place it near the TV or DVD player.

In use please pay attention to the following items:

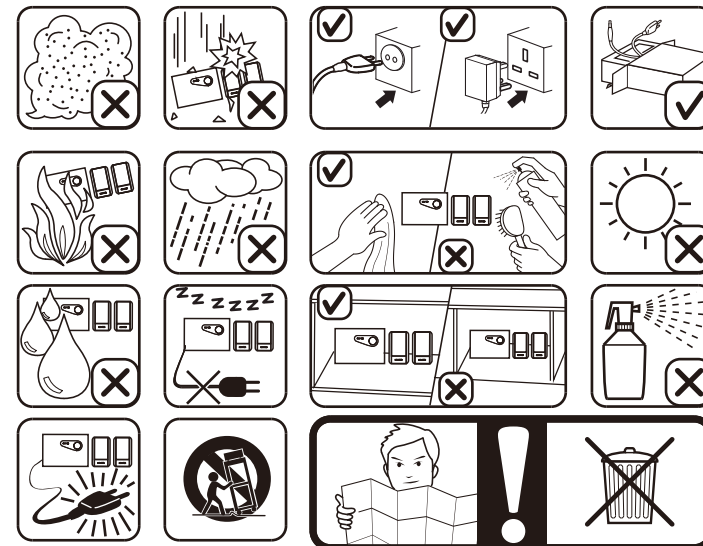

*if the remote is not working. Please replace the batteries and try again. Thank you

