

Aconatic
androidtv



คู่มือการใช้งาน
LED TV
รุ่น 42HS600AN

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งานโทรทัศน์
เก็บคู่มือนี้ไว้ใช้อ้างอิง

สารบัญ

ข้อควรระวังเรื่องความปลอดภัย.....	1
การติดตั้งโทรทัศน์และการเชื่อมต่อ.....	3
อุปกรณ์ภายในกล่อง.....	3
การติดตั้งโทรทัศน์.....	3
การเชื่อมต่อสัญญาณต่างๆ.....	4
ปุ่มโทรทัศน์.....	4
รีโมทคอนโทรล.....	5
การใช้งานเบื้องต้น.....	6
เปิดเครื่อง / สแตนด์บาย.....	6
การเลือกแหล่งสัญญาณ.....	6
การใช้งานหน้าจอเมนู.....	6
การค้นหาช่องรายการ.....	7
การบันทึกช่องรายการ.....	7
คำแนะนำสำหรับการเริ่มต้นอย่างรวดเร็ว.....	7
การใช้งานเบื้องต้น.....	7
วิธีเข้า Quick start.....	7
แอปพลิเคชัน.....	8
ฟังก์ชันการขยาย.....	8
การตั้งค่าบลูทูธ.....	8
สนับสนุนโดย.....	9
การแก้ไขเบื้องต้น.....	9
คำแนะนำในการติดตั้งขาโทรทัศน์.....	10
การใช้ขบวนสำหรับโทรทัศน์.....	11

ข้อควรระวังเรื่องความปลอดภัย

คำแนะนำเรื่องความปลอดภัย

⚠ ข้อควรระวัง

เพื่อป้องกันอันตรายจากการถูกไฟฟ้าช็อต

อย่าเปิดฝาดูโทรทัศน์ อย่าตรวจสอบ

โทรทัศน์ ด้วยตัวเองเด็ดขาด เพราะอาจทำให้ได้รับอันตรายจากไฟฟ้าแรงสูงได้ หากเครื่องมือมีปัญหาควรเรียกช่างผู้ชำนาญทำการตรวจสอบให้เท่านั้น

เพื่อป้องกันการเกิดไฟไหม้หรือถูกไฟฟ้าช็อต อย่าวางโทรทัศน์ทิ้งไว้ให้โดนฝนสาด หรือใช้งานโทรทัศน์ในบริเวณที่มีความชื้นสูง อย่านำภาชนะที่บรรจุน้ำหรือของเหลวใด ๆ มาวางใกล้ตัวโทรทัศน์ เช่น เทียน น้ำ แจกันดอกไม้ อาจทำให้เกิดน้ำหกใส่ตัวโทรทัศน์ได้

หากที่ตัวโทรทัศน์มีควันขึ้น มีอาการแปลก ๆ หรือมีกลิ่นเหม็นไหม้ ให้ปิดโทรทัศน์และถอดปลั๊กออกจากตัวรับทันที จากนั้นควรเรียกช่างผู้ชำนาญ หรือติดต่อสอบถามกับศูนย์บริการฯ ใกล้บ้านเพื่อทำการแก้ไข อย่าพยายามตรวจสอบโทรทัศน์ด้วยตัวเองเด็ดขาด เพราะอาจทำให้ได้รับอันตรายได้

ระวังอย่าให้วัตถุใด ๆ หล่นเข้าไปในตัวโทรทัศน์

เช่น คลิปหนีบกระดาษ เพราะอาจทำให้วงจรไฟฟ้า

ภายในตัวโทรทัศน์ เกิดการลัดวงจรได้อย่าปล่อยให้

เด็กเล็กอายุต่ำกว่า 3 ขวบ เล่นตัวโทรทัศน์ หรือเล่นอยู่ใกล้ กับตัวโทรทัศน์

ในขณะที่ตัวโทรทัศน์ ใช้งาน ควรจัดวางสายไฟของโทรทัศน์

ให้เรียบร้อย ไม่ให้บิดเบี้ยวหักงอ เพื่อช่วยให้อายุการใช้งาน

ใช้งานโทรทัศน์ นานขึ้นและป้องกันไม่ให้สายไฟชำรุด

ควรใช้งานกับระบบไฟฟ้าที่ติดตั้งสายดินเท่านั้น อย่าต่อโทรทัศน์ใช้งานกับเต้ารับที่ชำรุดหรือปลั๊กพ่วงที่สายไฟชำรุด เพราะอาจทำให้ได้รับอันตรายจากกระแสไฟฟ้ารั่วได้

เพื่อป้องกันอันตรายจากการเกิดไฟไหม้ อย่านำวัตถุที่มี

เปลวไฟมาวางใกล้กับตัวโทรทัศน์ เช่น เปลวไฟจากเทียนไข

เป็นต้น

คำแนะนำเรื่องความปลอดภัย

เสอาอากาศภายนอกที่ต่อใช้งานกับตัวโทรทัศน์ ควรติดตั้ง

อยู่ห่างจากสายไฟฟ้าแรงสูงเสมอ ในขณะที่มีฝนตกหนัก

หรือฟ้าผ่าให้ปิดโทรทัศน์ ถอดปลั๊กและถอดสายอากาศ

ออกเสมอ ไม่แนะนำให้ติดตั้งช่องเสียบสายอากาศกับ

เต้ารับไฟฟ้าภายในตู้กันเก็บไป เพราะอาจทำให้กระแส

ไฟฟ้าสปาร์คช่องเสียบสายอากาศจนทำให้โทรทัศน์

เสียหายได้

ปิดโทรทัศน์ และถอดปลั๊กออกเสมอเมื่อใช้งานเสร็จ

แล้วหรือเมื่อไม่ได้ใช้งานเครื่องติดต่อกันเป็นเวลานาน

ถอดปลั๊กออกทันทีเมื่อเกิดฝนตกหรือฟ้าผ่า อย่าจับที่

สายอากาศในขณะที่ฟ้ากำลังผ่า

ขณะถอดปลั๊ก ให้จับที่ตัวปลั๊กแล้วดึงออก ไม่ควรดึง

ที่สายไฟไม่ควรจับที่ปลั๊กไฟ ในขณะที่มีมือเปียก

การฟังเสียงจากหูฟังหรือ HEAD-PHONE ที่เสียงดังมาก

เกินไป อาจทำให้เป็นอันตรายกับระบบการได้ยินหรือ

แก้วหูได้

คำแนะนำในการติดตั้งโทรทัศน์




ควรติดตั้งและใช้งานโทรทัศน์ ในบริเวณที่มีอากาศถ่ายเทได้สะดวก อย่างน้ำผ้า กระดาษหรือวัตถุใด ๆ มาปิดหรือคลุมที่ตัวโทรทัศน์ เช่น กระดาษหนังสือพิมพ์ ผ้าม่าน ผ้าคลุม เป็นต้น ในการติดตั้งโทรทัศน์ ควรให้มีช่องว่างรอบๆ ตัวโทรทัศน์อย่างน้อยด้านละ 10 ซม.



ไม่ควรติดตั้งและใช้งานโทรทัศน์ ใกล้กับแหล่งกำเนิดความร้อน เช่น เครื่องกระจายความร้อน เตาอบ หรือเครื่องขยายเสียง เป็นต้น อย่างวางโทรทัศน์ ทั้งไว้ให้โดนแสงแดดส่องโดยตรง แนะนำให้ติดตั้งโทรทัศน์ ในบริเวณที่มีแสงสว่างเพียงพอ เพราะการดูโทรทัศน์ในบริเวณที่มีแสงน้อยเกินไป อาจทำให้มีผลกระทบกับการมองเห็นของดวงตาได้ ควรเก็บโทรทัศน์ หรือใช้งานให้ห่างจากบริเวณที่มีสนามแม่เหล็กเข้มข้น เช่น สนามแม่เหล็กจากตู้ลำโพง ซึ่งอาจทำให้จอภาพมีสีเพี้ยนได้

คำแนะนำเรื่องความปลอดภัย




อย่าติดตั้งและใช้งานโทรทัศน์ ในรถยนต์ โต๊ะ ชั้นวางหรือบริเวณใด ๆ ที่ไม่มั่นคงเพราะอาจเป็นสาเหตุทำให้โทรทัศน์ ตกหล่นเสียหายได้ หากจะติดตั้งและใช้งานโทรทัศน์ ในรถยนต์จะต้องติดตั้งให้แข็งแรงแน่นหนา โดยเฉพาะเมื่อติดตั้งโทรทัศน์ โดยใช้ขาตั้ง ต้องระมัดระวังเป็นพิเศษ เมื่อถอดออกตัวหรือเบรคกระทันหัน ซึ่งแรงกระทบกระเทือนดังกล่าวอาจทำให้โทรทัศน์ล้มคว่ำ เสียหายได้



อย่าติดตั้งและใช้งานโทรทัศน์ ใกล้กับแหล่งน้ำ เช่น บริเวณใกล้อ่างอาบน้ำ อ่างน้ำหรือชิงช้าสวรรค์ ห้องซักล้าง ในบริเวณที่พื้นเปียกชื้น หรือรอบๆ สระว่ายน้ำ เป็นต้น



เมื่อย้ายโทรทัศน์ มาจากบริเวณที่มีอากาศเย็น ไปยังบริเวณที่มีอากาศร้อน ไม่ควรเปิดใช้งานโทรทัศน์ในทันที เพราะอาจมีความชื้นเกิดขึ้นภายในโทรทัศน์ แนะนำให้วางโทรทัศน์ ทั้งไว้ระยะเวลานานหนึ่งเพื่อรอให้ความชื้นระเหยออกไปจนหมดก่อน จึงค่อยเปิดโทรทัศน์ ใช้งานต่อไป



เพื่อเป็นการป้องกันความเสียหายที่อาจเกิดขึ้นจากการติดตั้งและใช้งานโทรทัศน์ ไม่ควรตั้งพื้นโดยใช้ขาตั้งหรือแขวนบนผนัง ควรติดตั้งโทรทัศน์ ตามคำแนะนำในคู่มือการติดตั้งโทรทัศน์เสมอ

การทำความสะอาด



ปิดโทรทัศน์ และถอดปลั๊กออกก่อนที่จะทำความสะอาด โทรทัศน์เสมออย่าใช้น้ำยาทำความสะอาดที่เป็นของเหลว หรือสเปรย์มาทำความสะอาด โทรทัศน์แนะนำให้ใช้เพียงผ้าสะอาดชุบน้ำเบญกหมาด ๆ เช็ดทำความสะอาดโทรทัศน์เท่านั้น

สำหรับการป้องกันอันตรายที่ดีที่สุด คือ ควรอ่านคู่มือการใช้งานให้ละเอียด และทำความเข้าใจก่อนที่จะเริ่มต้นติดตั้งและใช้งานโทรทัศน์ และควรเก็บรักษา คู่มือการใช้งานไว้ เพื่อใช้อ้างอิงในอนาคต

Google, Google Play, Android TV, Chromecast built-in และ เครื่องหมายอื่นๆ เป็นเครื่องหมายการค้าของ Google LLC Google Assistant พร้อมโลโก้ บริการบางภาษาและบางประเทศ เท่านั้น

ผู้ช่วย Google ไม่สามารถใช้งานได้ในบางภาษา และประเทศต่าง ๆ ความพร้อมของบริการ ที่แตกต่างกันไปตามประเทศ และภาษา



คำว่า HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress และโลโก้ HDMI เป็นเครื่องหมายการค้าหรือเครื่องหมายการค้าจดทะเบียนของ HDMI Licensing Administrator, Inc.

การติดตั้งโทรทัศน์และการเชื่อมต่อ



อุปกรณ์ภายในกล่อง

1. โทรทัศน์
2. คู่มือการใช้งาน
3. การควบคุมระยะไกล
4. สายไฟ (หรือต่อกับเครื่องทีวี)
5. สายแปลง AV (ตัวเลือก)

การติดตั้งโทรทัศน์

ข้อแนะนำการติดตั้ง

- ควรติดตั้งโทรทัศน์ใกล้กับแหล่งจ่ายไฟ เพื่อให้ง่ายต่อการเสียบและถอดปลั๊ก
- ควรติดตั้งโทรทัศน์ใกล้กับแหล่งจ่ายไฟ เพื่อให้ง่ายต่อการเสียบและถอดปลั๊ก
- เพื่อหลีกเลี่ยงความเสียหายควรวางโทรทัศน์ไว้บนโต๊ะหรือฐานที่แข็งแรง
- ควรให้พนักงานหรือผู้เชี่ยวชาญติดตั้งโทรทัศน์บนผนัง
- ห้ามวางโทรทัศน์ไว้บนวัตถุที่ไวต่อการสั่นสะเทือน
- ห้ามวางโทรทัศน์ในสถานที่ที่แมลงอาจเข้าไปในตัวเครื่องได้
- ห้ามติดตั้งโทรทัศน์ใกล้กับเครื่องปรับอากาศชนิดนั้นแผงหน้าจออาจมีความชื้นและทำให้สีจางเพี้ยนได้
- ไม่ควรติดตั้งโทรทัศน์ใกล้สนามแม่เหล็กเพราะอาจทำให้คลื่นถูกรบกวน

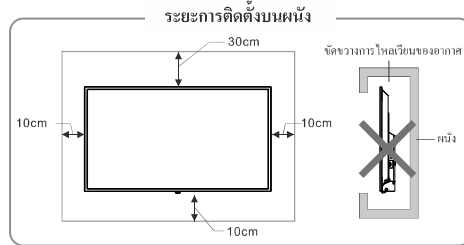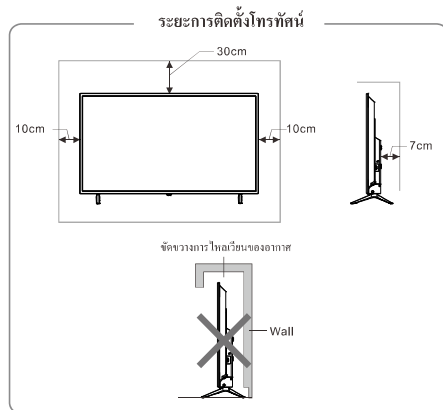

การระบายอากาศ

- ควรเว้นพื้นที่รอบๆ โทรทัศน์เพื่อระบายอากาศแสดงในรูป
- ห้ามปิดช่องระบายอากาศไว้ด้วยใดๆ เข้าไปในโทรทัศน์
- ห้ามวางอุปกรณ์ใกล้กับโทรทัศน์ เช่น ตู้หนังสือ ตู้เสื้อผ้า นอกจากโทรทัศน์ได้รับการระบายอากาศอย่างเหมาะสม

คำเตือน

ห้ามวางโทรทัศน์ไว้ในพื้นที่ที่ไม่มั่นคง เพราะอาจทำให้โทรทัศน์กระแทกกับพื้นหรือเกิดการบาดเจ็บได้โดยเฉพาะกับเด็กซึ่งสามารถหลีกเลี่ยงได้ดังนี้


- การใช้ตู้สำหรับวางโทรทัศน์หรือชั้นวางที่แนะนำโดยผู้ผลิตโทรทัศน์
- ใช้เฟอร์นิเจอร์ที่สามารถรองรับรองโทรทัศน์ได้อย่างปลอดภัย
- ทำการตรวจสอบว่าโทรทัศน์ไม่ยื่นออกมาจากขอบเฟอร์นิเจอร์
- ห้ามวางโทรทัศน์ไว้บนเฟอร์นิเจอร์สูง เช่น ตู้หนังสือ เป็นต้น โดยไม่มีที่ยึดทั้งเฟอร์นิเจอร์และโทรทัศน์
- ห้ามวางโทรทัศน์ไว้ในบนผ้าหรือวัสดุที่อยู่ระหว่างโทรทัศน์และเฟอร์นิเจอร์
- ให้ความรู้แก่เด็กๆ เกี่ยวกับอันตรายของการปีนไปบนเฟอร์นิเจอร์เพื่อเข้าถึงโทรทัศน์

หากโทรทัศน์ของคุณกำลังถูกเก็บไว้เป็นระยะเวลานานและย้ายที่ตั้งใหม่ควรพิจารณาตามทักกล่าวไว้ข้างต้น

การเชื่อมต่อสัญญาณต่างๆ

ข้อสังเกต


1. ช่องเชื่อมต่อ USB รองรับอุปกรณ์ต่อพ่วง รวมถึงอุปกรณ์เก็บข้อมูล USB, เมมส์ USB, แฟ้มพิมพ์ ฯลฯ
2. เมื่อคุณต้องการเชื่อมต่ออุปกรณ์ที่รองรับฟังก์ชัน ARC ให้เลือก HDMI-1
3. ช่องต่อสัญญาณ HDMI สามารถรับฟังก์ชันการเชื่อมต่อ DVI ด้วยสายสัญญาณ HDMI/ DVI จากภายนอก
4. อุปกรณ์ต่อพ่วงและสายเคเบิลที่อธิบายไว้ในคู่มือนี้ควรซื้อแยกต่างหาก
5. ช่องสัญญาณ TV2(DVB-S2) เป็นทางเลือก แนะนำให้ดูคู่มือจริง

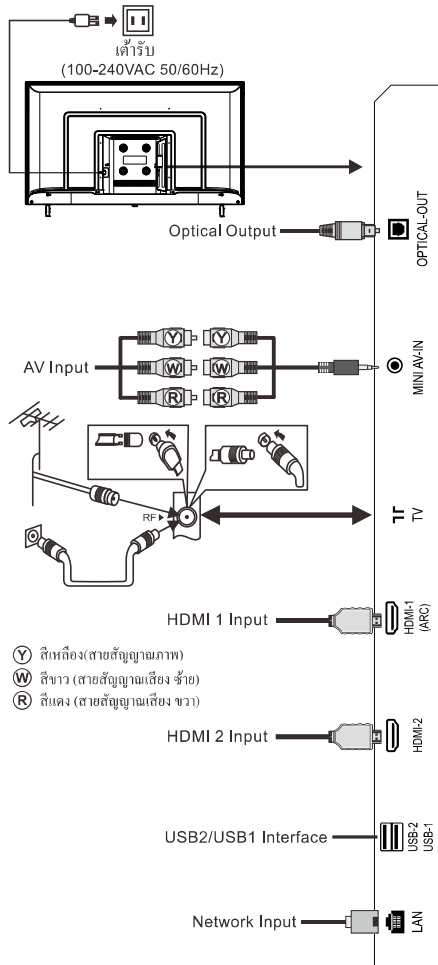

คำเตือน

เมื่อเชื่อมต่อเสาอากาศภายนอกเข้ากับช่องสัญญาณ โทรทัศน์ ให้ถอดปลั๊กโทรทัศน์ก่อนและ ไม่ควรให้เสาอากาศใกล้กับ สายไฟแรงสูงเพื่อหลีกเลี่ยงไฟฟ้าช็อต

ปุ่มโทรทัศน์

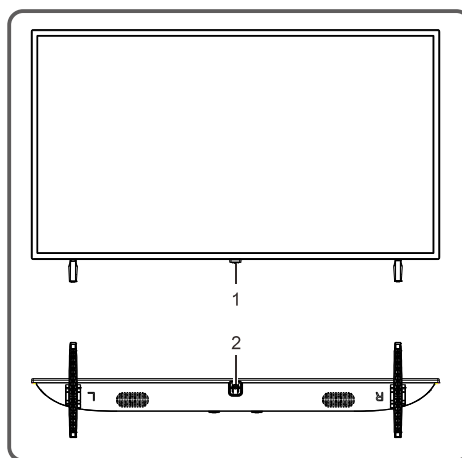

1. ไฟ LED แสดงสถานะและการรับสัญญาณจากรีโมทคอนโทรล
2. Standby: ปุ่ม เปิด / ปิด สแตนด์บาย

ข้อสังเกต:

- ①. ลักษณะที่ปรากฏแตกต่างกันไปตามรุ่น โปรดอ้างอิงจากตัวผลิตภัณฑ์
- ②. ในโหมดสมาร์ทโปรดใช้งานด้วยรีโมทคอนโทรล

รีโมทคอนโทรล

วิธีการติดตั้งแบตเตอรี่ในรีโมทคอนโทรล

ถอดฝาปิดช่องแบตเตอรี่และใส่แบตเตอรี่ AAA (1.5V) 2 ก้อน ตรวจสอบขั้วของแบตเตอรี่เป็นไปตามเครื่องหมายขั้ว “+” และ “-” ในช่องใส่แบตเตอรี่ของรีโมทคอนโทรล

ข้อควรระวังในการใช้งานรีโมทคอนโทรล

- ควรยื่นรีโมทคอนโทรลไปที่เซ็นเซอร์บนหน้าจอโทรทัศน์ ในระหว่างการใช้งาน ไม่ควรมีวัตถุที่วางไว้ระหว่างรีโมทคอนโทรลกับเซ็นเซอร์ เพราะอาจขัดขวางการทำงานของระบบ
- ไม่ควรให้มีการตกหรือกระแทกบ่อยๆ นอกจากนี้โปรดอย่าให้รีโมทคอนโทรลโดนแสงแดดโดยตรง เนื่องจากอาจส่งผลให้รีโมทคอนโทรลเสียรูป
- รีโมทคอนโทรลอาจใช้งานไม่ได้ เมื่อตัวเซ็นเซอร์ได้รับแสงแดดโดยตรง ควรเปลี่ยนมุมโทรทัศน์หรือใช้งานรีโมทคอนโทรลใกล้กับตัวเซ็นเซอร์
- แบตเตอรี่เหลือน้อยจะมีผลต่อควบคุม ซึ่งในกรณีนี้แนะนำให้เปลี่ยนแบตเตอรี่ใหม่ หากไม่ได้ใช้งานรีโมทคอนโทรลเป็นเวลานาน ควรถอดแบตเตอรี่ออก
- อย่าใช้แบตเตอรี่ต่างประเภท ไม่ควรใช้แบตเตอรี่เก่าและใหม่ด้วยกัน ควรเปลี่ยนแบตเตอรี่เป็นคู่
- อย่าทิ้งแบตเตอรี่ลงในกองไฟ กรุณากำจัดแบตเตอรี่ตามกฎระเบียบที่เกี่ยวข้องเกี่ยวกับการควบคุมสิ่งแวดล้อม

คู่มือการใช้งานรีโมทคอนโทรลด้วยเสียงบลูทูธ

หากไม่ได้จับคู่บลูทูธของรีโมทคอนโทรล ให้กดปุ่ม Google Assistant แล้วกดปุ่ม

การจับคู่บลูทูธ

หากไม่ได้จับคู่บลูทูธของรีโมทคอนโทรล ให้กดปุ่ม Google Assistant แล้วกดปุ่ม

[VOL-] + [←] เมื่อทีวีแสดงอุปกรณ์ให้เลือกและกดปุ่ม [OK] เพื่อสิ้นสุด

หมายเหตุ:

1. บางรุ่นอาจไม่รองรับ
2. ตำแหน่งของคุณต้องสอดคล้องกับภาษาสำหรับผลการค้นหาที่แน่นอน ฟังก์ชันบางอย่างอาจไม่สามารถใช้ได้หากการตั้งค่าตำแหน่งและการตั้งค่าภาษาของคุณแตกต่างกัน

3. คุณสามารถเปลี่ยนภาษาตามการตั้งค่าการป้อนภาษา ภาษาที่ใช้ได้สำหรับคุณสมบัติการจดจำเสียงอาจเปลี่ยนแปลงได้ตามนโยบายการให้บริการ

4. รายละเอียดของบริการอาจแตกต่างกันไปตามรุ่น

5. ก่อนที่คุณจะใช้การจดจำเสียง ควรตรวจสอบให้แน่ใจว่าได้จับคู่รีโมทคอนโทรลแล้ว



ปุ่มรีโมทคอนโทรล

หมายเหตุ: ลักษณะของรีโมทคอนโทรลอาจแตกต่างจากรูปนี้
โปรดอ้างอิงจากอุปกรณ์จริง

ปุ่ม	ฟังก์ชันการใช้งาน
Power (***)	เปิด / ปิด เครื่อง
Mute (🔇)	เปิด / ปิด เสียง
Number keys	ปุ่มหมายเลขหรือช่อง
🕒	แสดงแถบข้อมูล
↺	กลับไปยังรายการก่อนหน้านี้
NETFLIX	เปิด แอปพลิเคชัน Netflix
YouTube	เปิด แอปพลิเคชัน Youtube
prime video	เปิด แอปพลิเคชัน Prime video
Google Play	เปิด แอปพลิเคชัน Google
📌	ที่บ้าน แสวงหาจัดการ ที่อยู่ของสิ่ง ที่เกิดขึ้น และวิดีโอ
	เปิดการจับคู่รีโมทลู่วิ่งหรือกดปุ่ม Google Assistant เพื่อควบคุมทีวีด้วยเสียง(Google Assistant ไม่มีให้บริการในบางภาษาและบางประเทศ ความพร้อมให้บริการแตกต่างกันไปในแต่ละประเทศและภาษา)
Setup (⚙️)	เปิดหน้าตั้งค่าเมนู
◀▶▶▶▶	เลือกรายการและปรับค่าต่างๆ
OK	ในโหมดทีวี เปิดรายการช่อง ในการทำงานของเมนู OSD ยืนยันการทำงาน
Back (←)	กลับไปทีมนูก่อนหน้า
Home (🏠)	แสดงหน้าแรก
📺	คู่มือโปรแกรมอิเล็กทรอนิกส์
VOL+/-	เพิ่ม/ลดระดับเสียง
Source (📶)	แสดงเมนูแหล่งสัญญาณ
Menu (☰)	แสดงเมนู OSD (โหมดไม่จลล)
CH+/- (⏮⏭)	เปลี่ยนช่องรายการ
R	ปุ่มฟังก์ชันพิเศษ
G	
Y	
B	
MTS	ATV: เลือกโหมด NICAM; DTV: เลือกภาษาของเสียง
SUBTITLE	เปิดเมนูภาษาคำบรรยาย
AD	เปิดบันทึกเสียงที่เกี่ยวข้อง
Record (●)	เริ่มบันทึกโปรแกรมปัจจุบัน
▶ (play)	เล่น
II	ปุ่มปรับเวลา (หยุดชั่วคราว)
■	หยุด

การใช้งานเบื้องต้น

ข้อสังเกต:

- การใช้งานปุ่มกดบนโทรทัศน์ สามารถดูได้ที่คำอธิบายโทรทัศน์
- ปุ่ม[▶] หมายถึงปุ่มทิศทาง และปุ่ม[▶](play) หมายถึงปุ่มฟังก์ชันเล่น
- คำแนะนำการใช้งานเมนูในคู่มือนี้ อธิบายตามโหมดโทรทัศน์และการทำงานในโหมดอื่นๆ
- ก่อนเปิดเครื่องกรุณาตรวจสอบแหล่งจ่ายไฟ
- ซอฟต์แวร์ของประเทศต่างๆ แตกต่างกันการทำงานของซอฟต์แวร์เฉพาะควรขึ้นอยู่กับสถานการณ์ที่เกิดขึ้น
- เนื่องจากผลิตภัณฑ์มีการอัปเดตอย่างต่อเนื่อง ซอฟต์แวร์จึงได้รับการอัปเดตเมื่อใดก็ได้ หากการทำงานของซอฟต์แวร์แตกต่างจากการทำงานจริง โปรดดูผลิตภัณฑ์จริง

เปิดเครื่อง / สแตนด์บาย

เสียบสายไฟเข้ากับเต้ารับไฟฟ้า แล้วกดปุ่ม[POWER] เพื่อเปิดทีวี เมื่อเปิดทีวีเป็นครั้งแรก อินเทอร์เน็ตการตั้งค่า จะปรากฏขึ้น โปรดตั้งค่าตามต้องการเมื่อเปิดเครื่อง กดปุ่ม[POWER] เพื่อเปลี่ยนเป็นโหมดสแตนด์บาย

การเลือกแหล่งสัญญาณ

คุณสามารถเชื่อมต่ออุปกรณ์ต่างๆ กับโทรทัศน์หากมีสายสัญญาณภาพ HDMI ,composite และอื่นๆ คุณสามารถเชื่อมต่อกับช่องสัญญาณที่สอดคล้องกันของโทรทัศน์ หลังจากเชื่อมต่อแล้วให้เปิดอุปกรณ์และกดปุ่ม[📶] จากนั้นเมนูของแหล่งสัญญาณจะปรากฏหน้าจอ กดปุ่ม[▲]/[▼] เพื่อเลือกสัญญาณเข้าและกดปุ่ม[OK]เพื่อยืนยัน

การใช้งานหน้าเมนู

กดปุ่ม[☰] เพื่อแสดงเมนูหลักบนหน้าจอ:

- กดปุ่ม[▲]/[▼]เพื่อเลือกเมนูจาก ช่อง, ตัวเลือกทีวีม บันทึก
- กดปุ่ม[◀]/[▶]เพื่อเลือกรายการในเมนู
- กดปุ่ม[OK] เพื่อเลือกรายการในเมนู
- กดปุ่ม[▲]/[▼]เพื่อเลือกการรายการในเมนู

๕. เมื่อเมนูหลักปรากฏบนหน้าจอ ให้กดปุ่ม[≡] เพื่อดูจากเมนู กดปุ่ม[←] เพื่อกลับไปยังเมนูก่อนหน้าเมื่อทีวีแสดงเมนูย่อย
๖. ระหว่างการใช้งาน ไอคอนของตัวเลือกที่ไม่ถูกต้องจะเป็นสีเทา

การค้นหาช่องรายการ

ปรับการตั้งค่าค้นหาก่อนรับชมรายการสำหรับครั้งแรก
ก่อนที่จะสแกนโปรดตรวจสอบให้แน่ใจว่าเชื่อมต่อเสาอากาศถูกต้อง

เสาอากาศ

กดปุ่ม[≡] และเลือกเสาอากาศ กดปุ่ม[≡] และกดปุ่ม[▲]/[▼]/[◀]/[▶] เพื่อเลือกช่อง>ช่องสัญญาณ จากนั้นกดปุ่ม[OK] เพื่อเข้าสู่

- เลือกการสแกนช่อง> จากนั้นกดปุ่ม[OK] เพื่อเริ่มการสแกนอัตโนมัติ
- เลือกการสแกน Single RF จากนั้นกดปุ่ม[◀]/[▶] เพื่อเลือกช่องรายการ จากนั้นกดปุ่ม[OK] เพื่อเริ่ม

เคเบิล

กดปุ่ม[≡] และเลือกเคเบิล กดปุ่ม[≡] และกดปุ่ม[▲]/[▼]/[◀]/[▶] เพื่อเลือก ช่องรายการ> ช่องรายการ จากนั้น[OK] เพื่อเข้าสู่ระบบ

- เลือก การสแกนช่อง>อื่นๆ จากนั้นกดปุ่ม[OK]
ตั้งค่า ความถี่(KHz), เนตเวิร์ค ID, โหมดสแกน และเลือก สแกน จากนั้นกด [OK] เพื่อสแกน
- เลือกสแกน Single RF จากนั้นกดปุ่ม [OK]
ตั้งค่า ความถี่(KHz), และเลือก สแกน จากนั้นกด[OK] เพื่อสแกน

ATV

(หมายเหตุ: ฟังก์ชันนี้เป็นทางเลือก โปรดดูผลิตภัณฑ์จริง)

กดปุ่ม[≡] และเลือก ATV กดปุ่ม เพื่อเลือกช่อง>ช่อง จากนั้นกดปุ่ม เพื่อเข้าสู่

- เลือก การสแกนช่อง> จากนั้นกดปุ่ม[OK] เพื่อเริ่มสแกนอัตโนมัติ
- เลือกสแกน Analog ด้วยตนเอง และตั้งค่า ความถี่(KHz) และเลือก สแกนขึ้น หรือ สแกนลง จากนั้นกด[OK] เพื่อสแกน

การบันทึกช่องรายการ

ในโหมด DTV, กดปุ่ม[●] จากนั้นระบบจะทำการบันทึก

กดปุ่ม[■] เพื่อหยุดและออกการบันทึก

กดปุ่ม [≡] เลือกและเลือก รายการบันทึก จากนั้นคุณ

สามารถเลือกไฟล์ที่คุณต้องการเล่นและกดปุ่ม[OK]

เพื่อเล่น

เมื่อทำการเล่นคลอสามารถกดปุ่ม[←]เพื่อออก จากการเล่นหรือกดปุ่ม [▶](play)/[II]/[■]/[OK] เพื่อหยุดเล่นชั่วคราว

หมายเหตุ: ฟังก์ชันการบันทึกสามารถรองรับระบบไฟล์ FAT32 เท่านั้นระบบไฟล์อื่น จำเป็นต้องทำการฟอร์แมต ก่อนฟอร์ม

คำแนะนำการตั้งค่าอย่างรวดเร็ว

การใช้งานเบื้องต้น

กดปุ่ม[▲] เพื่อแสดงหน้าแรก

1. กดปุ่ม[◀]/[▶] เพื่อเลือกแอปพลิเคชัน
2. กดปุ่ม[OK] เพื่อเล่นแอปพลิเคชัน
3. กดปุ่ม[←] เพื่อกลับไปรายการก่อนหน้านี้
4. กดปุ่ม[▲] ค้างเพื่อเปิดทุกแอปพลิเคชัน

วิธีเข้า Quick Start

ก่อนใช้อุปกรณ์นี้ โปรดทำความเข้าใจกับการดำเนินการด้านล่าง เพื่อประสิทธิภาพที่ดียิ่งขึ้น

การตั้งค่าภาษา

ภาษา: ในโหมดสมาร์ทเลือกกระบวนภาษา.

กดปุ่ม[⚙] และเลือก กำหนดค่าอุปกรณ์ > ภาษา และกดปุ่ม [OK]กดปุ่ม [▲]/[▼] เพื่อเลือกภาษาที่ต้องการ จากนั้น กดปุ่ม [OK]

การเลือกวิธีการป้อนข้อมูล:

ในโหมดสมาร์ท

กดปุ่ม[⚙] และเลือก กำหนดค่าอุปกรณ์ > เป็นพิมพ์ > เป็นพิมพ์ปัจจุบัน และกดปุ่ม [▲]/[▼] เพื่อเลือก

กดปุ่ม[⚙] และเลือก กำหนดค่าอุปกรณ์> วันที่ & Time >

ตั้งแต่วันที่ & เวลา จากนั้นเลือก ใช้เวลาที่เครือข่ายเลือกให้

คุณสามารถตั้งค่าระบบเวลาดด้วยตนเอง

แอปพลิเคชัน

แอป: ช่วยให้ผู้ใช้จัดการแอปพลิเคชัน และอนุญาตให้ผู้ใช้ติดตั้งหรือถอนการติดตั้งแอปในคิสก์ภายในเครื่อง

กดปุ่ม[▲] จากนั้นกดปุ่ม[◀]/[▶] เพื่อเลือกแอปพลิเคชัน และกดปุ่ม[OK] เพื่อเข้าสู่ระบบ

■ วิธีติดตั้งแอปพลิเคชัน?

กดปุ่มค้าง[▲] และเลือก แอปเพิ่มเติม จากนั้นกด [OK] เพื่อเลือก ค้นหาแอปที่คุณต้องการติดตั้ง

■ วิธีถอนการติดตั้งแอปพลิเคชัน?

กดปุ่มค้าง[▲] และเลือก แอป ที่ต้องการถอนการติดตั้ง

กดปุ่ม[OK] ค้างและเลือกถอนการติดตั้ง

มัลติมีเดีย: เปิดแอปมัลติมีเดีย และกดปุ่ม[OK] เพื่อเข้าและเลือก

วิดีโอ รูปภาพ เพลง และ ข้อความ

■ เล่นไฟล์ในอุปกรณ์คิสก์ในเครื่อง

ก่อนเล่นไฟล์ในเครื่อง, ต้องทำการเสียบ USB

ด้านหลังเครื่องก่อน

เปิด แอป มัลติมีเดีย และจากนั้นกดปุ่ม[OK] เพื่อเข้าเลือก

โฟลเดอร์หรือไฟล์ กดปุ่ม [OK] เพื่อเข้าโฟลเดอร์ที่ต้องการเล่น

และกดปุ่ม[←] เพื่อกลับไปยังรายการก่อนหน้านี้

คำแนะนำ:

1. ไม่ควรใช้ USB ที่ไม่ได้มาตรฐาน
2. ระบบมัลติมีเดียอาจมีข้อจำกัดในรูปแบบไฟล์
3. ไม่ควรถอดอุปกรณ์ USB ขณะกำลังเล่นมีจะนั้นระบบหรืออุปกรณ์ อาจมีปัญหาตอนที่เปลี่ยนอุปกรณ์ USB โปรดปิดแหล่งจ่ายไฟของเครื่อง
4. ระบบรองรับมาตรฐาน USB 1.1 และอุปกรณ์ USB2.0
5. กระแสไฟของช่อง USB คือ 500ma
6. ขณะกำลังอ่านหรือเล่นไฟล์ หากหน้าจอเกิดค้างหรือบางฟังก์ชันเข้าใช้งาน ไม่ได้ให้ปิดเครื่องแล้วเปิดเครื่องใหม่อีกครั้ง

กดปุ่ม[≡] เพื่อแสดงแถบหน้าจอ ขณะที่กำลังเล่น เลือกตัวเลือกเมนูที่คุณต้องการ และกดปุ่ม[OK] เพื่อดำเนินการ คุณสามารถกดปุ่ม[←] เพื่อออกจากการเล่น หรือกดปุ่ม [▶]/[play]/[III]/[■]/[OK] บนรีโมทคอนโทรล เพื่อดำเนินการ

ตั้งค่าเครือข่าย

Wi-Fi

1. ในโหมดสมาร์ท เลือก ตั้งค่า>เครือข่าย>อีเทอร์เน็ต> Wi-Fi และกดปุ่มกดปุ่ม [▲]/[▼] เพื่อเลือก OK และกดปุ่ม[OK] จากนั้นสัญญาณเครือข่ายไร้สาย จะค้นหาโดยอัตโนมัติเครือข่าย ค้นหาโดยไม่มีไอคอน ❶ ระบุเครื่องจะเชื่อมต่อกับเครือข่าย โดยไม่ต้องใช้รหัสผ่าน เครือข่ายพร้อมไอคอนระบุมันถูกเข้ารหัส ❷ และคุณต้องป้อนรหัสผ่านที่ถูกต้องเพื่อเชื่อมต่อเครือข่าย
2. เลือกเครือข่ายที่คุณต้องการเชื่อมต่อในรายการเครือข่าย และกดปุ่ม [OK]
3. พิมพ์รหัสผ่านการเชื่อมต่อเครือข่ายในกล่องข้อความและออกจากแป้นพิมพ์พิมพ์จากนั้นเลือก ✓เชื่อมต่อและกดปุ่ม[OK] เพื่อเชื่อมต่อกับเครือข่าย

Ethernet

1. เลือก ตั้งค่า > เครือข่าย & อีเทอร์เน็ต > อีเทอร์เน็ต
2. เลือก ตั้งค่า Proxy และ ตั้งค่า IP จากนั้นกดปุ่ม[OK] เพื่อเชื่อมต่ออีเทอร์เน็ต

Wow/Wol

ช่วยให้ควบคุมโทรทัศน์จากระยะไกล(พร้อมใช้งานเมื่อเชื่อมต่อ

เครือข่าย)

เลือก ตั้งค่า > เครือข่าย & อีเทอร์เน็ต > Wol / Wow และกดปุ่ม[OK] เพื่อเข้าสู่รายการ กดปุ่ม[OK] เพื่อตั้งค่าเปิด หรือ ปิด และกดปุ่ม[OK] เพื่อยืนยัน

การตั้งค่าบลูทูธ

ในโหมดสมาร์ท เลือก ตั้งค่า > รีโมท & อุปกรณ์ และกด [OK]

เพื่อเข้าสู่รายการจากนั้นเลือกอุปกรณ์ ที่คุณต้องการเชื่อมต่อ

หมายเหตุ: เลือก ตั้งค่า > การตั้งค่าอุปกรณ์ > เกี่ยวกับ > ชื่ออุปกรณ์ และ

ตรวจสอบชื่อโทรทัศน์

สนับสนุนโดย

Android TV™

Android TV ให้ระบบอัจฉริยะและง่ายกว่าในการใช้ประโยชน์จากทีวีของคุณมากขึ้น

Google Assistant

ใช้เสียงของคุณเพื่อค้นหารายการ อุปกรณ์ควบคุม และอื่นๆ - เพียงแค่ถาม Google

Google Play

Google play แอปและเกมที่คุณโปรดปรานมาสู่ทีวี ดู เล่น และทำทุกสิ่งที่คุณต้องการ ทุกเวลาที่คุณต้องการ

Chromecast built-in™

ส่งภาพยนตร์ เพลง และอื่นๆ ที่คุณชื่นชอบไปยังทีวีได้อย่างง่ายดาย ด้วย Chromecast ในตัว

การแก้ไขเบื้องต้น

■ มีจุดขาวเกิดขึ้นในหน้าจอโทรทัศน์และมีเสียงรบกวน

1. ตรวจสอบการต่อสายอากาศหรือสายเคเบิลอีกครั้ง
2. ตรวจสอบสายอากาศ (VHF/UHF)
3. ปรับทิศทางและตำแหน่งสายอากาศ
4. ลองใช้ตัวเพิ่มสัญญาณ

■ ไม่มีการแสดงภาพหรือเสียงบนหน้าจอหรือไฟแสดงสถานะไฟติด

ตรวจสอบว่าสายไฟเชื่อมต่ออยู่หรือไม่

■ มีแถบเส้นขึ้นในหน้าจอโทรทัศน์

อย่าใช้อุปกรณ์ไฟฟ้าข้างโทรทัศน์และปรับทิศทางเสาอากาศเพื่อลดสัญญาณรบกวน

■ ภาพซ้อนเกิดขึ้นบนหน้าจอทีวี

1. ใช้เสาอากาศที่รับสัญญาณได้ดี
2. ปรับทิศทางของเสาอากาศ

■ ภาพไม่มีสี

กดปุ่ม[≡] และเลือก รูปภาพ > ความอิ่มตัวของสี เพื่อเพิ่มระดับสี

■ โทรทัศน์ไม่มีเสียง

1. ปรับระดับเสียงให้อยู่ในระดับที่เหมาะสม
2. กดปุ่ม[⏏] บนรีโมทคอนโทรลเพื่อยกเลิกโหมดปิดเสียง

■ ไม่มีภาพสัญญาณเข้าที่หน้าจอเครื่อง ไฟแสดงสถานะกะพริบ

1. ตรวจสอบสายสัญญาณว่าเชื่อมต่ออยู่หรือไม่
2. เครื่องอาจอยู่ในโหมดสแตนด์บายด์ กรุณารีบูต

■ ระยะรีโมทคอนโทรลสั้นเกินไป

1. นำวัตถุออกจากระยะการใช้งานรีโมทคอนโทรล
2. เปลี่ยนแบตเตอรี่

■ บราวเซอร์ไม่สามารถเข้าถึงได้

1. ขอให้ผู้ดูแลระบบเครือข่ายเปิดรับที่อยู่ IP และค่าอื่นๆ
2. ตรวจสอบว่าสายเคเบิลเชื่อมต่อเป็นปกติหรือไม่
3. ปรึกษาผู้ให้บริการเครือข่าย

■ การเล่นเกมออนไลน์ช้ามาก


1. โปรดอัปเดตแบนด์วิดท์เครือข่ายของคุณให้สูงขึ้น
2. โปรดลองเปลี่ยนเครือข่ายที่ดีกว่า

■ เครื่องทำงานช้า ระบบขัดข้องไม่สามารถใช้งานได้

ตัดการเชื่อมต่อแหล่งจ่ายไฟก่อนและเชื่อมต่อหลังจากนั้นประมาณ 1-2 นาที ให้เปิดโทรทัศน์อีกครั้ง

คำแนะนำในการติดตั้งขาโทรทัศน์

อันดับแรกให้วางเครื่องในแนวราบ แล้วตรวจสอบขาตั้งด้านหลังซ้าย-ขวา และตำแหน่งการวางให้ถูกต้อง จากนั้นติดตั้งขาที่ด้านล่างของเครื่อง ตามทิศทางของลูกศรในรูป จากนั้นขันสกรู

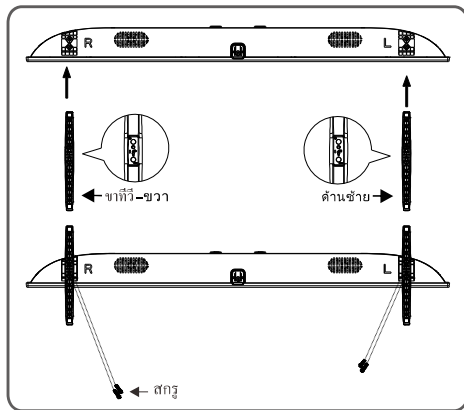



หมายเหตุ: ลักษณะของขาตั้งโทรทัศน์อาจแตกต่างจากรูป
โปรดอ้างอิงจากอุปกรณ์จริง

การใช้ขาแขวนสำหรับโทรทัศน์



ข้อควรระวัง

- เมื่อติดตั้งโทรทัศน์บนผนัง โปรดเลือกตัวยึดติดผนังโทรทัศน์ที่เหมาะสม
- ตรวจสอบให้แน่ใจว่าความสามารถในการรับน้ำหนักของผนังสำหรับการติดตั้งนั้น ไม่น้อยกว่า 4 เท่าของน้ำหนักของชุดโทรทัศน์และตัวยึดติดผนังเพื่อหลีกเลี่ยงการตกกระแทก
- โปรดอ้างอิงคำแนะนำที่มาพร้อมกับโทรทัศน์และการติดตั้งบนผนัง
- ตรวจสอบให้แน่ใจว่าไม่มีสายเคเบิลหรือท่อร้อยสายในผนัง
- ควรให้ช่างเทคนิคทำการติดตั้ง บริษัทจะไม่รับผิดชอบต่ออุบัติเหตุในระหว่าง
- ที่เกิดขึ้นหรือความเสียหายที่เกิดจากการติดตั้งโทรทัศน์ที่ไม่เหมาะสม

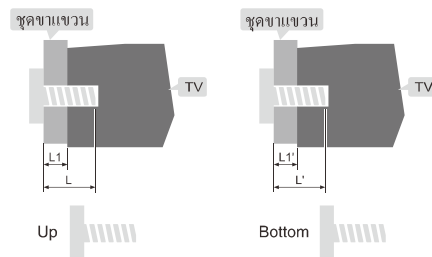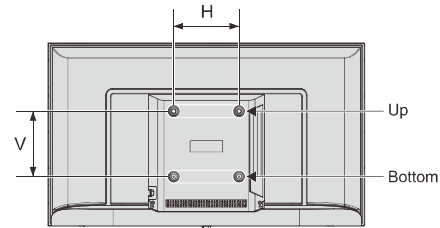

L1: ความหนาตัวยึดผนัง

L1': ความหนาตัวยึดผนัง

ระยะห่างระหว่างรูยึดบนผนัง (แนวนอน x แนวตั้ง มม.)	สกรูที่ต้องใช้ในการติดตั้ง (แนะนำความยาวของสกรู มม.)
42": 100 x 100	Up: 2 x M4 ($L=8+L1$), สกรูเครื่อง Bottom: 2 x ST4 ($L'=8+L1'$), สกรูยึดหัวปลีแบบทางเบน

หมายเหตุ:

- หากพบสกรูสำหรับยึดผนังทางด้านหลังโทรทัศน์ก่อนที่จะติดตั้ง จะต้องถอดสกรูออกก่อน
- ควรเลือกซื้อสกรูที่ถูกต้องและเหมาะสมกับการใช้งาน
- หากมีสกรูที่มาพร้อมกับขาแขวน ควรตรวจสอบว่าสามารถติดตั้งกับชุดโทรทัศน์ได้หรือไม่

Contents

Important Safety Instructions and Maintenance	1
Mounting and Connecting	3
Packing list	3
Mounting the TV set	3
Connecting peripheral equipment	4
Panel Control Keys	4
Remote Control	5
Basic Operations	6
Turning on/Standby	6
Signal source selection	6
Menu operation description	6
Channel scanning	7
REC option	7
Time Shift option	7
Instructions for quick start	7
Basic Operations	7
Quick Start	7
Smart Applications	8
Network Settings	8
Bluetooth Setting	8
Recommendations	9
Troubleshooting	9
Base Installation Instructions	10
Use of a TV wall mounting	10

Important Safety Instructions and Maintenance

Important Safety Instructions

CAUTION

Risk of electronic shock, do not open. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



If the following problems occur:

- Turn off the TV set and unplug the AC power cord immediately if any of the following problems occur. Ask your dealer or service centre to have it checked by qualified service personnel
- When:
 - AC power cord is damaged.
 - Poor fitting of AC power outlet.
 - TV set is damaged by being dropped, hit or having something thrown at it.
 - Any liquid or solid object falls through openings in the cabinet.



To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



The screen and cabinet get warm when the TV is in use. This is not a malfunction. In case of smoke, strange noise or strange smell from the unit:



- Turn off the power switch immediately;
- Disconnect the power plug from the power outlet;
- Contact your dealer or service centre. Never attempt to make repairs yourself because this could be dangerous.

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the set. Use special caution in households where children are present. The apparatus is not suitable for children under 3-year to operate.



Do not overload wall outlets, extension cords or adaptors beyond their capacity, this can result in fire or electrical shock. Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plug end, adaptors and the point where they exit from the appliance. The mains plug is used as the disconnect device. It shall remain readily accessible and should not be obstructed during intended use. Make sure to plug the power cord in until it is firmly inserted. When removing the power cord, make sure to hold the power plug when pulling the plug from the outlet, do not pull the plug out by the wire. NEVER touch the plug or power cord with wet hands. To disconnect the apparatus from the mains power, the plug must be pulled out from the mains socket, therefore make sure the mains plug is always easily accessible.



An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. Ensuring the television is not overhanging the edge of the supporting furniture.

When not in use

If you will not be using the TV set for several days, the TV set should be disconnected from the AC mains for environmental and safety reasons. As the TV set is not disconnected from the AC power when the TV is turned off at the standby switch, pull the plug from the AC power outlet to disconnect the TV completely. However, some TV sets may have features that require the TV set to be left in standby to function correctly. In the case of lightning, unplug the TV set from the outlet immediately. Never touch the antenna wire during lightning.



Do not pull the plug out by the wire; Never touch the plug with wet hands.



Excessive volume from earphones and headphones can cause hearing loss.

Installation



The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, tablecloths, curtains, etc. At least 10 cm space should be left around the apparatus for sufficient ventilation.



The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Place the apparatus in such a position that the screen is not exposed to direct sunlight. It is best to have soft indirect lighting while watching and avoid completely dark environments and reflection from the screen as these may cause eye fatigue. Keep the TV set away from any equipment emitting electromagnetic radiation.

Installation



Do not place the set on an unstable cart, stand, table or shelf. The set may fall, causing serious personal injury as well as damage to the product. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. An appliance and cart combinations should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Do not place this apparatus near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or a swimming pool; and the like;



When the TV being moved in from cold place, it needs some right time for dew inside unit evaporating fully before turn on the unit;



To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Cleaning



Cleaning and handling the screen surface and cabinet. Disconnect the unit from the AC outlet before cleaning. To remove dust, wipe gently with a soft, lint free cloth. If required use a slightly damp cloth.

Google, Google Play, YouTube and Android TV are trademarks of Google LLC. Google Assistant is not available in all languages and countries.

Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Mounting and Connecting



Packing list

1. The TV set.
2. User Manual.
3. Remote control.
4. Power cord (or attached to TV set).
5. AV transfer cable (option).

Mounting the TV set

Tips on Installation

- The TV set should be mounted near the AC power socket for easy plugging and unplugging.
- For your safety, please select appropriate wall mount bracket or base.
- To avoid hurt, it is required to place the TV set on stable plane, or fix on firm wall.
- Ask qualified personnel to mount the TV set on the wall. Improper mounting may result in instable TV set.
- Do not place the TV set at any place susceptible to mechanical vibration.
- Do not place the TV set at any place that insects may enter.
- Do not mount the TV set against air conditioner, or else the internal panel of the display may condense moisture and cause failure.
- Do not place the TV set at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave.

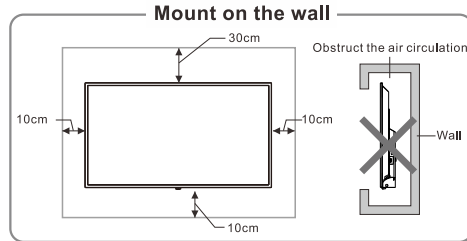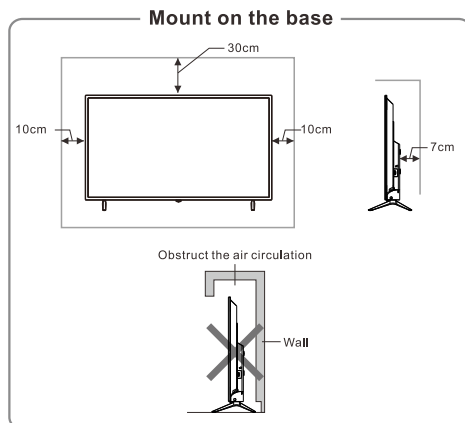

Ventilation

- Please keep this space at least around the TV, as shown in the figure.
- Do not cover the air vents or insert any object into the enclosure.
- Do not put the device in limited space, e.g. bookcase or embedded closet, unless the TV set is properly ventilated.



Warning

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:


- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Connecting peripheral equipment

Remark:


1. USB interfaces support peripheral equipment, including USB mass storage device, USB mouse, keyboard, etc.
2. When you need to connect the device which support the ARC function, please select the HDMI-1 interface.
3. HDMI connector can realize DVI connector function with external HDMI/DVI commutator.
4. The peripheral equipment and cables described in this manual should be purchased separately.

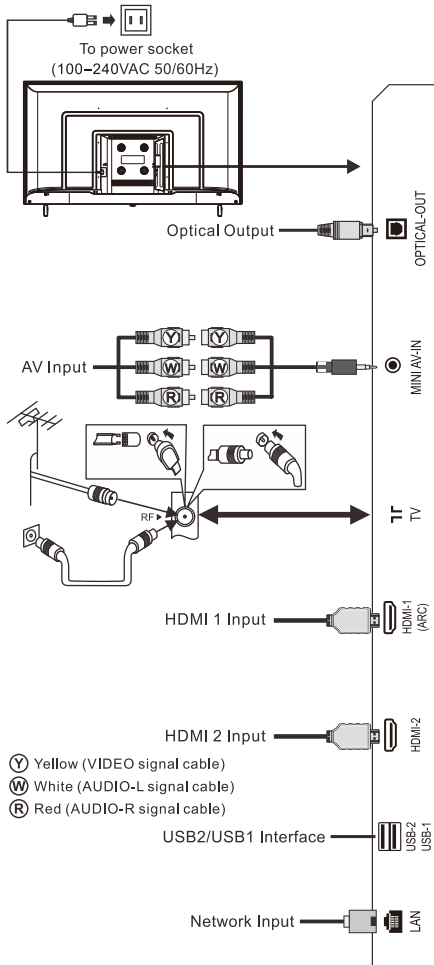

Warning

When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

Panel Control Keys

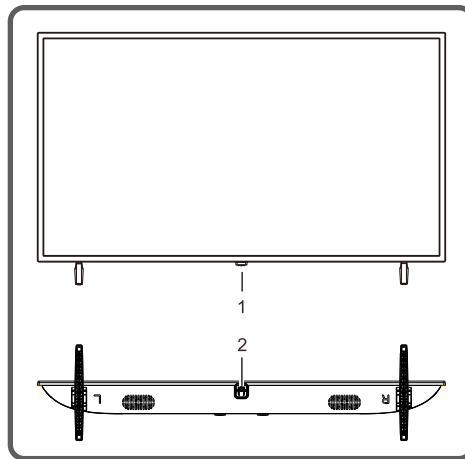

1. Power LED indicator and remote receiving window.
2. Standby: To switch the TV on or back to standby.

Remark:

- ①. The appearance varies depending on the model, and the actual product shall prevail.
- ②. Please use the remote control for more operation.

Remote Control

Method for Installation of Remote Control Battery

Remove the battery compartment cover and insert two AAA (No. 7, 1.5V) batteries; make sure the polarity of the batteries is in compliance with the polarity mark "+" and "-" in the battery compartment of the remote control.

Precautions for using the remote control

- The remote control should be pointed at the remote control sensor during operation. An object placed between the remote control and the remote control sensor may impede normal operation.
- The remote control should be prevented from strenuous vibration. Besides, please do not set or place the remote control under direct sunshine, as heating power may result in deformation of the remote control.
- Remote control failure may occur when the remote control sensor of the main unit is under direct sunshine or strong lighting; in this case, please change the angle of lighting or this TV set, or operate the remote control near the remote control sensor.
- Low battery will influence the remote control distance, in which case, the battery should be replaced with a new one. If the remote control is going to be idle for a long time or the battery runs out, please take the battery out to prevent the remote control from being corroded by battery leakage which may result in damage and failure of the remote control.
- Please do not use batteries of different types. It is not allowed to use old and new batteries together; the batteries should be replaced in pair.
- Please do not throw the batteries into fire or charge or decompose the batteries; do not charge, short-circuit, disassemble/assemble, heat or burn used batteries. Please dispose the waste batteries pursuant to relevant regulations on environmental protection.

Bluetooth voice remote control operation manual

Bluetooth Pairing

If the Bluetooth of remote control is not paired, press the Google Assistant key, then long press [VOL-] + [←] keys to pair. When the TV show the device, select it and press [OK] key to finish.

Note:

1. Some models may not be supported.
2. Your Location must correspond to the language for exact search results. Some functions may not

be available if your location settings and language settings are different.

3. You can change the language according to language input settings. The languages available for voice recognition features may be changed in accordance with service operation policy.
4. Details of service may vary by model.
5. Before you use voice recognition, you should make sure remote control paired.



Keys of the Remote Control

Note: The appearance of the remote control may be different from this diagram; please refer to the real object as standard.

Keys	Function
Power (●●●)	Switch between working and standby status.
Mute (🔇)	Turn on/off the sound.
Number keys	Select the channel or input numbers.
ℹ	Show information bar.
↺	Return to the previous channel
NETFLIX	Open application.
YouTube	Open application.
prime video	Open application.
Google Play	Open application.
📌	On the smart home page, manage the location of apps and videos.
🗣	Turn on Bluetooth remote control pairing or press the Google Assistant key to control your TV with your voice. (Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.)
Setup (⚙)	Open setting menu.
◀, ▶, ▲, ▼	Select items or adjust values.
OK	In TV mode, open channel list. In OSD menu operation, confirm the operation.
Back (←)	Return to previous menu interface.
Home (🏠)	Show home page.
📺	Electronic program guide.
VOL+/-	Turn up/down the volume.
Source (📡)	Show signal source menu.
Menu (☰)	Show OSD menu. (Non-smart mode.)
CH+/- (⤴⤵)	Change channel.
R	Special function keys.
G	
Y	
B	
MTS	ATV: select NICAM mode; DTV: select audio language.
SUBTITLE	Open subtitle language menu.
AD	Open the associated audio menu.
Record (●)	Start to record current program.
▶ (play)	Play.
⏸	Time shift key. (Pause)
■	Stop.

Basic Operations

Remark:

1. The keys operation here refers to remote control operation, as for panel control keys operation, please refer to "**Panel Control Keys**".
2. The [▶] key means direction key and the [▶](play) key means play function key
3. Menu Operation Instruction in this manual explains the operation under TV mode, which could also be the reference to other modes.
4. Before powering on platform, please make sure that the power supply is stable.
5. The software of different countries is different. The specific software operation should be subject to the actual situation.
6. Because the product is constantly updated, the software is upgraded at any time, if the software operation is different from the actual operation, please refer to the actual product.

Turning on/Standby

Plug power cord into the electrical socket, then press [POWER] key to turn on the TV. When it is the first time to turn on the TV, the Initialization Settings interface appears, please set it as needed.

In power on state, press [POWER] key to switch to standby mode.

Signal source selection

You can connect various devices to the TV set and view high quality images. If the video device has HDMI, Composite and other video output ports. You can select one of them and connect to corresponding input ports of the TV set. After connection, turn on the device and press [📡] key, then menu of signal source will be displayed on the screen. Press the [▲]/[▼] key to select the input signal, and press [OK] key to confirm .

Menu operation description

Press [☰] key to show the main menu on the screen:

1. Press [▲]/[▼] key to select a menu from **Channels, TV options, Record**.
2. Press [◀]/[▶] key to select an item in the menu.
3. Press [OK] key to enter the submenu.
4. Press [▲]/[▼] key to adjust the value or setting.

- When the main menu is shown on the screen, press [≡] key to exit the main menu; Press [←] key to return to previous menu when the TV display the submenu.
- During menu operation, the icons of invalid options are gray.

Channel scanning

Scan the channels before watching the TV for the first time. Before scanning, please make sure that the antenna has been connected properly.

Antenna

Press [≡] key, and select **Antenna**. Press [≡] key, and press [▲]/[▼]/[◀]/[▶] key to select **Channel > Channels**, then press [OK] key to enter.

- Select **Channel Scan**, then press [OK] key to start auto scanning.
- Select **Single RF Scan**. Press [◀]/[▶] key to set **RF Channel**, then press [OK] key to start manual scanning.

Cable

Press [≡] key, and select **Cable**. Press [≡] key, and press [▲]/[▼]/[◀]/[▶] key to select **Channel > Channels**, then press [OK] key to enter.

- Select **Channel Scan > Others**, then press [OK] key. Set **Frequency(KHz)**, **Network ID**, **Scan Mode**, and select **Scan**, then press [OK] key to start scanning.
- Select **Single RF Scan**, then press [OK] key. Set **Frequency(KHz)**, and select **Scan**, then press [OK] key to start scanning.

ATV

(Note: This function is optional, please refer to the actual product.)

Press [≡] key, and select **ATV**. Press [≡] key, and press [▲]/[▼]/[◀]/[▶] key to select **Channel > Channels**, then press [OK] key to enter.

- Select **Channel Scan**, then press [OK] key to start auto scanning.
- Select **Analog Manual Scan**, and set **Start Frequency(MHZ)**. Select **Scan Up** or **Scan Down**, then press [OK] key to start scanning.

REC option

In DTV mode, press [●] key, then system begins recording right now. Press [■] key to stop and exit recording. Press [≡] key and select **Record > Record List**, then you can select the file you want to play, and press [OK] key to play it.

While playing, you can press [←] key to exit playing, or press [▶](play)/[II]/[■]/[OK] key to perform shortcut operation.

Note: Only the memorizer with FAT32 file system supports the recording function. Memorizer with other file systems need to be formatted; Before formatting memorizer, please back up useful data because the content of memorizer can not recover after formatting.

Time Shift option

In DTV mode, press [≡] key, and select **Record > Time Shift Mode**, then press [OK] key to turn on the time shift function. Press [II] key to show Time Shift option menu on the screen and the program is in suspended state. Press [▶](play) key to resume playing the program. Press [■] key to stop and exit time-shift.

When user pauses program for a short time, time-shift function can suspend and cache the playing program to U disk. When user resumes playing, the program can continue to be played. In the process of the time shift, press [▶](play)/[II]/[■]/[OK] key to perform shortcut operation.

Instructions for quick start

Basic Operations

Press [▲] key to show the home page.

- Press [◀]/[▶] key to select an application;
- Press [OK] key to run the application;
- Press [←] key to return to previous page;
- Long press [▲] key to open all Apps.

Quick Start

Before using this device, please get familiar with the operations below for better experience.

Language input setting

Language: In the smart mode, select the system language. Press [⚙] key, and select **Device Preferences > Language**, and press [OK] key. Press [▲]/[▼] key to select the desired language, and then press [OK] key.

Selecting Input Method: In the smart mode, press [⚙] key, and select **Device Preferences > Keyboard > Current keyboard**, and press [▲]/[▼] key to choose input method.

Setting System Time: In the smart mode, press [⚙] key, and select **Device Preferences > Date & Time > Automatic date & time**, then select **Use network-provided time**. You can also set the system time manually.

Smart Applications

Apps: The **Apps** helps users manage applications, and allows users to install or uninstall apps in local disk.

Press [🏠] key, then press [◀]/[▶] key to select an application and press [OK] key to enter.

■ How to install an application?

Long press [🏠] key, and select **Get more apps**, then press [OK] key to enter, search apps you want and install them.

■ How to uninstall an application?

Long press [🏠] key, and select the app that you want to uninstall, long press [OK] key and select to uninstall it.

MultiMediaPlayer: Open **MultiMediaPlayer** app, and press [OK] key to enter and select **VIDEO**, **PHOTO**, **MUSIC** and **TEXT**.

■ **Playing Files in local disk device:** Before playing files in the local disk, insert the USB mass storage device into the USB interface.

Open **MultiMediaPlayer** app, and press [OK] key to enter. Select the target folder or file, press [OK] key to enter the folder or play the file, and press [←] key to return to the desktop.

Attention:

1. Non-standard USB devices can't be recognized probably; in this case, please replace a standard USB device;
2. The stream media system has certain restriction on the format of files; the playing will be abnormal if it is out of the system restriction;
3. Do not remove the USB device while playing, or else the system or device may have problem; Before replacing the USB device, please turn off the machine's power supply;
4. The system supports standard USB1.1 and USB2.0 devices, such as USB mass storage devices and mobile hard disks;
5. The maximum output current of the USB port of this device is 500mA, and the self-protection will be enabled if it is beyond this limit; please use external power supply if an external device of higher current will be connected;

6. The system is complicated; when it is reading or playing files, the screen may be still or certain functions may be invalid due to the compatibility and stability of the USB device; in this case, please turn off the device and re-initialize the system.

Press [≡] key to display toolbar, While playing, select the menu option which you want, and press [OK] key to perform the operation; you can press [←] key to exit playing, or press [▶](play)/[⏏]/[■]/[OK] key on the remote control to perform shortcut operation.

Network Settings

Wi-Fi

1. In smart mode, select **Settings > Network & Internet > Wi-Fi**, and press [OK] key. Press [▲]/[▼] key to select **OK**, and press [OK] key, then the machine automatically searches for nearby wireless network signal. The network searched without 🔒 icon indicate that the machine can connect to the network without a password. The network with 🔒 icon indicate that it is encrypted and you must enter the correct password to connect to the network;
2. Select the desired network from the list, and press [OK] key;
3. Enter the password in the password box, then select ✓ and press [OK] key to connect to network.

Ethernet

1. Select **Settings > Network & Internet > Ethernet**;
2. Set **Proxy settings** and **IP settings** then press [OK] key to connect to the internet.

Wow/Wol

It allows remote systems to wake up the sleeping TV by sending a frame of a specific format which the client anticipates. (It is available when network is connected.)

Select **Settings > Network & Internet > Wol / Wow**, and press [OK] key to enter. Press [OK] key to set it to "On" or "Off", and press [OK] key to confirm.

Bluetooth Setting

In smart mode, select **Settings > Remotes & accessories**, and press [OK] key to enter. Select the device which you want to connect to and press [OK] key, then follow the prompt to connect.

Note: Select **Settings > Device Preferences > About > Device name**, and you can check the TV name.

Recommendations

Android TV™

Android TV gives you a smarter, easier way to get more from your TV.

Google Assistant

Use your voice to search for shows, control devices, and more - just ask Google.

Google Play

Google Play brings your favorite apps and games to your TV. Watch, play, and do-whatever you want, whenever you want.

Chromecast built-in™

Easily cast your favorite movies, music, and more to your TV with Chromecast built-in.

Troubleshooting

■ Snowflake spots occur in the TV images and there is noise in accompanying sound.

1. Check if the antenna plug is loose or the cable is in good condition.
2. Check the antenna type (VHF/UHF).
3. Adjust the direction and position of the antenna.
4. Try to use signal enhancer.

■ There is neither display nor sound on the screen. The indication light is not on.

Check if the power line is connected.

■ Dotted line or strip disturbance occurs in TV images.

Do not use electric hair dryer aside the TV set and adjust the antenna direction to reduce disturbance.

■ Double images occur on the TV screen.

1. Use high oriented antenna.
2. Adjust the direction of the antenna.

■ The images are colorless.

Press [≡] key and select **Picture > Saturation** to increase color saturation.

■ The TV has no accompanying sound.

1. Adjust the volume to a proper degree.
2. Press [MUTE] key on the remote control to cancel mute mode.

■ No signal input images show on the machine screen. The indicator light is blinking.

1. Check if the signal connecting cable is loose or falls off. Reconnect it.
2. The machine may be in standby mode, please reboot.

■ The remote control distance is short or out of control.

1. Remove the object to avoid blocking the remote control receiving window.
2. Replace the battery.

■ The browser cannot access any link.

1. Ask the network administrator to obtain available IP address and other parameters.
2. Check if the network connecting cable is normally connected.
3. Consult the network service provider.

■ Online video play is very slow.


1. Please upgrade your network bandwidth to a higher one.
2. Please try to replace with other addresses to obtain better resources.

■ Machine is slow, system crash, can't operate the machine.

Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the TV again.

Base Installation Instructions

Put the machine flat first, distinguish left and right base and base installation front and back direction, then install the bases in the bottom of the machine back cover as arrow direction in figure. Align screw holes, then fasten screws (notice that base module has to be adjusted at figure status, otherwise it cannot be installed in.)

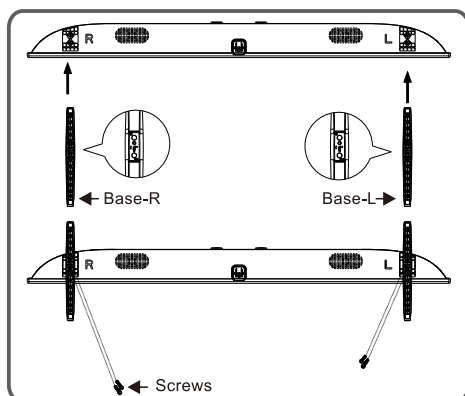


Remark: The actual base and machine appearance may be different from pictures; please refer to the actual device.

Use of a TV wall mounting

Warning

- Please purchase a suitable TV wall mount when mounting your TV on the wall.
- Ensure that the bearing capacity of the wall for mount installation is no less than 4 times the weight of the TV set and the wall mount so as to avoid falling.

- Please refer to the instructions provided with the TV set and wall mount for installation.
- Make sure there is no cable or conduit in the wall section where a wall mount will be installed.
- Please entrust a professional technician to complete installation. The company shall not be liable for accidents, personal injury or damage caused by improper installation of TV set.

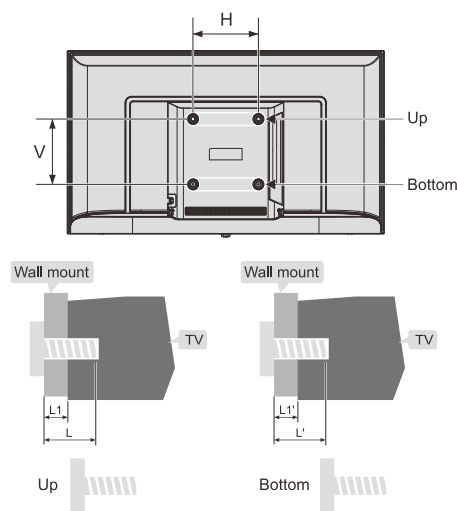

L1: Thickness of wall mount

L1': Thickness of wall mount

Distance between holes on the wall(H×V)(mm)	Required screws (recommended bolt length)(mm)
42": 100 x 100	Up: 2 x M4 (L=8+L1), Machine screws Bottom: 2 x ST4 (L'=8+L1'), Flat tail self-tapping screws

Note:

- If any screws are found in the screw hole for wall mount behind the TV set before installing the wall mount, the screws shall be removed and put in place for later use.
- Please buy the wall screws according to the actual situation.
- If there are flat tail self-tapping screws in the accessories, please decide whether it is suitable for use according to the actual situation of the wall mount.

ST4x10mm flat tail self-tapping screws 2pcs(option)