


คู่มือการใช้งาน

AN-SP170

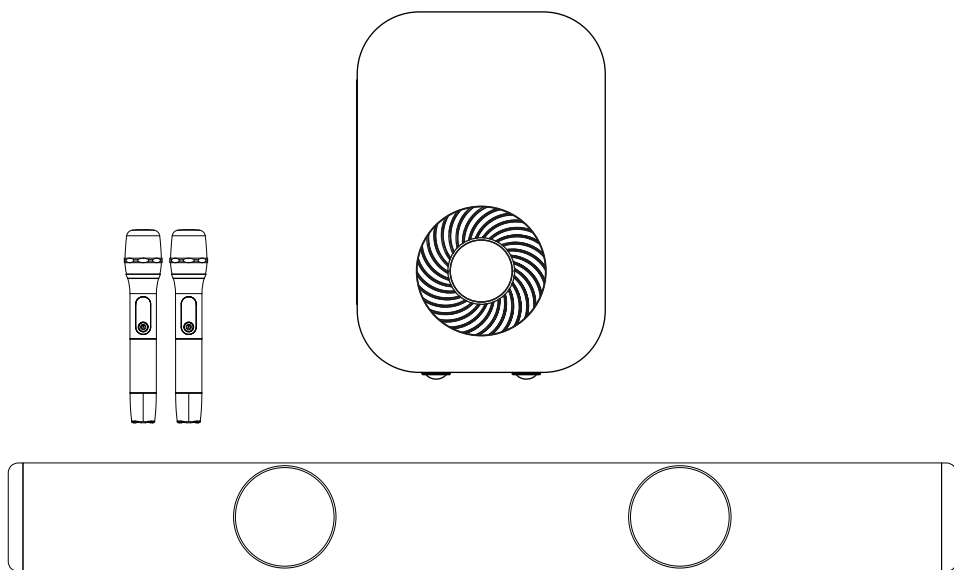

ผลิตภัณฑ์นี้รองรับฟังก์ชันคาราโอเกะ

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

DSP)))




Bluetooth®

ซาวด์บาร์



ซับวูฟเฟอร์

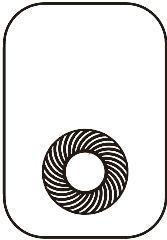


รีโมทคอนโทรล



ไมโครโฟนแบบไร้แบตเตอรี่

สาย 2 ชั้น

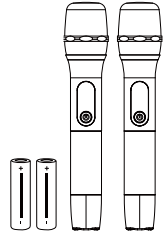

สาย AUX




สายไฟ 2 ชั้น




สายชาร์จ Type C (ไมโครโฟน)



อุปกรณ์สำหรับยึดผนัง



คู่มือการใช้งาน




รูปภาพ ภาพประกอบ และภาพวาดที่แสดงในคู่มือผู้ใช้นี้มีไว้เพื่อการ อ้างอิงเท่านั้น และอาจแตกต่าง
จากรูปลักษณ์ที่แท้จริงของผลิตภัณฑ์

การติดตั้ง Soundbar บนผนัง

1

นำชุดยึดผนังที่ให้มาวางเข้ากับผนัง ทำตำแหน่งเครื่องหมายยึดทั้งสองรูด้วยดินสอ

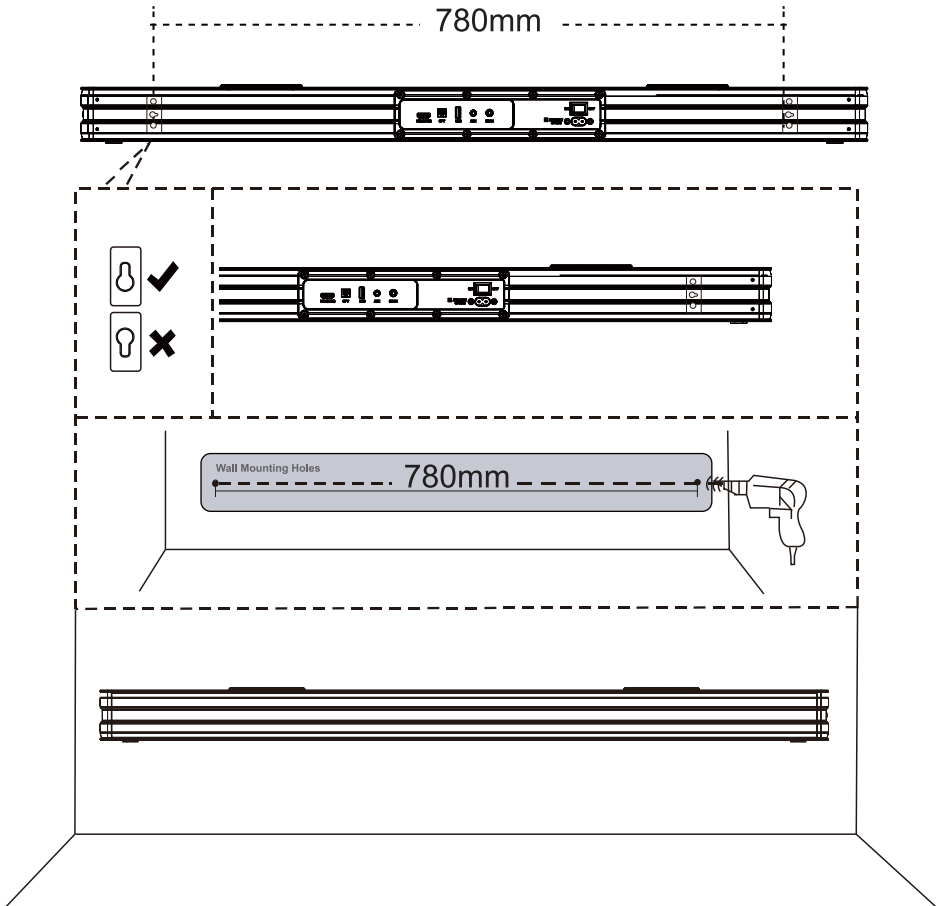


2

เจาะรูบนผนังโดยเว้นระยะ 780 มม. ทั้งสองรู ยึดทุก เข้ากับผนัง แล้วขันสกรูเข้าไปในรู โปรดตรวจสอบให้แน่ใจว่าสกรูยื่นออกมาจากผนัง 5 มม.

หมายเหตุ ต้องใช้ฟูกเมื่อติดตั้งบนผนังทึบเท่านั้น

พุกยึดผนัง



ผนังทึบ (เช่น อิฐแข็ง คอนกรีตแข็ง ไม้เนื้อแข็ง)


ผนังแห้ง ผนังยิปซั่ม ผนังบอร์ด ฯลฯ

3


แขวนชาวด์บาร์ไว้กับชุดยึดผนัง

4


ค่อยๆ ดันชาวด์บาร์ลงเพื่อล็อกและยึดให้เข้าที่

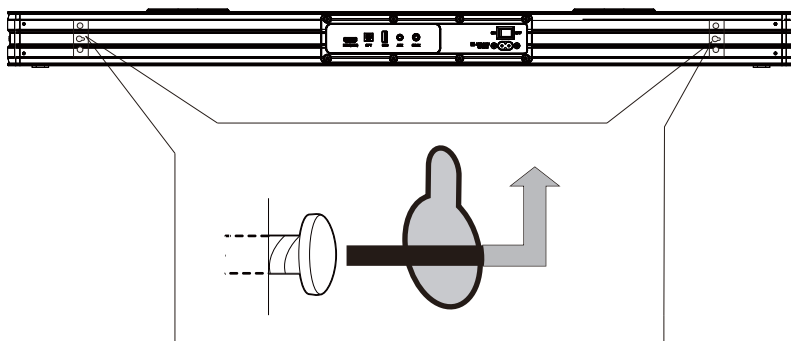


การเปลี่ยนแบตเตอรี่รีโมทคอนโทรล

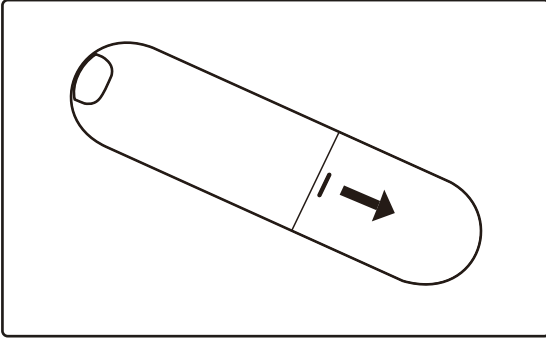

A. ถอดฝาปิดช่องใส่แบตเตอรี่ออก

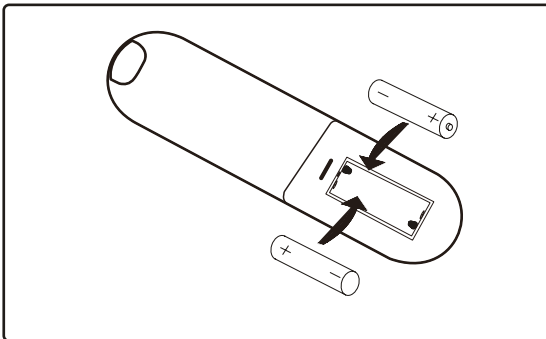

B. ใส่แบตเตอรี่ AAA
จำนวน 2 ก้อนตามเครื่องหมาย
ภายในช่อง

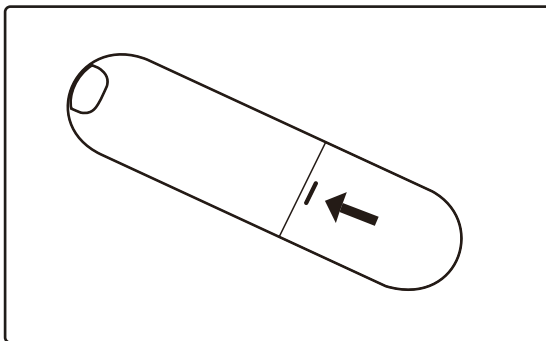


C. ปิดฝารีโมทคอนโทรล

1. ซาวด์บาร์
2. จอแสดงผลแอลอีดี+ไฟ LED สมแตนด์บาย
3. อินพุต HDMI (ARC)
4. อินพุตออปติคัล
5. อินพุต USB
6. อินพุต Aux
7. อินพุต โคแอกเซียล
8. สวิตช์ เปิด /ปิด
9. ช่องเชื่อมต่อไฟ AC
10. ปุ่ม เปิด/ปิดเครื่อง
11. ปุ่ม เลือกรูปแบบเสียง
12. ปุ่ม เล่น/หยุดชั่วคราว (กดค้างเพื่อตัดการเชื่อมต่อการเชื่อมต่อ BT)
13. ปุ่ม เล่นเพลงก่อนหน้า / ลดระดับเสียง
14. ปุ่ม เล่นเพลงถัดไป/เพิ่มระดับเสียง
15. ปุ่ม ชับวูฟเฟอร์
16. ปุ่ม สวิตช์เปิด/ปิด ชับวูฟเฟอร์
17. ช่องเชื่อมต่อไฟ AC
18. ลำโพง


รายละเอียดด้านบน




รายละเอียดด้านหน้า




รายละเอียดด้านหลัง

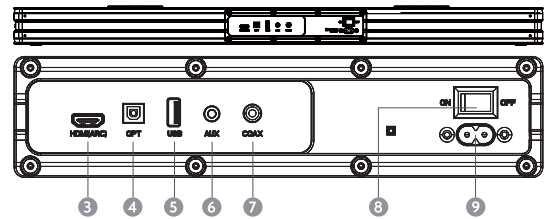


รายละเอียดด้านข้าง

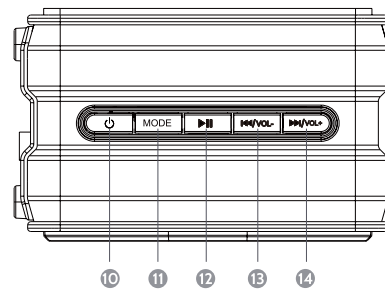

ด้านหน้า/ด้านหลัง/ด้านข้างของซับวูฟเฟอร์

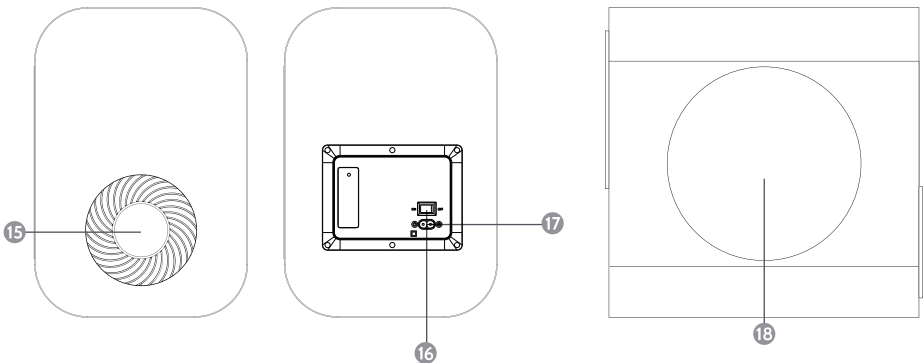

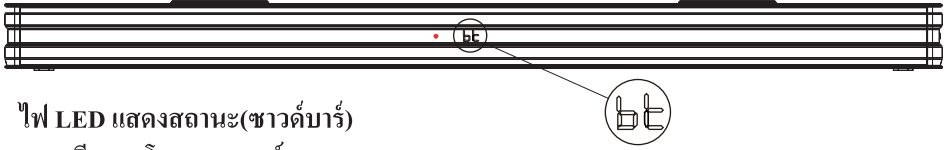

ไฟ LED แสดงสถานะ(ชาวดับบาร์)

LED สีแดง: โหมดสแตนด์บาย

LED สีขาว: หน้าจอแสดงผล

โหมด บลูทูธ

1.จับคู่กับโทรศัพท์หรือแท็บเล็ต

บลูทูธ กระพริบ = พร้อมสำหรับการจับคู่

บลูทูธหยุดกระพริบ = จับคู่สำเร็จ

สัญลักษณ์บนหน้าจอแสดงผล



Stand-By(OFF)



AUX



HDMI (ARC)



USB



Optical



บลูทูธ



Coax



โหมดเพลง



โหมดภาพยนตร์



โหมดข่าว



เปิดเอฟเฟค 3D




ปิดเอฟเฟค 3D

ไฟแสดงสถานะ (ซัพวูฟเฟอร์)


OFF: ไม่เชื่อมต่อ

ไฟสีแดง: เชื่อมต่อ

ไม่เชื่อมต่อ

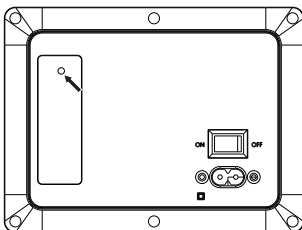

เชื่อมต่อ

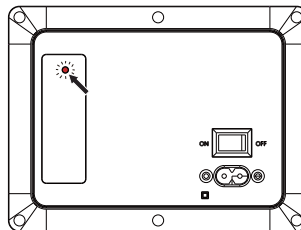

*ใส่แบตเตอรี่ AAA 2 ก้อน ด้านหลังหลังรีโมทคอนโทรล


รีโมทและฟังก์ชันการทำงาน

- 1 เปิด/ปิดเครื่อง
- 2 ปิดเสียงเพลง
- 3 VOL+ เพิ่มระดับเสียงไมโครโฟน +
- 4 ปรับเอฟเฟกต์เสียงไมโครโฟน +
- 5 KTV เสียงไมโครโฟน แบบคาราโอเกะ
- 6 VOL- ลดระดับเสียงไมโครโฟน -
- 7 ลดเอฟเฟกต์เสียงไมโครโฟน -
- 8 PRO เสียงไมโครโฟน แบบ PRO
- 9 ACC เปิด / ปิด ฟังก์ชัน ACC (ตัดเสียง)
- 10 ปิดเสียงไมโครโฟน
- 11 ORI เสียงไมโครโฟน แบบ ORI
- 12 MODE สลับโหมดการใช้งาน
- 13 BT ปุ่ม BT (กดค้าง เพื่อ ยกเลิก)
- 14 เล่นเพลงวนซ้ำในโหมด USB
- 15 + เพิ่มระดับเสียง +
- 16 เล่นเพลงก่อนหน้า
- 17 เล่น / หยุดเล่น
- 18 เล่นเพลงถัดไป
- 19 - ลดระดับเสียง-
- 20 TREB+ เพิ่มเสียงแหลม
- 21 BASS+ เพิ่มเสียงเบส
- 22 EQ โหมดเสียง เพลง / โหมดเสียงภาพยนตร์ / โหมด ข่าว
- 23 TREB- ลดเสียงแหลม
- 24 BASS- ลดเสียงเบส
- 25 3D เปิด / ปิด เอฟเฟกต์เสียง 3D



เชื่อมต่อแหล่งจ่ายไฟ

- ① เชื่อมต่อขั้วแบตเตอรี่และขั้วพวูฟเฟอร์ กับแหล่งจ่ายไฟ
- ② เปิด สวิตช์เครื่องจากนั้น ขั้วแบตเตอรี่จะอยู่ในตำแหน่งสแตนด์บาย

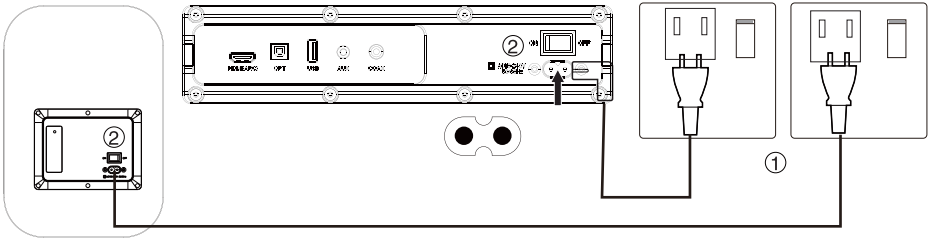

เชื่อมต่อขั้วแบตเตอรี่กับลำโพงขั้วพวูฟเฟอร์

เปิด สวิตช์ ไปที่ ON จากนั้น ขั้วพวูฟเฟอร์จะ เชื่อมต่ออัตโนมัติ กับขั้วแบตเตอรี่
ไฟแสดงสถานะ สีแดง จะสว่างขึ้น



ปุ่ม เปิด / ปิด

กดปุ่ม เปิด/ปิด บนรีโมทคอนโทรลหรือแผงควบคุม ขาวด์บาร์


HDMI (ARC)

เชื่อมต่อพอร์ต HDMI ARC ของทีวี เข้ากับลำโพงขาวด์บาร์โดยใช้สาย HDMI (ไม่รวมมาด้วย)

กดปุ่ม MODE บนรีโมทคอนโทรลจนกระทั่ง ARC ปรากฏบนหน้าจอแสดงผลไฟ LED ของลำโพง

*ตั้งค่าเสียงทีวี/เฮดส์ฟุตเสียงเป็น HDMI (ARC)


ข้อสำคัญ: โปรดตรวจสอบให้แน่ใจว่าทีวีของคุณรองรับ HDMI-ARC ก่อนใช้งาน

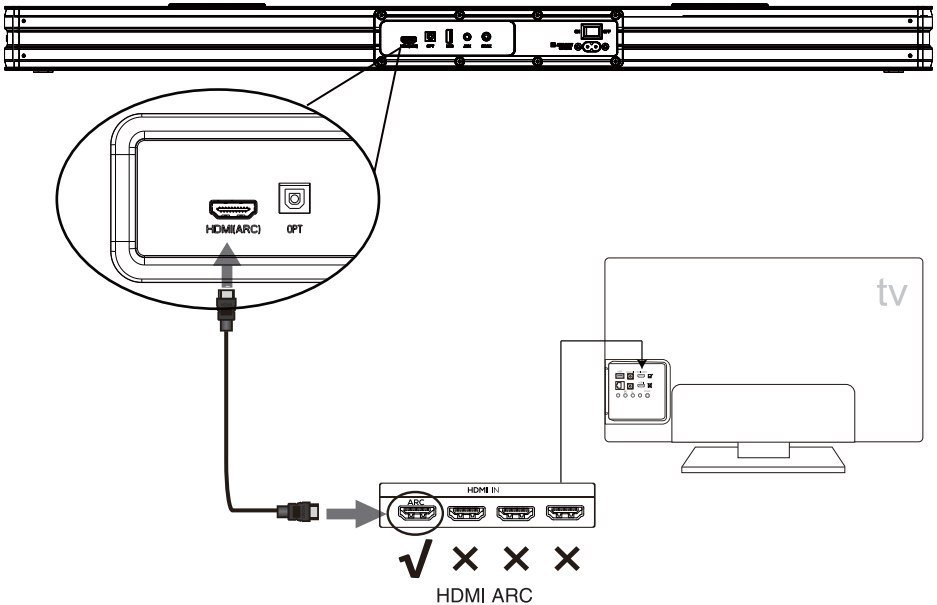

เสียงดิจิตอลออปติคัล

เชื่อมต่อกับทีวีด้วยพอร์ต Digital Audio Out (ออปติคัล) โดยใช้สายเคเบิลออปติคัล (ไม่มีมาให้) เปลี่ยนอินพุตของซาวด์บาร์เป็น OPT โดยการกดปุ่ม MODE บนรีโมทหรือกดที่ปุ่มบนตัวของซาวด์บาร์ จนกระทั่ง OPT ปรากฏบนจอแสดงผล

หมายเหตุ: โปรดอย่าลืมเปลี่ยนอินพุตเสียงเป็น Audio Out/ External Speaker

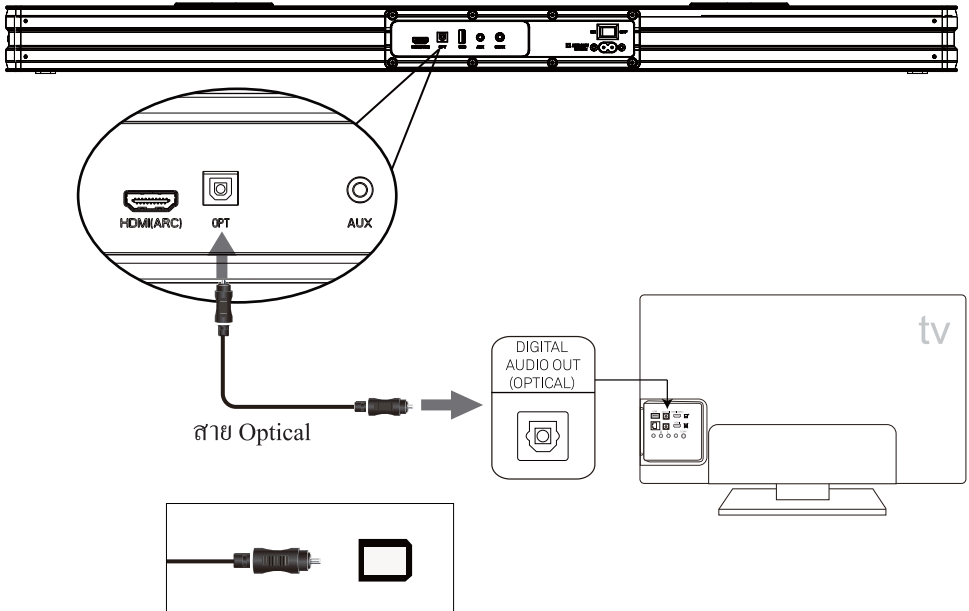


หมายเหตุ : ก่อนเสียบใช้งาน กรุณาถอดปลอกยางที่ป้องกันความเสียหายออก

เล่นผ่าน USB

ชาวดับบาร์รองรับแฟลชไดรฟ์ USB ขนาดสูงสุด 64GB และสามารถเล่นไฟล์เสียง MP3 และ WAV ได้โดยตรง เพียงเสียบ USB เข้ากับพอร์ต USB ที่ด้านหลังหลังของชาวดับบาร์ จากนั้นชาวดับบาร์จะสลับไปที่โหมด USB โดยอัตโนมัติและเล่นเพลงที่สามารถเล่นได้ ส่วนรีโมทคอนโทรลสามารถกดใช้เพื่อ เล่น/หยุดเล่น และจอแสดงผล LED จะแสดงเวลาของแทร็กปัจจุบัน

โหมดเพลงเล่นซ้ำ USB (เข้าถึงได้ผ่านรีโมทคอนโทรล) ช่วยให้เล่นเพลงซ้ำเพลงเดียว (ONE) เล่นเพลงซ้ำเพลงทั้งหมด (ALL) เครื่องเล่นมีฟังก์ชันเล่นเพลงต่อจากจุดที่เล่นล่าสุด เมื่อเสียบแฟลชไดรฟ์ USB ที่เคยใช้กับชาวดับบาร์ก่อนหน้านี้กลับเข้าไปใหม่

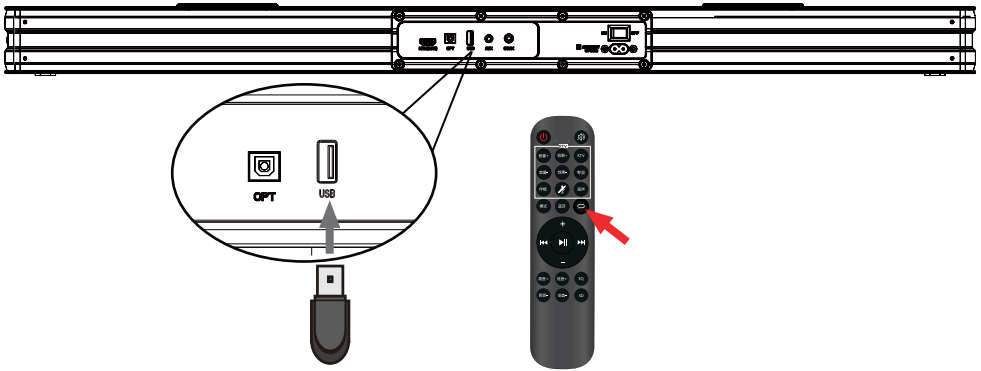


AUX/ Audio Out

เชื่อมต่อกับทีวีด้วยพอร์ต AUDIO OUT โดยใช้สาย AUX ที่ให้มา เปลี่ยนอินพุตของชาวดับบาร์เป็น AUX โดยการกดปุ่ม MODE บนรีโมทหรือบนปุ่มของชาวดับบาร์ จนกระทั่ง AUX ปรากฏบนจอแสดงผล


*หมายเหตุ: โปรดอย่าลืมเปลี่ยนอินพุตเสียงเป็น Audio Out/ External Speaker

* โปรดตรวจสอบให้แน่ใจว่าคุณเชื่อมต่อกับพอร์ต AUDIO OUT บนทีวีของคุณ ทีวีบางรุ่นมีเพียง AUDIO IN เท่านั้น ดังนั้นลำโพงจะไม่มีเสียงออก

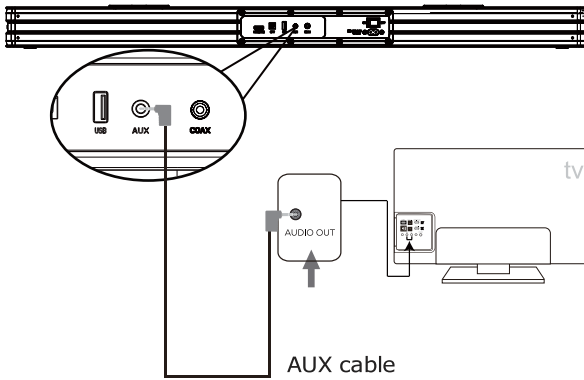

COAX audio

เชื่อมต่ออุปกรณ์ที่รองรับเข้ากับอินพุต COAXIAL บน Soundbar โดยใช้สายโคแอกเชียลดิจิทัล (ไม่ได้ให้มาด้วย) เลือกโหมด COAX โดยการกดปุ่ม MODE บนรีโมทคอนโทรลของคุณ หรือกดปุ่ม MODE บนแผงควบคุมชาวดับบาร์ จนกว่า COA จะแสดงบนจอแสดงผล ตรวจสอบให้แน่ใจว่าได้เลือกโคแอกเชียลเป็นเอาต์พุตเสียงของทีวี จากนั้นปรับระดับเสียงของชาวดับบาร์โดยใช้ปุ่มเพิ่มระดับเสียงและลดระดับเสียงบนรีโมทคอนโทรลหรือแผงควบคุมของชาวดับบาร์

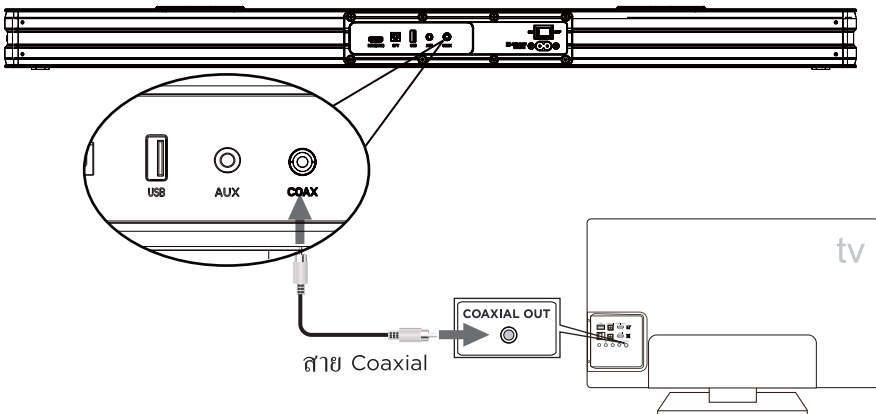

จับคู่กับไมโครโฟนไร้สาย

วิธีการจับคู่

ไมโครโฟนไร้สายได้รับการจับคู่กับชาวดับบาร์แล้ว

อย่างไรก็ตาม สามารถเชื่อมต่อกันใหม่ได้ หากไม่มีเสียงออกมาจากไมโครโฟน

หากการเชื่อมต่อไม่สำเร็จ โปรดทำตามขั้นตอนด้านล่างเพื่อ

เชื่อมต่อด้วยตนเอง

1. ให้ชาวดับบาร์อยู่ในโหมดสแตนด์บาย
2. กดปุ่ม AFC ค้างไว้ประมาณ 8 วินาที จะแสดง

"PA" บนไมโครโฟน จากนั้นเปิดชาวดับบาร์ และรอประมาณ 5 วินาที ชาวดับบาร์จะเข้าสู่การจับคู่



ใช้ไมโครโฟนไร้สาย

Soundbar รองรับฟังก์ชันคาราโอเกะในทุกโหมด

ผลิตภัณฑ์นี้มีไมโครโฟน 2 ตัว

กดปุ่ม "V+CH+" บนไมโครโฟนสั้นๆ เพื่อเพิ่มระดับเสียงบนไมโครโฟน กดปุ่ม "V-CH-"

บนไมโครโฟน 1 ครั้ง เพื่อลดระดับเสียงไมโครโฟน หรือกดปุ่ม Volume+" ในบนรีโมทคอนโทรล

เพื่อปรับระดับเสียงบนลำโพงกดปุ่ม "v+/CH+" หรือปุ่ม "V-/CH-" บนไมโครโฟนค้างไว้เพื่อสลับ

ช่องส่งสัญญาณไมโครโฟนเพื่อเลือกความถี่ที่เหมาะสมและหลีกเลี่ยงเสียงรบกวน

ลำโพงมีเอฟเฟกต์ไมโครโฟนในตัวสามแบบ ได้แก่ KTV/PRO/ORI

กดรีโมทคอนโทรล 1 ครั้ง บริเวณ KTV "Effect+" ช่วยให้คุณสามารถปรับเอฟเฟกต์


เสียงสะท้อนของโหมดเอฟเฟกต์เสียงปัจจุบันได้

กดรีโมทคอนโทรล " " 1 ครั้ง แล้วไมโครโฟนจะเข้าสู่สถานะปิดเสียง กดอีกครั้งเพื่อออก

กดปุ่ม "ACC" บนรีโมทคอนโทรล 1 ครั้ง แล้วชาวด์บาร์จะเปิดใช้งานฟังก์ชันการตัดเสียงพูด

กดอีกครั้งเพื่อย้อนกลับ

เปลี่ยนแบตเตอรี่ไมโครโฟน

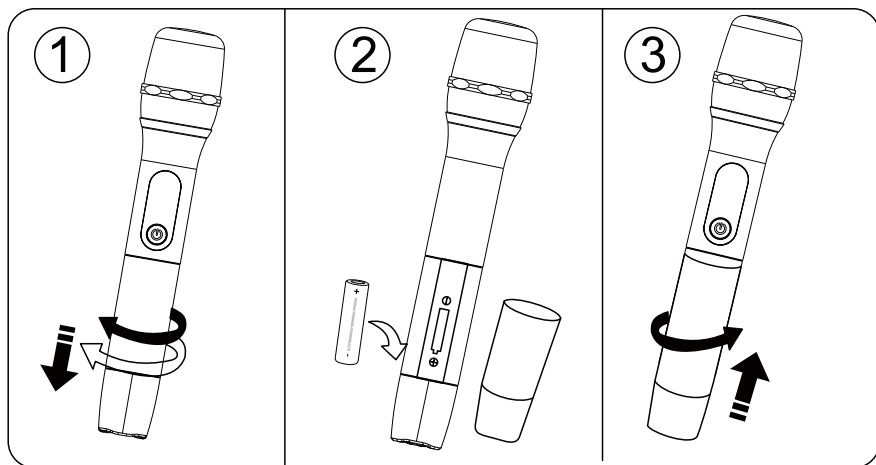


1. หมุนด้านล่างของไมโครโฟนทวนเข็มนาฬิกา คลายเกลียวฝาปิดช่องใส่แบตเตอรี่ และถอดแบตเตอรี่เก่าออก
2. ใส่แบตเตอรี่ 18650 หนึ่งก้อนที่มีขั้วที่ถูกต้อง (+/-) ตามคำแนะนำ
3. ปิดช่องใส่แบตเตอรี่กลับ และหมุนไมโครโฟนตามเข็มนาฬิกา เพื่อยึดกลับเข้าที่

Bluetooth

1. ใช้ปุ่มบนชาวด์บาร์หรือปุ่ม "BT" บนรีโมทเพื่อเปิดใช้งานโหมด บลูทูธ กดปุ่ม BT เป็นเวลา 3 วินาทีบนรีโมทเพื่อเข้าสู่โหมดการจับคู่ จากนั้นไฟ LED จะพริบ
2. ไปที่ฟังก์ชัน Bluetooth บนโทรศัพท์หรืออุปกรณ์อื่นๆ ของคุณแล้วเลือก "AN-SP170"
3. คุณจะได้ยินเสียงเมื่อจับคู่สำเร็จ และไฟ LED จะหยุดกะพริบ

หมายเหตุ:


- หากอุปกรณ์ Bluetooth ของคุณเปิดหรือตัดการเชื่อมต่อด้วยตนเอง ชาวด์บาร์จะปิดเข้าสู่โหมดจับคู่โดยอัตโนมัติ
- อุปกรณ์ที่ขาดการเชื่อมต่อจะถูกเชื่อมต่ออีกครั้งเมื่อคุณเข้าสู่ช่วงการรับสัญญาณ (50 ฟุต)

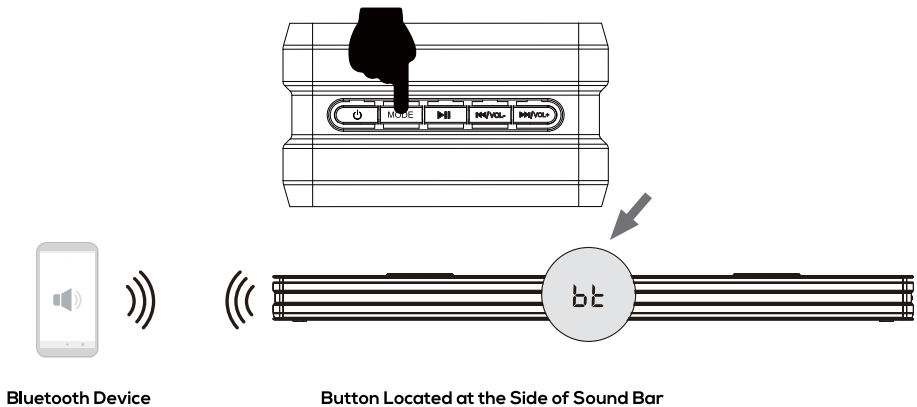

Wireless Soundbar




Subwoofer

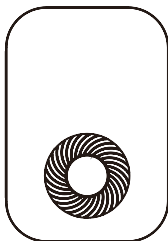

Remote Control




2pcs wireless microphone
(Including
2pcs 18650
battery)

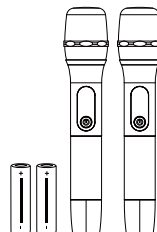

AUX cable




Power cable 2pcs




TYPE C charging cable
(microphone)



Wall hanging and screws



user manual




The images, illustrations, and drawings displayed in this user manual are for reference only and may differ from the actual appearance of the product.

Wall mounting the Soundbar

1

Tape the included wall mounting template on the wall. Mark the two bracket holes using a pencil.

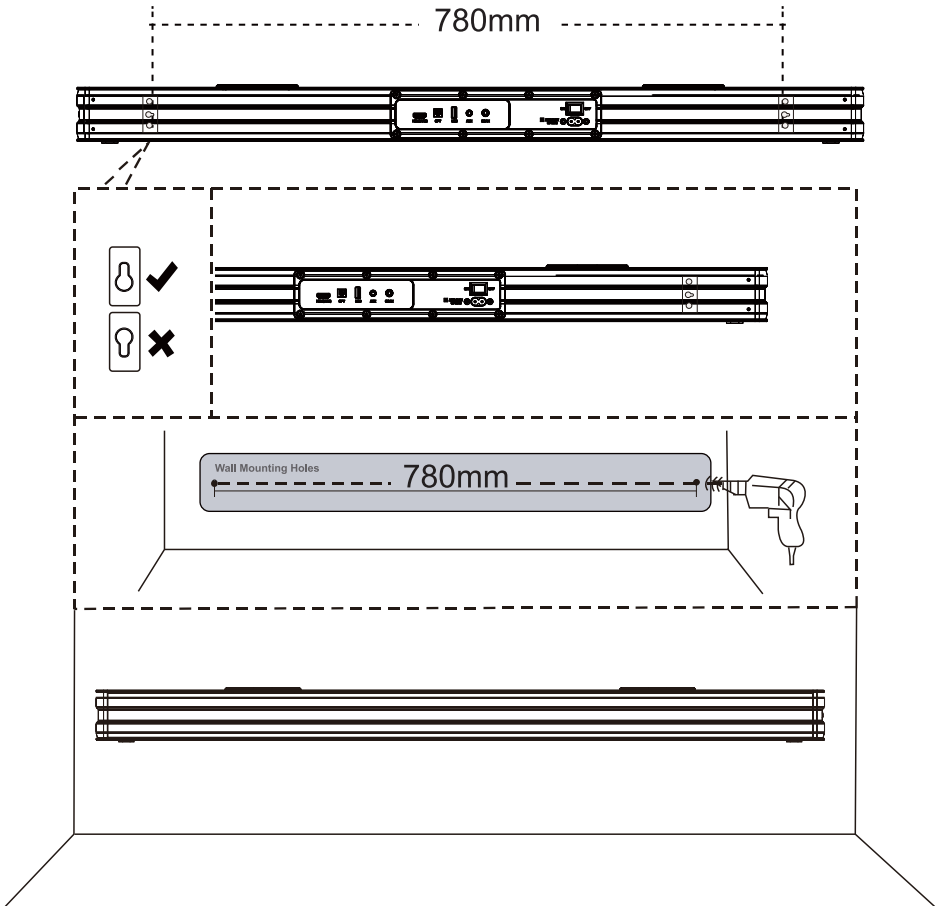

2

Drill two Parallel 780mm holes using the mounting paper, Secure the supplied anchors, and screws into the hole. Please make sure the screws are protruding 5mm in the wall.

*Anchors are only required when mounting onto a solid wall.

Product placement

Anchor



Solid wall (i.e., solid brick, solid concrete, solid wood)




Drywall, plastered wall ect.

3


Hang the sound bar on the fastening screws.

4


Gently push the sound bar down to lock and secure it in place.

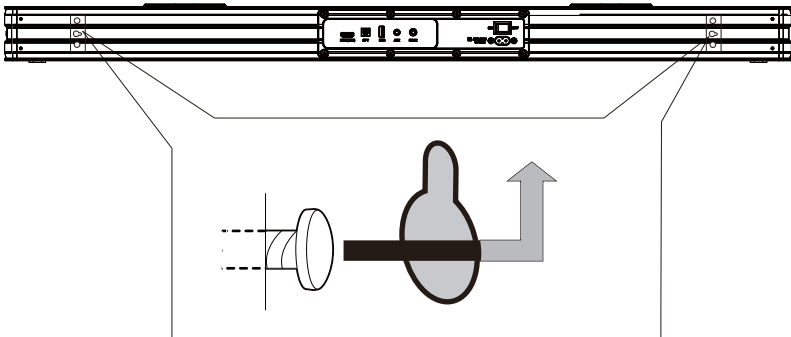


Remote Control Battery Replacement

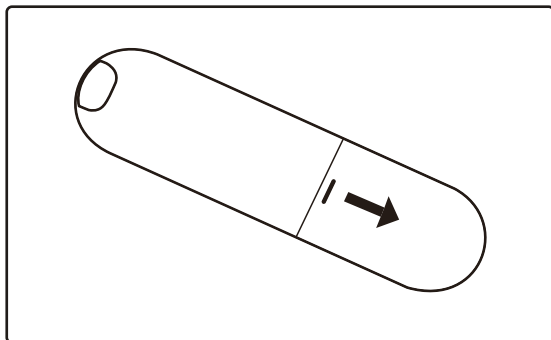

A. Remove the battery compartment cover.

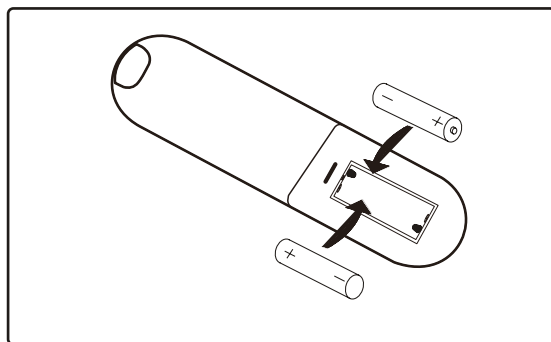

B. Insert 2 AAA batteries according to the marking inside compartment.

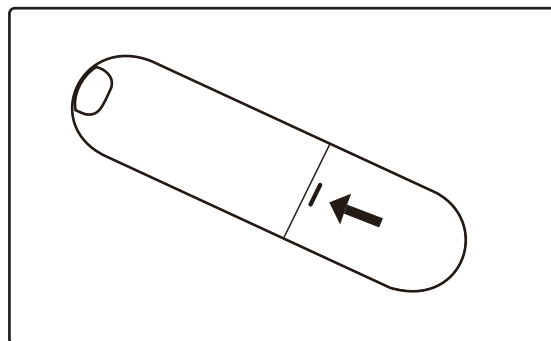

C. Close the compartment.

Product Overview

1. Soundbar
2. LED display+
Standby LED light
3. HDMI(ARC) Input
4. Optical input
5. USB input
6. AUX input
7. Coaxial input
8. Power switch
9. AC power slot
10. Power on/off
11. Mode
12. Play/pause
(long press to disconnect
BT connection)
13. Previous track/
decrease volume
14. Next track/
increase volume
15. Subwoofer air tube
16. Subwoofer power switch
17. Subwoofer AC
power slot


Top soundbar




Front soundbar




Back soundbar

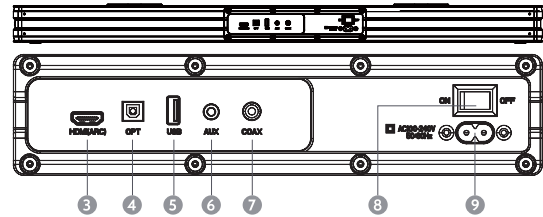


Side of soundbar

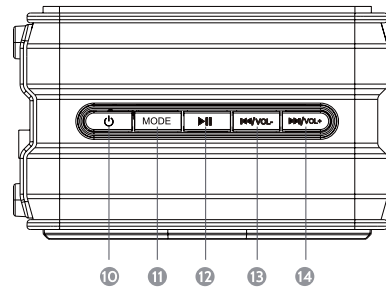

Front/back/side of subwoofer

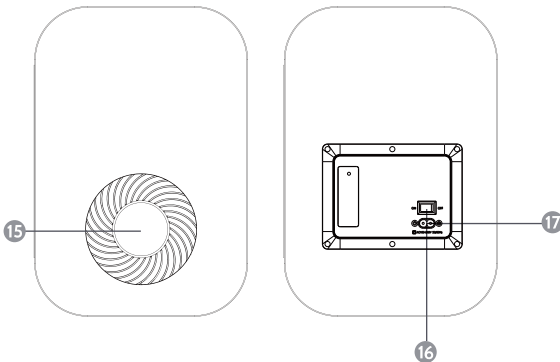

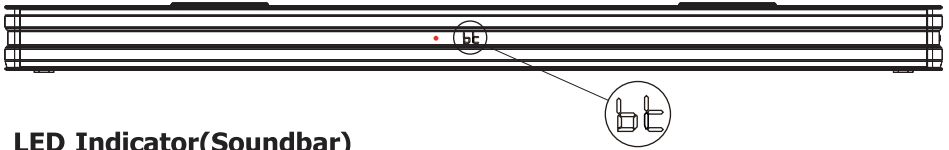

LED Indicator(Soundbar)

Red LED: standby mode

White LED display

BT mode

1.Pair with a phone or tablet for audio input.

bt flashing=ready for pairing,

bt static=pairing successful

Input Indicators



Stand-By(OFF)



AUX



HDMI (ARC)



USB



Optical



Wireless(BT)



Coax



Music



Movie



News



3D on




3D off

Indicator(Subwoofer)


OFF : not connected;

Solid red : connected

not connected

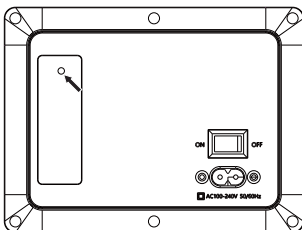

connected

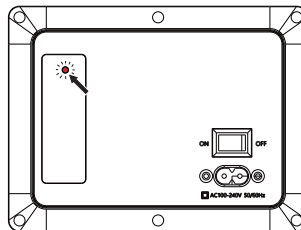

Remote Control

Insert the battery (2XAAA alkaline) into the remote control.


Remote and function

- 1 Power On / Off
- 2 Mute
- 3 VOL+ Microphone Volume +
- 4 Microphone reverb effect +
- 5 KTV Microphone KTV sound mode
- 6 VOL- Microphone volume –
- 7 Microphone reverb effect –
- 8 PRO Microphone professional sound mode
- 9 ACC Turn On/Off accompaniment
- 10 Microphone Mute
- 11 ORI Microphone original sound mode
- 12 MODE Input mode switching
- 13 BT BT button (long press to disconnect Bluetooth)
- 14 USB Repeat mode
- 15 + Main volume +
- 16 Previous track
- 17 Play/Pause
- 18 Next Track
- 19 – Main volume–
- 20 TREB+ Increase treble
- 21 BASS+ Increase Bass
- 22 EQ Music mode/KTV mode/ Movie mode / Voice mode
- 23 TREB- Decrease treble
- 24 BASS- Decrease bass
- 25 3D 3D sound effect on/off




Connect the power supply

- ① Connect the speaker and subwoofer to the power supply.
- ② Turn on the power switch and the system will enter standby mode

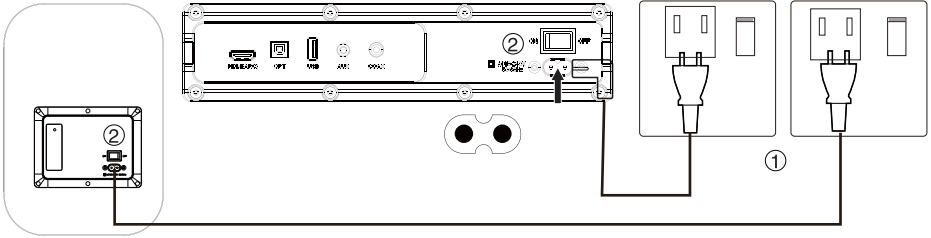

Pairing the soundbar with the subwoofer.

Power on, the subwoofer will automatically link to the sound bar.
The red LED on the back will turn on and keep solid light to confirm.

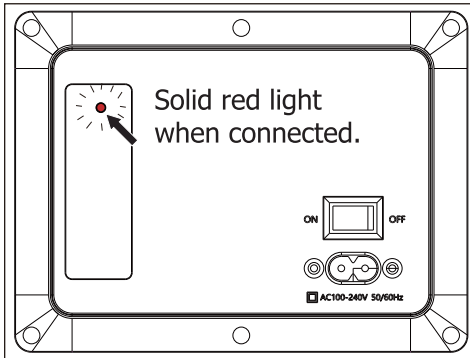

Power on/off

Press the Power on/off button on the remote control or soundbar control panel to turn the unit on or switch it off.


HDMI (ARC)

Connect to an ARC-compatible TV to the ARC port on the soundbar using a HDMI cable(not included).

Change the sound bar input to ARC by pressing the MODE button on the remote or the soundbar side until ARC is shown on the soundbar LED display.

*Set the TV Sound/Audio Output as HDMI (ARC)


IMPORTANT: Please make sure your TV is HDMI-ARC compliant before use.

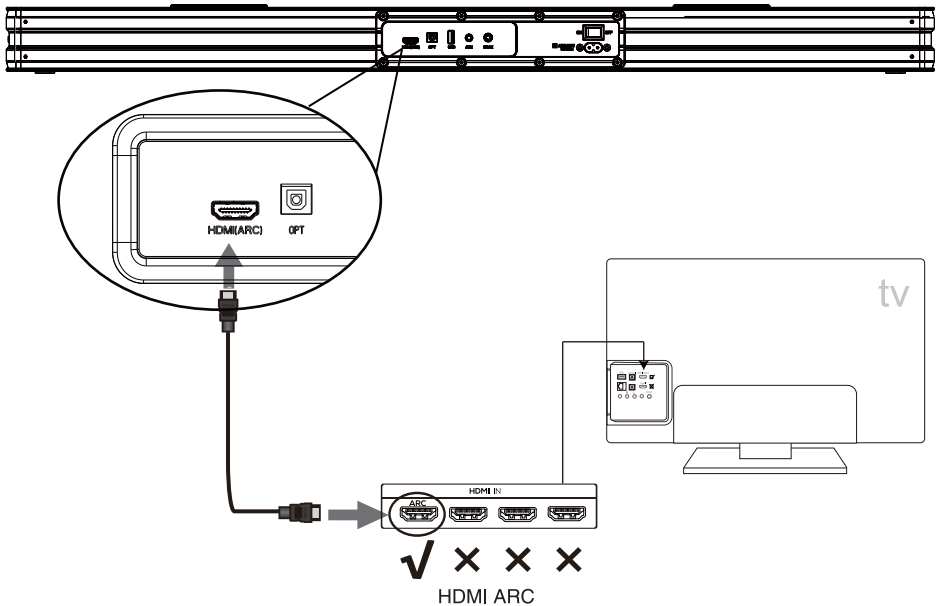

Digital Audio Out (Optical)

Connect to a TV with Digital Audio Out (Optical) port using a optical cable(not included). Change the sound bar input to OPT by pressing the MODE button on the remote or the soundbar side until OPT is shown on the soundbar LED display.

NOTE: Please remember to change audio input to Audio Out/ External Speaker.

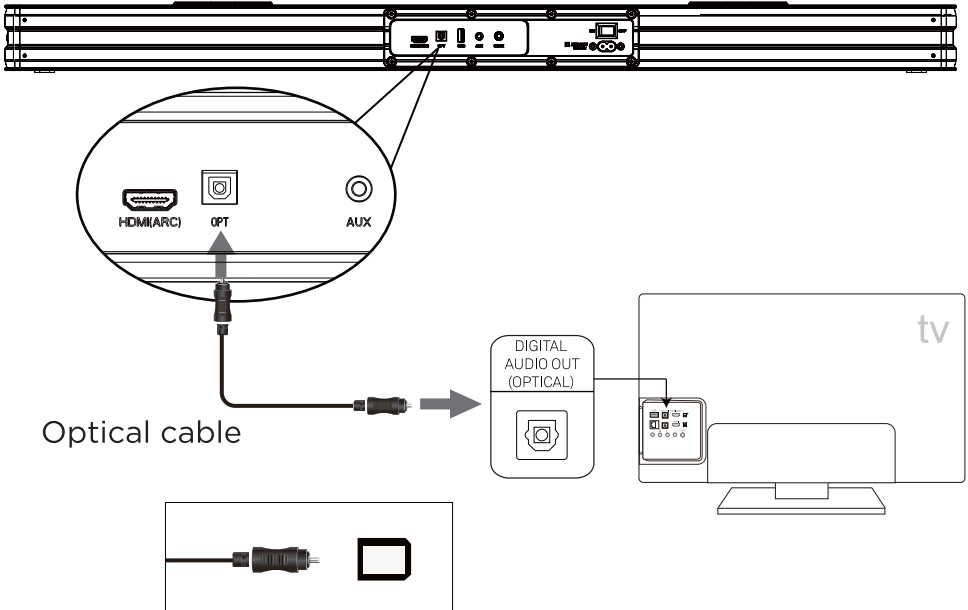


*Take the caps from optical cable before plug in

USB mode-FLASH DRIVE ONLY

The soundbar is compatible with USB flash drives up to 64GB in size and can play MP3 and WAV audio files directly. Simply insert a compatible drive into the USB port on the back of the soundbar and the soundbar will automatically switch to USB mode and play the first compatible track. The media controls on the remote control can be used to play, pause and navigate between tracks on the flash drive and the LED display will indicate the current track time.

USB repeat mode (also accessed via the remote control) enables single track repeat (ONE), all track repeat (ALL). The media player also has a memory function that will recall and continue from the last-played point when a USB flash drive that has previously been used with the soundbar is reinserted.

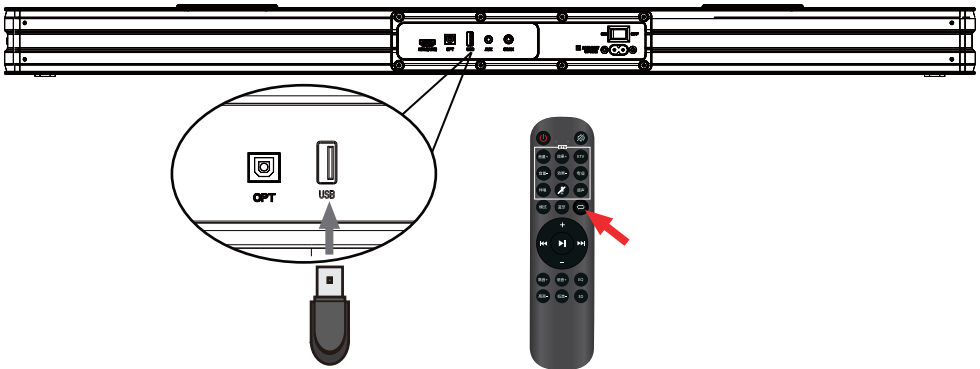


AUX/ Audio Out

Connect to a TV with an AUDIO OUT port using the included AUX cable. Change the sound bar input to AUX by pressing the MODE button on the remote or the soundbar side until AUX is shown on the soundbar LED display.


***NOTE:** Please remember to change audio input to Audio Out/ External Speaker.

* Please make sure you connect to the AUDIO OUT port on your TV. Some TV only has AUDIO IN only. It will NOT work with external speakers.

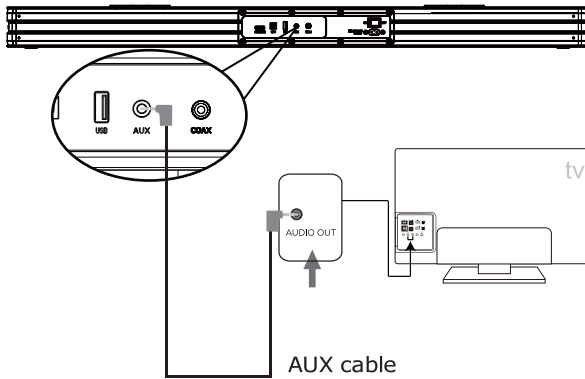

COAX audio

Connect a compatible device to the COAXIAL input on the soundbar using a digital coaxial cable (not supplied). Select COAX mode either by pressing the MODE button on your remote control or repeatedly pressing the MODE button on the soundbar control panel until COA is displayed on the LED display. Ensure Coaxial is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

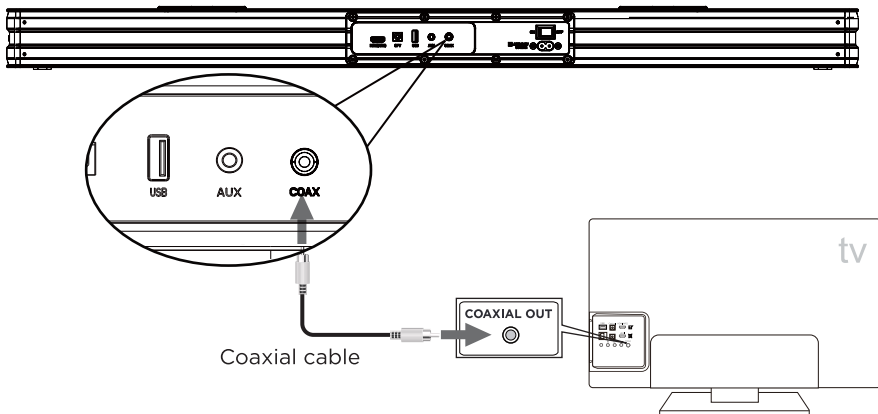


Wireless Microphone

Pairing Method

The wireless microphones has already been paired with sound bar by Aconatic.

However, they may be re-linked if no sound coming from the mic. If the connection is unsucessful, please follow the steps below to connect manually.

- 1.Keep the sound bar in standby mode.
- 2.Long press and hold the AFC button for around 8 seconds, it will display "PA" on the mic and flash. Then turn on the sound bar, and wait for about 5 seconds, they will enter to pairing mode.

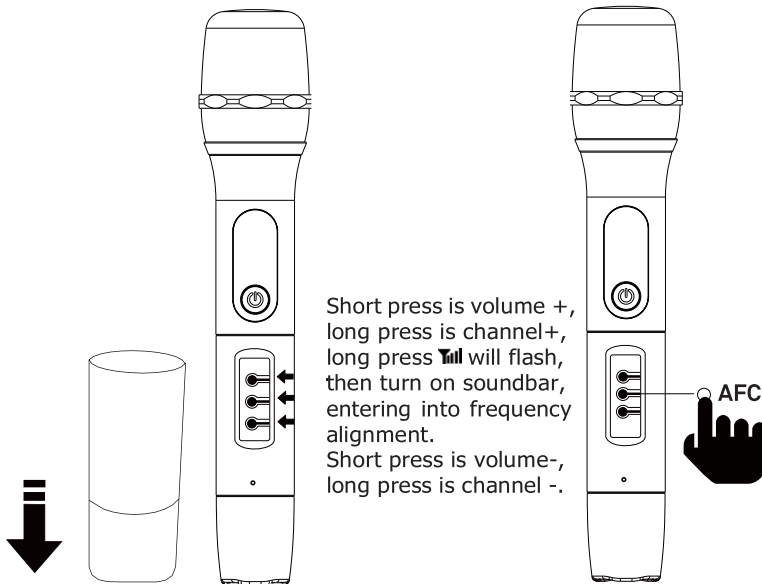

Wireless microphone using

Soundbar support karaoke function in any mode

This product is equipped with 2 microphones.

Short press the "v+CH+" button on the microphone to increase the volume on the microphone. Short press the "V-CH-" button on the microphone to decrease the volume on the microphone. Alternatively, press the "Volume+-" button in the KTV area of the remote control to adjust the volume on the speaker.

Long press and hold the "v+/CH+" button or "V-/CH-" button on the microphone to switch the mic transmission channels to choose suitable frequency and avoid interference.


The speaker has three built-in microphone effects, KTV/professional/original.

Short press the remote control KTV Area "Effect+-" allows you to adjust the reverb effect of the current sound effect mode.

Short press the remote control KTV area " , and the microphone will enter a mute state. Short press again to exit.

Short press the remote control "accompaniment", and the soundbar will activate the vocal cancellation function. Short press again to return.

Replacing the microphone battery

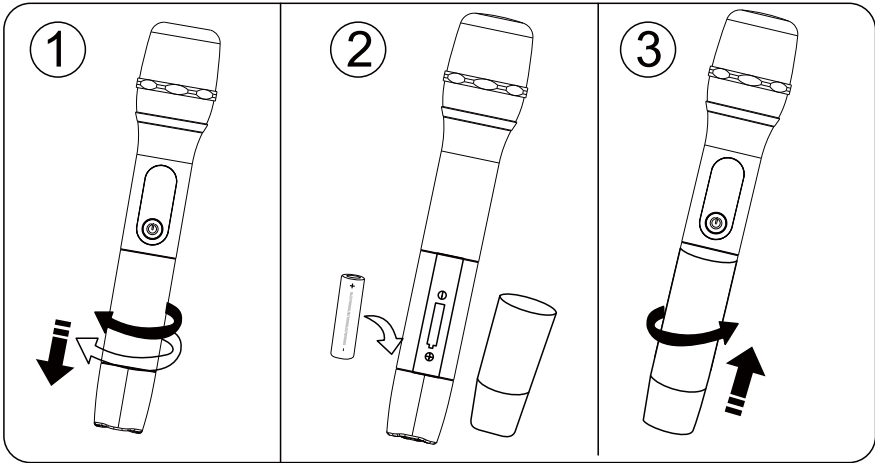

1. Rotate the bottom of the microphone counterclockwise, unscrew the battery compartment cover, and remove the old battery.
2. Insert one 18650 battery with the correct polarity (+/-) as instructed.
3. Cover the battery compartment back and rotate the microphone clockwise to secure it back in place.

Playing Bluetooth devices

Bluetooth

1. Use either the buttons on the Soundbar or the "BT" button on the remote to activate BT mode. Press the BT button for 3 seconds on the remote to manually enter pairing mode or pair to a new device. The Flashing BT LED indicator will indicate that you are in Bluetooth mode.

2. Go to the Bluetooth function on your phone or other device and select "AN-SP170 "

3. You will hear a tone when successfully paired, and the BT will stop flashing.

Notes:

- If your Bluetooth device is switched off or manually disconnected, the sound bar will automatically enter pairing mode.
- The disconnected device will be re-connected once you re-enter the wireless range (50 ft).

