

Aconatic

คู่มือการใช้งาน

LED TV

รุ่น 50US900AN
55US900AN

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งานโทรทัศน์
เก็บคู่มือนี้ไว้ใช้อ้างอิง

สารบัญ

ข้อควรระวังเรื่องความปลอดภัย	1
การติดตั้งทีวีและการเชื่อมต่อ	3
รายการบรรจุภัณฑ์	3
การติดตั้งทีวี	3
การเชื่อมต่อสัญญาณต่างๆ	4
ปุ่มทีวี	5
รีโมทคอนโทรล	6
การจับคู่เมจิรีโมท	6
การใช้เมจิรีโมท	6
การทำงานเบื้องต้น	8
การเปิดเครื่อง / สแตนด์บาย	8
การเลือกแหล่งสัญญาณ	8
การใช้งานเมนู	8
สมาร์ททีวี	8
การตั้งค่าภาษา	9
การจูนสัญญาณ	9
การบันทึก	9
Live Playback	10
แอปพลิเคชัน	10
การตั้งค่าเครือข่าย	10
การใช้ฟังก์ชันทีวีผ่านการพด	10
การใช้งานรีโมทคอนโทรลทั่วไป	11
คำชี้แจงที่สำคัญเกี่ยวกับบริการเครือข่าย	12
เครื่องเล่นมัลติมีเดีย	12
การแก้ไขปัญหาเบื้องต้น	13
วิธีการติดตั้งขาทีวี	13
การใช้งานทีวีติดผนัง	15

ข้อควรระวังเรื่องความปลอดภัย

ขอบคุณที่เลือกทีวี LED อัจฉริยะที่มีประสิทธิภาพสูงและหลายฟังก์ชันซึ่งผลิตโดยบริษัทของเรา สิ่งนี้จะนำความเพลิดเพลินในการรับชมภาพและเสียงที่ดีกว่ามาสู่คุณ การออกแบบผลิตภัณฑ์นี้ได้คำนึงถึงปัจจัยที่มีผลต่อความปลอดภัยส่วนบุคคล และผลิตภัณฑ์นี้ได้รับการทดสอบอย่างเข้มงวดก่อนที่จะจัดส่ง อย่างไรก็ตาม การใช้งานที่ไม่เหมาะสมอาจทำให้เกิดอันตรายจากกระแสไฟฟ้าและไฟไหม้ได้ เพื่อความปลอดภัย ยึดอายุการใช้งานของผลิตภัณฑ์ และให้ผลิตภัณฑ์ทำงานได้ดีที่สุด กรุณาอ่านคู่มือและฉลากที่ระบุรายละเอียดให้ละเอียดก่อนใช้งานและปฏิบัติตามข้อควรระวังด้านความปลอดภัยดังต่อไปนี้ กรุณาเก็บคู่มือผู้ใช้ไว้เพื่อใช้งานในอนาคต


	คำเตือน	อาจทำให้เกิดการบาดเจ็บหรือเสียชีวิต
	สัญลักษณ์บ่งบอกถึงพฤติกรรมต้องห้าม	
	ข้อควรระวัง	อาจทำให้เกิดการบาดเจ็บส่วนบุคคลหรือความเสียหายต่อทรัพย์สิน
	สัญลักษณ์ แสดงถึง ขั้นตอนที่ต้องดำเนินการ	

ภายใต้เงื่อนไขต่อไปนี้

- เกิดการขัดข้องของไฟฟ้าหรือแรงดันไฟฟ้าไม่เสถียร
- มีเสียงหรือกลิ่นผิดปกติจากอุปกรณ์
- สายไฟ AC เสียหาย
- ทีวีได้รับความเสียหายจากการตกหล่น กระแทก หรือชน
- มีของเหลวหรือวัตถุแปลกปลอมเข้าไปในทีวี

ให้ปิดทีวีทันที ถอดปลั๊กไฟออกจากเต้าเสียบ

และติดต่อบุคลากรซ่อมบำรุงที่ได้รับการรับรอง

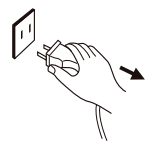

- หากมีการรั่วไหลของก๊าซหรือก๊าซที่ติดไฟอื่น ๆ ห้ามถอดปลั๊กไฟของทีวีหรืออุปกรณ์ไฟฟ้าอื่น ๆ แต่ให้ปิดวาล์วก๊าซทันที และเปิดประตูและหน้าต่างเพื่อระบายอากาศ



คำเตือน



● ใช้แหล่งจ่ายไฟที่มีแรงดัน 100-240VAC, 50/60 Hz เท่านั้น

● การเชื่อมต่อหรือถอดสายเชื่อมต่อ ก็ต่อเมื่อปิดแหล่งจ่ายไฟแล้วเท่านั้น

● หลีกเลี่ยงการติดตั้งทีวีในตำแหน่งที่ไม่มั่นคง เพราะอาจทำให้ทีวีตกหล่น เสียหาย หรือเกิดอัคคีภัยได้

● ห้ามวางทีวีในสภาพแวดล้อมต่อไปนี้:

1. มีแสงแดดตรง ร้อนชื้น เย็นจัด หรือฝุ่นหนาแน่น
2. มีสารที่ติดไฟหรือระเบิดได้
3. มีแก๊สที่ติดไฟหรือกัดกร่อน
4. ในห้องน้ำ ห้องครัว หรือสถานที่ที่มีความชื้นสูง

● ห้ามใช้เต้ารับที่เสียหายหรือไม่เหมาะสม และตรวจสอบให้แน่ใจว่าปลั๊กและเต้ารับเชื่อมต่อกันอย่างถูกต้อง

● เก็บปลั๊กไฟและเต้ารับให้ปลอดภัยจากฝุ่นและเศษโลหะ

● ข้อห้ามที่ก่อให้เกิดสายไฟชำรุดมีดังนี้

1. ห้ามดัดแปลงสายไฟ
2. ห้ามวางวัตถุหนักทับสายไฟ
3. หลีกเลี่ยงการนำสายไฟไปใกล้แหล่งความร้อน
4. ห้ามดึงสายไฟขณะถอดปลั๊ก

● ห้ามเชื่อมต่ออุปกรณ์ไฟฟ้าหลายอย่างเข้ากับปลั๊กพ่วงเดียวกันมากเกินไป เพราะอาจทำให้เกิดไฟไหม้เนื่องจากการใช้พลังงานสูง

● ห้ามให้เปลวไฟ(เช่น เทียน) เข้าใกล้ทีวี เพราะอาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

● ห้ามวางภาชนะที่มีนํ้าบนทีวี เพื่อป้องกันไฟฟ้าช็อตหรือไฟไหม้จากการกระเด็นของนํ้า

● ห้ามใส่วัตถุแหลมคม โลหะ หรือของเหลวเข้าไปในช่องระบายสัญญาณหรือช่องระบายอากาศ เพื่อป้องกันการเกิดไฟฟ้าลัดวงจร ความเสียหายของผลิตภัณฑ์ และไฟฟ้าช็อต

● ช่องที่ตัวเครื่องถูกออกแบบมาเพื่อระบายความร้อน เพื่อให้ส่วนประกอบภายในทั้งหมดไม่ร้อนเกินไปและสามารถทำงานได้ตามปกติเป็นเวลานาน กรุณาอย่าปิดช่องระบายอากาศเหล่านี้ขณะวางเครื่อง



คำเตือน



ห้ามจับปลั๊กด้วยมือเปียก เพราะอาจทำให้เกิดไฟฟ้าช็อตได้



ห้ามเปิดทีวีในสภาพอากาศที่มีพายุฝนฟ้าคะนอง แต่ควรถอดปลั๊กไฟและขั้วต่อเสาอากาศออกเพื่อป้องกันฟ้าผ่า



การถอดประกอบทีวีด้วยตนเองเป็นสิ่งที่อันตราย เพราะอาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้ได้ ควรให้ช่างผู้ชำนาญเป็นผู้ดำเนินการ



ข้อควรระวัง

● ห้ามให้เด็กปีนขึ้นไปบนทีวี

● เก็บอุปกรณ์เสริมขนาดเล็กให้พ้นมือเด็กเพื่อป้องกันเด็กกลืนสิ่งของ

● หากจะไม่ใช้ทีวีเป็นเวลานาน กรุณาปิดเครื่องและถอดปลั๊กไฟ

● ก่อนทำความสะอาดทีวี ให้ถอดปลั๊กไฟและเช็ดด้วยผ้านุ่ม ห้ามใช้สารเคมีและหลีกเลี่ยงไม่ให้สิ่งแปลกปลอมเข้าสู่เครื่อง การทำความสะอาดที่ไม่ถูกต้อง (เช่น การใช้สารทำความสะอาดน้ำ ฯลฯ) อาจทำให้รูปลักษณ์ของผลิตภัณฑ์เสียหาย ข้อมูลการพิมพ์บนผลิตภัณฑ์ลบเลือน หรือแม้กระทั่งไหลเข้าเครื่องและทำให้ส่วนประกอบเสียหาย ทำให้เครื่องไม่สามารถแสดงผลได้

● ในการปรับตำแหน่งหรือมุมของทีวี กรุณาถอดสายทั้งหมดออกและย้ายเข้าๆ เพื่อป้องกันการตกหล่น

● ห้ามถูด้วยวัตถุแข็ง กระแทก ดัด หรือบีบหน้าจอ

● ห้ามใช้เครื่องทันทีหลังจากย้ายไปยังที่มีอุณหภูมิสูงจากที่มีอุณหภูมิต่ำ เพราะจะทำให้เกิดฝ้าภายในเครื่องและเกิดความเสียหายได้

● หากหน้าจอแตกและของเหลวกระเด็นโดนผิวหนัง กรุณาล้างด้วยน้ำสะอาดทันทีเป็นเวลา 15 นาที และพบแพทย์

● ในการยกทีวีด้วยมือ กรุณาจับที่มุมและถือที่ด้านข้าง ห้ามใช้แรงกดที่หน้าจอ

● การแสดงภาพเดียวเป็นเวลานานหรือภาพเคลื่อนไหวที่มีคำหรือไอคอนคงที่ จะทำให้เกิด 'ภาพค้าง' บนหน้าจอซึ่งจะไม่หายไปหลังจากปิดเครื่องเป็นเวลานาน ปรากฏการณ์นี้ไม่อยู่ในเงื่อนไขการรับประกัน



ข้อควรระวัง

- การดูทีวีอย่างถูกวิธี:
 1. ดูในสภาพแสงที่เหมาะสม แสงน้อยหรือการดูเป็นเวลานาน อาจทำให้สายตาเสียหายได้
 2. ปรับระดับเสียงให้เหมาะสมเพื่อหลีกเลี่ยงการทำลายการได้ยิน
- ถอดปลั๊กไฟของเครื่องเพื่อทำการตัดการจ่ายไฟ
- หากใช้ปลั๊กไฟหรือหัวต่อเครื่องเป็นอุปกรณ์ตัดการเชื่อมต่อ ควรให้สามารถใช้งานได้ง่าย
- ปลั๊กไฟต้องเชื่อมต่ออย่างแน่นหนา ปลั๊กไฟที่หลวมอาจทำให้เกิดประกายไฟและไฟไหม้ได้
- ข้อมูลทางเทคนิคทั้งหมดในคู่มือผู้ใช้และบนบรรจุภัณฑ์อาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า หากมีความคลาดเคลื่อนเล็กน้อยระหว่างคู่มือผู้ใช้กับการใช้งานจริง ให้การใช้งานจริงเป็นหลัก



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

การติดตั้งทีวีและการเชื่อมต่อ

รายการบรรจุภัณฑ์


1. ทีวี
2. คู่มือการใช้งาน
3. รีโมทคอนโทรล
4. สายไฟ


การติดตั้งทีวี

เคล็ดลับในการติดตั้ง

- ควรวางทีวีใกล้ปลั๊กไฟเพื่อความสะดวกในการเสียบและดึงปลั๊กออก
- เพื่อความปลอดภัยของคุณ กรุณาเลือกขาแขวนผนังหรือขาตั้งทีวีที่เหมาะสม
- เพื่อหลีกเลี่ยงการบาดเจ็บ จำเป็นต้องวางทีวีบนพื้นผิวที่มั่นคง หรือยึดติดกับผนัง ที่แข็งแรง
- ขอให้บุคลากรที่มีคุณสมบัติช่วยติดตั้งทีวีที่ผนัง การติดตั้งที่ไม่เหมาะสมอาจทำให้ทีวีไม่มั่นคง
- อย่าวางทีวีในที่ที่มีการสั่นสะเทือนจากเครื่องจักร
- อย่าวางทีวีในที่ที่แมลงอาจเข้ามาได้
- อย่าวางทีวีใกล้เครื่องปรับอากาศ มิฉะนั้นแผงภายในของจออาจเกิดการควบแน่นของความชื้นและทำให้เกิดความเสียหาย
- อย่าวางทีวีในที่ที่มีสนามแม่เหล็กแรงหรือสัญญาณรบกวนจากคลื่นแม่เหล็กไฟฟ้า

การติดตั้งแบบขาตั้ง

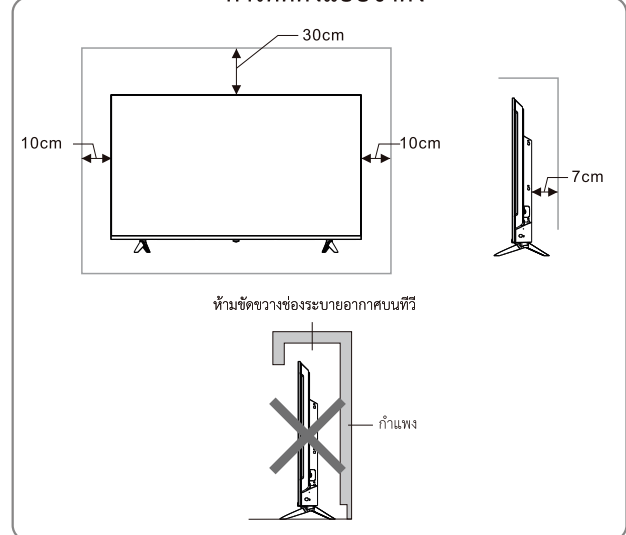

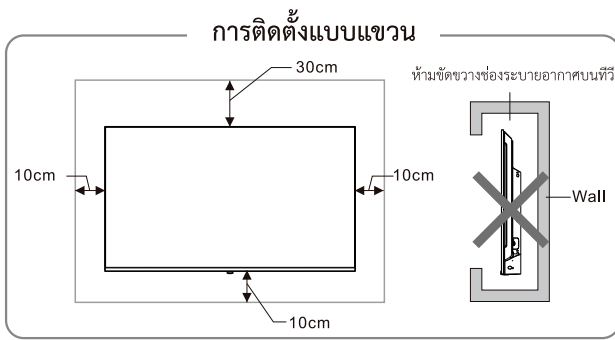

การระบายอากาศ

- โปรดรักษารูที่รอบ ๆ ทีวีตามที่แสดงในรูปภาพอย่างน้อยตามที่ระบุ
- ห้ามปิดช่องระบายอากาศหรือใส่สิ่งของใด ๆ เข้าไปในกรอบของทีวี
- ห้ามวางอุปกรณ์ในพื้นที่ที่จำกัด เช่น ชั้นหนังสือหรือตู้ที่ฝังไว้ เว้นแต่ว่าทีวีจะได้รับการระบายอากาศอย่างเหมาะสม



คำเตือน


ห้ามวางโทรทัศน์ในตำแหน่งที่ไม่มั่นคง โทรทัศน์อาจตกลงมา ซึ่งอาจส่งผลให้ได้รับบาดเจ็บสาหัสหรือเสียชีวิตได้ การบาดเจ็บหลายอย่าง โดยเฉพาะเด็ก สามารถหลีกเลี่ยงได้ด้วยการป้องกันง่ายๆ เช่น

- ใช้ตู้หรือขาตั้งตามคำแนะนำของผู้ผลิตโทรทัศน์
- ใช้เฉพาะเฟอร์นิเจอร์ที่สามารถรองรับโทรทัศน์ได้อย่างปลอดภัย
- ตรวจสอบให้แน่ใจว่าโทรทัศน์ไม่ยื่นออกมาเกินขอบเฟอร์นิเจอร์ที่รองรับ
- ห้ามวางโทรทัศน์บนเฟอร์นิเจอร์สูง (เช่น ตู้หรือชั้นหนังสือ) โดยไม่ยึดเฟอร์นิเจอร์และโทรทัศน์ไว้กับที่ยึดที่เหมาะสม
- ห้ามวางโทรทัศน์บนผ้าหรือวัสดุอื่นๆ ที่อาจอยู่ระหว่างโทรทัศน์กับเฟอร์นิเจอร์ที่รองรับ
- ให้ความรู้เด็กเกี่ยวกับอันตรายของการปีนขึ้นไปบนเฟอร์นิเจอร์เพื่อเอื้อมถึงโทรทัศน์หรือตัวควบคุม หากคุณยังคงใช้โทรทัศน์เครื่องเดิมและย้ายสถานที่ ควรพิจารณาสิ่งเดียวกันกับข้างต้น

การเชื่อมต่อสัญญาณต่างๆ

คำแนะนำการเชื่อมต่อ:

1. เมื่อคุณต้องเชื่อมต่ออุปกรณ์ที่รองรับฟังก์ชัน eARC โปรดเลือกอินเทอร์เฟซ HDMI-2
2. ใช้ตัวแปลง HDMI/DVI เชื่อมต่ออุปกรณ์ DVI ผ่านพอร์ต HDMI
3. ควรใช้อุปกรณ์ต่อพ่วงและสายเคเบิลที่อธิบายไว้ในคู่มือนี้แยกต่างหาก

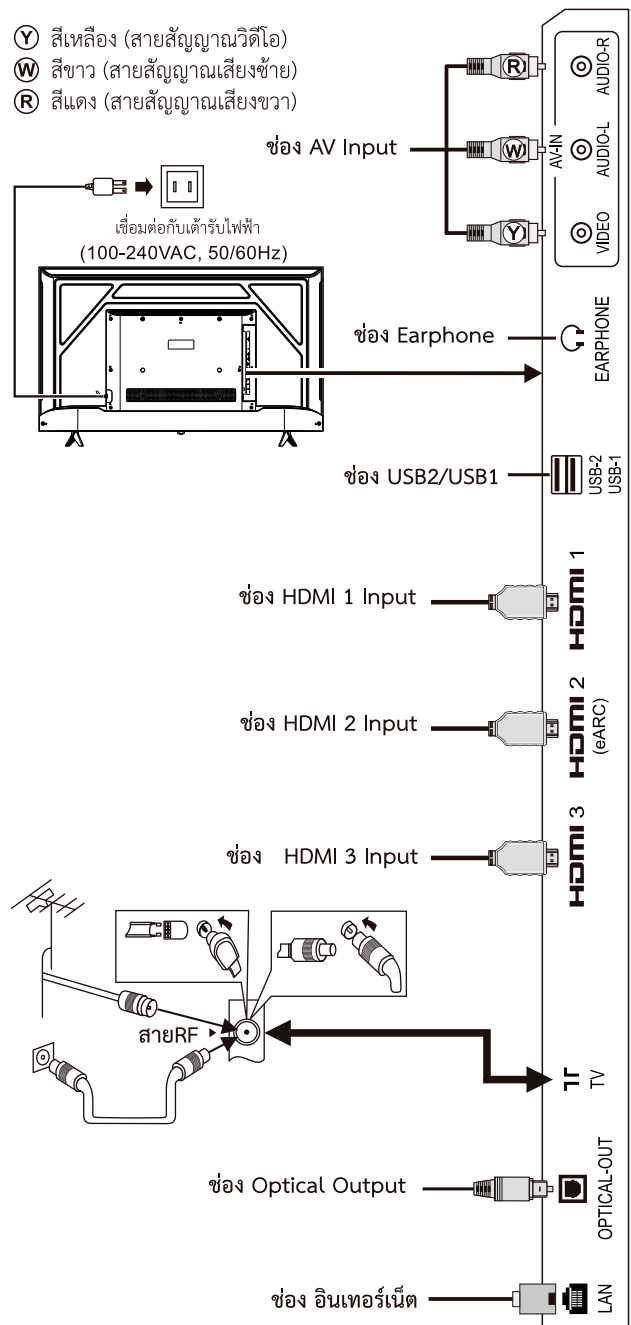




คำเตือน

เมื่อต้องการเชื่อมต่อเสาอากาศภายนอกกับช่องสัญญาณของทีวี ให้ปิดสวิตช์ไฟหลักของทีวีเสียก่อน หลีกเลี่ยงการนำเสาอากาศภายนอกเข้าใกล้กับสายไฟฟ้าแรงสูงเพื่อป้องกันอันตรายจากไฟฟ้าแรงสูง และเสาอากาศที่เชื่อมต่อกับทีวีต้องแยกจากการต่อลงกราวด์ มิฉะนั้นอาจทำให้เกิดอันตรายจากไฟไหม้หรืออันตรายอื่นๆ ได้

ปุ่มทีวี

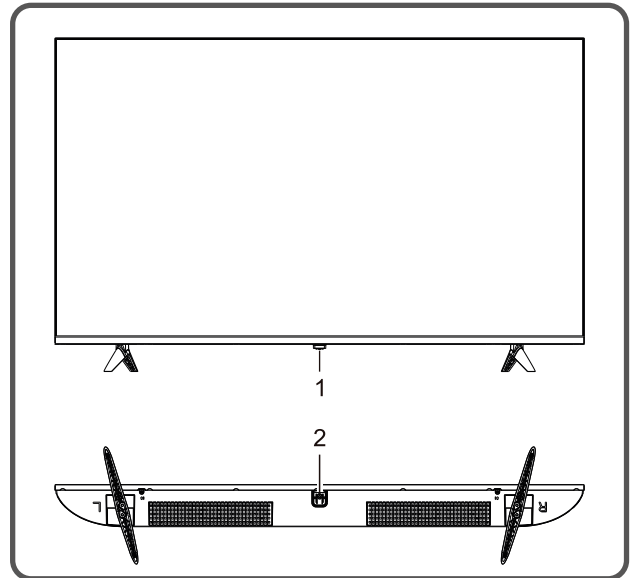

1. ไฟ LED แสดงสถานะ เปิด-ปิดและช่องสำหรับรับสัญญาณโมท

2. ปุ่ม ๒ :

การเข้าสู่โหมดเปิดเครื่องหรือสแตนด์บายด้วยปุ่ม ๒ :

① เมื่อเสียบปลั๊กเข้ากับเต้าเสียบไฟฟ้า คุณสามารถกดปุ่ม ๒ ทีวีเพื่อเปิดเครื่องได้

② ในสถานะเปิดเครื่อง กดปุ่ม ๒ ค้างไว้เพื่อสลับไปยังโหมดสแตนด์บาย

หลังจากเปิดทีวี:

① ในเมนูที่ไม่ใช่ OSD ให้กดปุ่ม ๒ เพื่อแสดงเมนูฟังก์ชัน

② ในเมนูฟังก์ชัน ให้กดรายการถัดไป และกดปุ่ม ๒ ค้างไว้เพื่อเลือกปุ่มที่จะยืนยันหมายเหตุ:

① ลักษณะที่ปรากฏอาจแตกต่างกันไปขึ้นอยู่กับรุ่นและผลิตภัณฑ์จริง

② โปรดใช้รีโมทคอนโทรลเพื่อการทำงานเพิ่มเติม

รีโมทคอนโทรล

ถอดฝาช่องใส่แบตเตอรี่ออก แล้วใส่แบตเตอรี่ AA (1.5V)
สองก้อนเข้าไป ตรวจสอบให้แน่ใจว่าขั้วของแบตเตอรี่เป็นไปตาม
เครื่องหมายขั้ว "+" และ "-" ในช่องใส่แบตเตอรี่ของรีโมทคอนโทรล

การจับคู่เมจิกรีโมท

เรียนรู้เพิ่มเติมเกี่ยวกับเมจิกรีโมท

คุณสามารถเลือกฟังก์ชันที่ต้องการได้อย่างง่ายดายและสะดวกโดยการเลื่อน
และคลิกเคอร์เซอร์บนหน้าจอทีวี เช่นเดียวกับการใช้เมาส์บนหน้าจอ
คอมพิวเตอร์

หมายเหตุ: คุณสามารถซื้อ เมจิกรีโมท แยกต่างหากได้

การจับคู่เมจิกรีโมท

คุณต้องจับคู่ เมจิกรีโมท กับ WebOS TV เพื่อใช้งาน ดังต่อไปนี้

1. เปิดทีวี หลังจากผ่านไปประมาณ 20 วินาที ให้ชี้รีโมทไปทางทีวี
แล้วกดปุ่ม []
2. รีโมทคอนโทรลจะลงทะเบียนโดยอัตโนมัติและข้อความการจับคู่เสร็จสิ้น
จะปรากฏบนหน้าจอทีวี


หมายเหตุ: หาก เมจิกรีโมท ไม่สามารถลงทะเบียนได้ ให้ปิดทีวีแล้วเปิดใหม่
จากนั้นลงทะเบียนอีกครั้ง

การลงทะเบียน เมจิกรีโมท ใหม่อีกครั้ง

หากลูกศรของ เมจิกรีโมท ไม่ปรากฏบนทีวี คุณจะต้องลงทะเบียนใหม่

1. ถูรีโมทคอนโทรลไปทางทีวีแล้วกดปุ่ม [GUIDE] ค้างไว้จนกว่าคำแนะนำ
จะปรากฏขึ้น
2. รีโมทคอนโทรลที่ลงทะเบียนไว้ก่อนหน้านี้จะถูกยกเลิกการลงทะเบียน
แล้วลงทะเบียนใหม่อีกครั้ง

การใช้เมจิกรีโมท

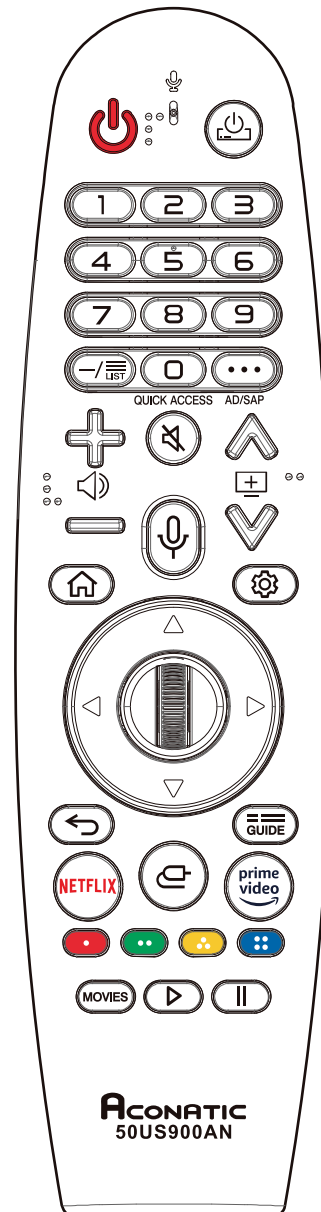

การใช้ปุ่มรีโมทคอนโทรล

กดปุ่มรีโมทคอนโทรล 1 ครั้ง เพื่อเข้าถึงฟังก์ชันต่างๆ

บางฟังก์ชันต้องกดปุ่มรีโมทคอนโทรลค้างไว้เพื่อเข้าถึงฟังก์ชันต่างๆ

ปุ่ม	ฟังก์ชัน
เปิด/ ปิด (⏻)	สลับระหว่างสถานะการเปิดเครื่องและสแตนด์บาย
⏻	คุณสามารถเปิด/ปิดกล่องรับสัญญาณทีวีได้
0~9	เลือกช่องหรือใส่หมายเลขช่อง

0 (QUICK ACCESS)	หมายเลขช่อง กดค้างเพื่อเข้าฟังก์ชัน Quick Access
—/LIST	ช่องรายการที่ถูกบันทึกไว้
••• (AD/SAP)	จะแสดงการดำเนินการอื่นๆ บนทีวี
VOL +/- (⊕ ⊖) (=)	ปรับระดับเสียง
🔇	เลือกเพื่อเปิด/ปิดเสียงจากทีวี
🔊	ตรวจสอบเนื้อหาที่แนะนำ กดปุ่มค้างไว้ขณะพูด เพื่อใช้ฟังก์ชันการจดจำเสียง หมายเหตุ: บริการแนะนำอาจไม่พร้อมให้บริการ ขึ้นอยู่กับประเทศที่คุณอยู่
CH+/- (⏮ ⏭)	เปลี่ยนช่องรายการทีวี
🏠	แสดงเมนูหน้าแรก
⚙️	เข้าสู่เมนูการตั้งค่าด่วน (# เข้าสู่เมนูการตั้งค่าทั้งหมด)
△, ▽, ◀, ▶	เลือกการตั้งค่าต่างๆ
Wheel (🕒)	เลื่อนขึ้นและลงเพื่อสลับช่องหรืออินเทอร์เน็ตเพช กดปุ่มนี้เพื่อยืนยันการดำเนินการ
↶	ย้อนกลับไปยังขั้นตอนก่อนหน้า
GUIDE	ดูผังรายการทีวี
NETFLIX	เปิดแอปพลิเคชัน Netflix (สามารถใช้งานได้หลังจากดาวน์โหลดเท่านั้น)
📌	เลือกสัญญาณขาเข้า(# เข้าสู่แผงควบคุมหลัก)
prime video	เปิดแอปพลิเคชัน Prime Video (สามารถใช้งานได้หลังจากดาวน์โหลดเท่านั้น)
• (ปุ่มสีแดง)	ปุ่มฟังก์ชันพิเศษ
•• (ปุ่มสีเขียว)	
••• (ปุ่มสีเหลือง)	
•••• (ปุ่มสีฟ้า)	
MOVIES	ค้นหาภาพยนตร์
▶ (play)	ปุ่มเล่น
⏸	ปุ่มหยุด

หมายเหตุ: ฟังก์ชันของรีโมทคอนโทรลแตกต่างกันไปในแต่ละประเทศ
โปรดตรวจสอบที่ตัวอุปกรณ์จริง

การใช้เมจิกรีโมท

- เมื่อคุณเขย่าเมจิกรีโมทไปทางซ้ายและขวา หรือหมุนเป็นวงกลม (🕒)
ในขณะที่ชี้ไปที่ทีวี เคอร์เซอร์จะปรากฏบนหน้าจอทีวี หากคุณเลื่อนสกรีนรีโมท
ไปในทิศทางที่ต้องการ เคอร์เซอร์จะเคลื่อนที่ตามการเคลื่อนไหวนั้น
- เลื่อน ไปยังตำแหน่งที่คุณต้องการและกดปุ่ม [🕒] เพื่อใช้งานฟังก์ชัน
- หากไม่ได้ใช้งานเป็นระยะเวลาหนึ่ง เคอร์เซอร์จะหายไป

- เมื่อตัวชี้หายไปจากหน้าจอ ให้เขย่าเมจิกรีโมทไปทางขวาและซ้าย
ตัวชี้จะปรากฏขึ้นอีกครั้ง
- ตัวชี้จะหายไปหากคุณกดปุ่ม [△]/[▽]/[◀]/[▶] และรีโมทจะทำงาน
เหมือนรีโมททั่วไป

หมายเหตุ:

- หากตัวชี้ไม่ตอบสนอง คุณสามารถรีเซ็ตตัวชี้ได้โดยการเลื่อนไปที่ขอบของหน้าจอ
- ใช้รีโมทคอนโทรลภายในระยะที่กำหนด (ภายใน 10 เมตร) อุปกรณ์อาจไม่ทำงาน
อย่างถูกต้องเมื่ออยู่นอกระยะการทำงานหรือเมื่อมีสิ่งกีดขวาง
- การสื่อสารอาจล้มเหลวได้ ขึ้นอยู่กับอุปกรณ์ต่อพ่วง (เราเตอร์ไร้สาย
เตาไมโครเวฟ ฯลฯ)
- การกระแทกอาจทำให้เมจิกรีโมททำงานผิดปกติได้
- ระวังอย่าให้กระแทกกับเฟอร์นิเจอร์ อุปกรณ์อิเล็กทรอนิกส์ หรือบุคคลอื่นๆ
ที่อยู่ใกล้เคียงขณะใช้เมจิกรีโมท

ข้อควรระวังในการใช้รีโมทคอนโทรล

- ควรชี้รีโมทคอนโทรลไปที่เซ็นเซอร์รีโมทคอนโทรลระหว่างการใช้งาน วัตถุที่
วางระหว่างรีโมทคอนโทรลและเซ็นเซอร์รีโมทคอนโทรลอาจขัดขวางการทำงาน
- ควรหลีกเลี่ยงการสัมผัสที่รุนแรงของรีโมทคอนโทรล นอกจากนี้ โปรดอย่า
วางหรือตั้งรีโมทคอนโทรลไว้กลางแดด เนื่องจากความร้อนอาจทำให้รีโมทคอน
โทรลเสียรูปได้
- รีโมทคอนโทรลใช้งานไม่ได้ เมื่อเซ็นเซอร์รีโมทคอนโทรลของเครื่องอยู่ภายใต้
แสงแดดหรือแสงที่จ้า ในกรณีนี้ โปรดเปลี่ยนมุมแสงของทีวีนี้ หรือใช้งานรีโมท
คอนโทรลใกล้กับเซ็นเซอร์รีโมทคอนโทรล
- แบตเตอรี่ที่อ่อนจะส่งผลกระทบต่อระยะการใช้งานของรีโมทคอนโทรล ในกรณีนี้ควร
เปลี่ยนแบตเตอรี่ใหม่ หากรีโมทคอนโทรลไม่ได้ใช้งานเป็นเวลานานหรือแบตเตอรี่
หมด โปรดถอดแบตเตอรี่ออกเพื่อป้องกันไม่ให้รีโมทคอนโทรลถูกกัดกร่อนจาก
การรั่วไหลของแบตเตอรี่ ซึ่งอาจส่งผลให้รีโมทคอนโทรลเสียหายและใช้งานไม่ได้
- โปรดอย่าใช้แบตเตอรี่ต่างชนิดกัน ไม่อนุญาตให้ใช้แบตเตอรี่เก่าและใหม่ร่วมกัน
ควรเปลี่ยนแบตเตอรี่ทีละคู่
- โปรดอย่าโยนแบตเตอรี่เข้ากองไฟหรือชาร์จแบตเตอรี่หรือทำลายแบตเตอรี่
อย่าชาร์จ ทำให้เกิดไฟฟ้าลัดวงจร ถอดประกอบหรือประกอบ ให้ความร้อนหรือ
เผาแบตเตอรี่ที่ใช้แล้ว โปรดกำจัดแบตเตอรี่ที่เสียแล้วตามข้อบังคับที่เกี่ยวข้อง
กับการปกป้องสิ่งแวดล้อม

การทำงานเบื้องต้น

หมายเหตุ

- 1.การทำงานของปุ่มนั้นหมายถึงการทำงานของรีโมทคอนโทรล สำหรับการทำงานของปุ่มควบคุมบนหน้าจอ โปรดดูคำอธิบายการทำงานของ "ปุ่มควบคุมหน้าจอ"
- 2.ปุ่ม [▶] หมายถึง ปุ่มทิศทาง และปุ่ม [▶] หมายถึง ปุ่มฟังก์ชันเล่น
- 3.เมนูการใช้งาน คำแนะนำในคู่มือนี้จะอธิบายตามโหมดทีวี การใช้งานในโหมดอื่นๆ จะคล้ายกับโหมดทีวี และผู้ใช้สามารถใช้เป็นข้อมูลอ้างอิงได้
- 4.ก่อนเปิดเครื่องโปรดตรวจสอบให้แน่ใจว่าแหล่งจ่ายไฟนั้นมีเสถียรภาพ
- 5.ซอฟต์แวร์ของแต่ละประเทศนั้นจะแตกต่างกันออกไป ซึ่งการทำงานของซอฟต์แวร์เฉพาะจะขึ้นอยู่กับสถานการณ์จริง
6. เนื่องจากผลิตภัณฑ์ได้รับการอัปเดตอย่างต่อเนื่อง ซอฟต์แวร์จึงได้รับการอัปเดตตลอดเวลา หากการทำงานของซอฟต์แวร์แตกต่างจากการทำงานจริง โปรดดูที่ผลิตภัณฑ์จริง

การเปิดเครื่อง/สแตนด์บาย

ก่อนเปิดเครื่องทีวี โปรดตรวจสอบให้แน่ใจว่าแหล่งจ่ายไฟมีเสถียรภาพ

เสียบปลั๊กไฟเข้ากับเต้าเสียบ จากนั้นกดปุ่ม [⏻] เพื่อเปิดทีวี กดปุ่ม [⏻] เพื่อเข้าสู่เมนูการใช้งานครั้งแรก

เลือกอุปกรณ์เคลื่อนที่หรือทีวีเพื่อเริ่มต้นการตั้งค่าตามต้องการ และกด [⏻] เพื่อเข้าไป จากนั้นทำตามคำแนะนำสำหรับการตั้งค่าหรือการดำเนินการเพิ่มเติม

เมื่ออยู่ในสถานะเปิดเครื่อง ให้กดปุ่ม [⏻] เพื่อสลับไปยังโหมดสแตนด์บาย

★ เคล็ดลับ: อุปกรณ์ที่ใช้เทคโนโลยีประหยัดพลังงาน อุปกรณ์จะเข้าสู่สถานะสแตนด์บายโดยอัตโนมัติเมื่อถึงเวลาพักเครื่องตามที่ระบุ


การเลือกแหล่งสัญญาณ

คุณสามารถเชื่อมต่ออุปกรณ์ต่างๆ กับทีวีและสามารถรับชมภาพคุณภาพสูงได้ หากอุปกรณ์มีพอร์ตเอาต์พุตวิดีโอ HDMI, AV และพอร์ตอื่นๆ คุณสามารถเลือกพอร์ตใดพอร์ตหนึ่งและเชื่อมต่อกับพอร์ตอินพุตที่เข้าร่วมกับทีวีได้ หลังจากเชื่อมต่อแล้ว ให้เปิดอุปกรณ์และกดปุ่ม [⏻] จากนั้นเลือก Home Dashboard และกดปุ่ม [⏻] เพื่อเข้าสู่ กดปุ่ม [Δ]/[▽]/[◀]/[▶] เพื่อเลือกสัญญาณอินพุต และกดปุ่ม [⏻] เพื่อยืนยัน



การใช้งานเมนู

กดปุ่ม [⏻] เพื่อแสดงเมนูหลักบนหน้าจอ:

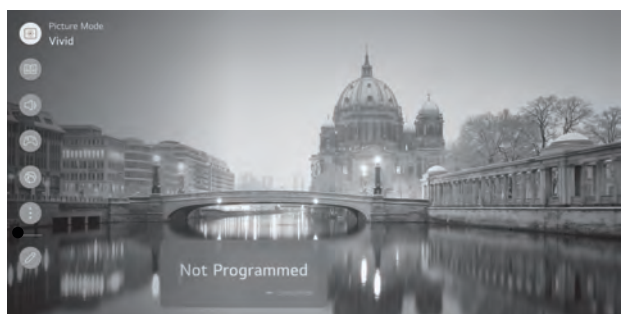

1. กดปุ่ม [Δ]/[▽] เพื่อเลือกเมนูจากโหมดภาพ, โหมดเสียง, ตัวเพิ่มประสิทธิภาพเกม, เครือข่าย, การตั้งค่าทั้งหมด, โหมดแก้ไข
2. กดปุ่ม [⏻] เพื่อเข้าสู่เมนูย่อย
3. กดปุ่ม [Δ]/[▽] เพื่อเลือกรายการในเมนู
4. กดปุ่ม [⏻] เพื่อยืนยัน
5. กดปุ่ม [Δ]/[▽]/[◀]/[▶] เพื่อปรับค่าหรือการตั้งค่า
6. กดปุ่ม [↶] เพื่อกลับไปยังเมนูย่อยก่อนหน้า

หมายเหตุ: รหัสผ่านเริ่มต้นสำหรับระบบล๊อคคือ 0000

สมาร์ททีวี


กดปุ่ม [⏻] เพื่อแสดงหน้าแรก



1. กดปุ่ม [△][▽][◀][▶] เพื่อเลือกแอปพลิเคชันและกดปุ่ม [⏻] เพื่อใช้งานแอปพลิเคชัน
2. กดปุ่ม [↶] เพื่อกลับไปยังเมนูย่อยก่อนหน้า

หมายเหตุ: ก่อนเข้าถึงอินเทอร์เน็ต โปรดเชื่อมต่อทีวีของคุณกับอินเทอร์เน็ต สามารถดูรายละเอียดเพิ่มเติมใน "การตั้งค่าเครือข่าย"

การตั้งค่าภาษา

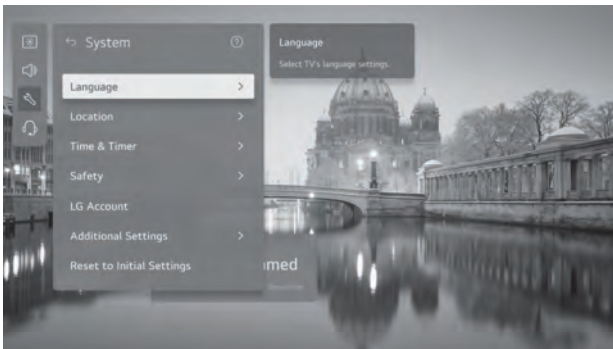


กดปุ่ม [⚙️] เลือก All Settings > General > System > Language และกดปุ่ม [⏻] เพื่อเข้าสู่การตั้งค่า กดปุ่ม [△][▽] เพื่อเลือกรายการ จากนั้นกดปุ่ม [△][▽] เพื่อเลือกภาษาที่ต้องการ จากนั้นกดปุ่ม [⏻] เพื่อยืนยัน

การจูนสัญญาณ

ปรับจูนรายการก่อนรับชมทีวีครั้งแรก ก่อนสแกน โปรดตรวจสอบให้แน่ใจว่าได้เชื่อมต่อเสาอากาศอย่างถูกต้อง

กดปุ่ม [⚙️] จากนั้นเลือก All Settings > General > Programmes > Programme Tuning & Settings จากนั้นกดปุ่ม [⏻] เพื่อยืนยัน

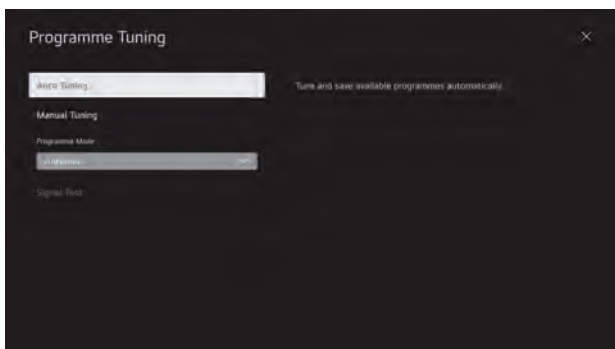

การจูนสัญญาณอัตโนมัติ

1. เลือก Auto Tuning และกดปุ่ม [⏻] จากนั้นตั้งค่าโหมดการปรับจูนโปรแกรมและตัวเลือกการปรับจูน จากนั้นเครื่องจะเริ่มค้นหาอัตโนมัติ

2. กดปุ่ม [↶] จากนั้นเลือก Yes ในหน้าจอที่แสดงขึ้นมาและกดปุ่ม [⏻] เพื่อข้ามการค้นหาปัจจุบันและกลับไปยังหน้าจอที่แล้ว

การจูนสัญญาณด้วยตนเอง


หมายเหตุ: ก่อนการปรับจูนด้วยตนเอง คุณควรตั้งค่าโหมดโปรแกรมก่อนลงนํ้าการปรับจูนเสาอากาศเพื่อเป็นตัวอย่าง

1. ตั้ง Programme Mode เป็น Antenna
2. เลือก Manual Tuning จากนั้นกดปุ่ม [⏻] เพื่อยืนยัน
3. สำหรับดิจิทัลทีวีแบบเสาอากาศ ตั้ง Frequency(kHz), Bandwidth(MHz) และ UHF CH. เลือก Add จากนั้นกดปุ่ม [⏻] เพื่อเริ่มการค้นหา
4. สำหรับทีวีแบบเสาอากาศ ตั้ง Storage, System, Band, Programme, Name เลือก Search Up หรือ Search Down จากนั้นกดปุ่ม [⏻] เพื่อเริ่มการค้นหา

การบันทึก

(หมายเหตุ: ฟังก์ชันนี้เป็นทางเลือก โปรดดูผลิตภัณฑ์จริง)

เชื่อมต่ออุปกรณ์จัดเก็บข้อมูล USB ที่มีพื้นที่ว่างอย่างน้อย 4GB อุปกรณ์จะต้องมีพื้นที่ว่างที่เหลืออย่างน้อย 1GB (ดูรายละเอียดเกี่ยวกับอุปกรณ์จัดเก็บข้อมูล USB ใน "Multimedia Player - Attention" ในคู่มือผู้ใช้)

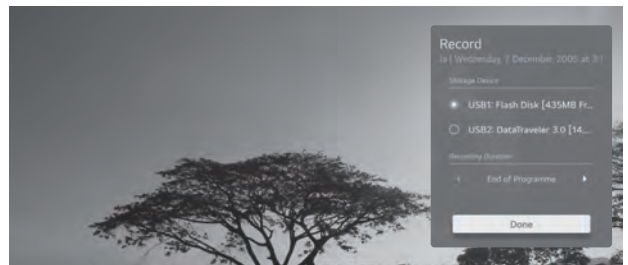

กดปุ่ม [▶](เล่น) เลือก [⏻] จากนั้นกดปุ่ม [⏻] เพื่อเข้าสู่เมนูบันทึกและกำหนดอุปกรณ์จัดเก็บและระยะเวลาการบันทึก หลังจากนั้นเลือก Done และกดปุ่ม [⏻] เพื่อเริ่มการบันทึก

กดปุ่ม [⏻] และเลือกอุปกรณ์จัดเก็บ เลือก Recordings จากนั้นกดปุ่ม [⏻] เพื่อแสดงไฟล์ที่บันทึกไว้ คุณสามารถเล่นหรือจัดการไฟล์ที่บันทึกได้


หมายเหตุ:

- การบันทึกแบบเรียลไทม์และแบบกำหนดเวลาสามารถทำได้เฉพาะรายการที่รับจากทีวีโดยตรงเท่านั้น
- ไม่สามารถบันทึกรายการจากกล่องรับสัญญาณทีวีได้
- เนื้อหาที่ได้รับการคุ้มครองจะไม่ได้รับการบันทึก
- สามารถบันทึกได้เฉพาะรายการออกอากาศที่คุณรับชมผ่านช่องอินเทอร์เน็ตเสาอากาศเท่านั้น

Live Playback

(หมายเหตุ: ฟังก์ชันนี้เป็นทางเลือก โปรดดูผลิตภัณฑ์จริง)

เมื่อผู้ใช้ออกจากโปรแกรมเป็นเวลาสั้นๆ ฟังก์ชันการเล่นสดจะระงับและแคชโปรแกรมที่กำลังเล่นไว้ใน USB HDD เมื่อผู้ใช้กลับมาเล่นต่อ โปรแกรมจะยังคงเล่นต่อไปได้

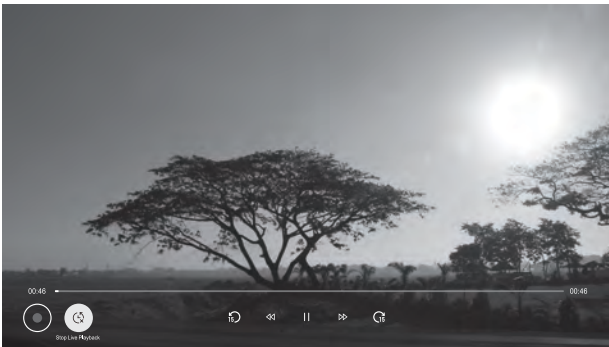

กดปุ่ม[▶] (เล่น) จากนั้น Live Playback จะแสดงขึ้นบนหน้าจอ เลือก II และกดปุ่ม[⏸] เพื่อหยุด เลือก ▶ และกด[⏸] เพื่อเล่นต่อ เลือก[⏹] และกดปุ่ม[⏸] เพื่อหยุดและออกจาก live playback

หมายเหตุ

- คุณไม่สามารถใช้แฟลชไดรฟ์ร่วมกับทีวีได้ ต้องเชื่อมต่อฮาร์ดดิสก์ที่มีความจุรวม 80 GB หรือมากกว่า
- หากพื้นที่ว่างในฮาร์ดดิสก์ไม่เพียงพอ ฟังก์ชัน Live Playback อาจทำงานไม่ถูกต้อง หากต้องการใช้ฟังก์ชัน Live Playback คุณต้องมีฮาร์ดดิสก์ที่มีพื้นที่ว่างอย่างน้อย 2.3 GB
- ฟังก์ชัน Live Playback นั้นสามารถเล่นโปรแกรมย้อนหลังได้นานถึง 2 ชั่วโมง ขึ้นอยู่กับความจุฮาร์ดดิสก์ที่เหลืออยู่ ระยะเวลาดังกล่าวอาจแตกต่างกันไปขึ้นอยู่กับภูมิภาคของคุณ
- ฟังก์ชัน Live Playback ใช้ได้เฉพาะกับรายการที่ออกอากาศผ่านช่องรับสัญญาณเสาอากาศเท่านั้น อย่างไรก็ตาม คุณไม่สามารถใช้ตัวเลือกนี้ขณะฟังรายการวิทยุได้

แอปพลิเคชัน

กดปุ่ม[⏮] จากนั้นกดปุ่ม[◀][▶] แล้วเลือกที่ App จากนั้นกดปุ่ม[⏸] เพื่อเข้าสู่หน้าเลือกแอปพลิเคชัน กดปุ่ม[△]/[▽]/[◀]/[▶] เพื่อเลือกแอปพลิเคชัน จากนั้นกดปุ่ม[⏸] เพื่อเข้าสู่แอปพลิเคชัน คุณสามารถเข้าสู่แอปพลิเคชันหรือติดตั้ง/อัปเดตแอปพลิเคชันได้

การตั้งค่าเครือข่าย



■ Wi-Fi

1. กดปุ่ม[⏮] จากนั้นเลือก Network > Wi-Fi Connection จากนั้นกดปุ่ม[⏸] เพื่อเข้าสู่หน้าเลือกสัญญาณ กดที่สัญญาณ[] และกด[⏸] เพื่อเปิด จากนั้นสัญญาณไร้สายจะถูกค้นหาโดยอัตโนมัติ เครือข่ายที่ถูกค้นหาโดยไม่มีสัญลักษณ์[] นั้นคือสามารถเชื่อมต่อเครือข่ายโดยไม่ต้องใช้รหัสผ่าน ส่วนเครือข่ายที่มีสัญลักษณ์[] นั้นคือคุณต้องใช้รหัสผ่านเพื่อเข้าถึงเครือข่าย
2. เลือกเครือข่ายที่คุณต้องการเชื่อมต่อในรายการเครือข่าย และกดปุ่ม[⏸]
3. พิมพ์รหัสผ่านการเชื่อมต่อเครือข่ายในช่องใส่รหัสผ่านทางคีย์บอร์ด จากนั้นเลือก Enter และกดปุ่ม[⏸] เพื่อเชื่อมต่อกับเครือข่าย

■ Ethernet

กดปุ่ม[⏮] จากนั้นเลือก Network > Wired Connection (Ethernet)

- หากเราเตอร์ที่เชื่อมต่อกับเครือข่ายรองรับคุณสมบัติ DHCP การเชื่อมต่อทีวีและเราเตอร์แบบมีสายจะเชื่อมต่อกับเครือข่ายโดยอัตโนมัติ
- หากไม่รองรับการตั้งค่าอัตโนมัติ เลือก Edit และกดปุ่ม[⏸] เพื่อเข้าสู่การตั้งค่าที่ตั้งค่าที่อยู่ที่ IP, Subnet Mask, Gateway, DNS SERVER จากนั้นเลือกเชื่อมต่อและกดปุ่ม[⏸] เพื่อยืนยัน

การใช้ฟังก์ชันทีวีผ่านการพูด

คุณสามารถเข้าถึงฟังก์ชันต่างๆ ของทีวีได้อย่างง่ายดายและรวดเร็วผ่านการจดจำเสียงพูด

1. กดปุ่ม[] บนรีโมทคอนโทรลค้างไว้แล้วพูดฟังก์ชันที่คุณต้องการเปิดใช้งานหรือค่าที่คุณต้องการใช้ในการค้นหา
2. เมื่อคุณปล่อยปุ่ม[] หลังจากพูด ฟังก์ชันที่เกี่ยวข้องจะเปิดใช้งาน

หมายเหตุ:

- บางรุ่นอาจไม่รองรับ
- ตำแหน่งคุณต้องสอดคล้องกับภาษาเพื่อให้ได้ผลลัพธ์การค้นหาที่แน่นอน ฟังก์ชันบางอย่างอาจไม่พร้อมใช้งานหากการตั้งค่าตำแหน่งและภาษาของคุณแตกต่างกัน
- คุณสามารถเปลี่ยนภาษาได้ตามการตั้งค่าภาษา ภาษาที่ใช้สำหรับพีเจอาร์การจดจำเสียงอาจมีการเปลี่ยนแปลงตามนโยบายการทำงานของบริการ
- รายละเอียดของบริการอาจแตกต่างกันไปตามรุ่น
- โปรดทราบว่าผู้ผลิตหรือผู้ให้บริการบุคคลที่สามอาจมีการเปลี่ยนแปลง หรือยุติบริการ AI ได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า

ข้อควรระวังในการจดจำเสียงพูด

- การจดจำเสียงต้องใช้เมจิรีโมทซึ่งบางรุ่นอาจไม่รองรับ
- หากต้องการใช้พีเจอาร์การจดจำเสียงทั้งหมด คุณจะต้องตั้งค่าโปรแกรม ภูมิภาค ฯลฯ มิฉะนั้น คุณจะไม่สามารถใช้พีเจอาร์บางอย่างได้
- คุณต้องมีการเชื่อมต่อเครือข่ายเพื่อใช้ฟังก์ชันการจดจำเสียงพูด
- หากคุณมีการเชื่อมต่อเครือข่าย คุณต้องยอมรับข้อกำหนดและเงื่อนไขในการใช้การจดจำเสียงพูด
- เพื่อควบคุมกล้องรับสัญญาณทีวีที่เชื่อมต่อกับทีวีด้วยพีเจอาร์การจดจำเสียง ให้ไปที่ All Settings > General > Devices > External Devices > Universal Control Settings เพื่อตั้งค่ารีโมทคอนโทรลทั่วไป
- นำให้ใช้เมจิรีโมทซึ่งไปอยู่กับกล้องรับสัญญาณทีวีหลังจากใช้เสียงพูด
- อัตราการจดจำเสียงพูดอาจแตกต่างกันไปขึ้นอยู่กับคุณลักษณะของผู้ใช้ (ระดับเสียง การออกเสียง สำเนียง และความเร็วในการพูด) และสภาพแวดล้อม (เสียงรบกวนและระดับเสียงทีวี)
- เพื่อให้จดจำคำพูดของคุณได้อย่างแม่นยำ คุณต้องออกเสียงคำต่างๆ อย่างช้าๆ และแม่นยำในระดับเสียงที่เหมาะสม โดยอยู่ห่างจากไมโครโฟนของเมจิรีโมท ประมาณ 10 ซม.
- หากคำพูดของคุณไม่ถูกจดจำอย่างถูกต้อง เทคโนโลยีการรู้จำคำพูดอาจทำงานแตกต่างไปจากที่คุณต้องการไว้ในตอนแรก

การใช้งานรีโมทคอนโทรลทั่วไป

ตั้งค่ารีโมทคอนโทรลแบบอัตโนมัติ

เมื่อคุณตั้งค่ารีโมทคอนโทรลทั่วไป คุณสามารถควบคุมอุปกรณ์ต่อพ่วง

(เครื่องเล่น Blu-ray/DVD, โฮมเธียเตอร์, กล้องรับสัญญาณทีวี ฯลฯ) ด้วยเมจิรีโมท แทนที่จะใช้รีโมทคอนโทรลเฉพาะ เชื่อมต่ออุปกรณ์ที่ต้องการตั้งค่าเข้ากับช่อง HDMI IN ของทีวี ทีวีจะจดจำอุปกรณ์ที่เชื่อมต่อเพื่อตั้งค่ารีโมทคอนโทรลทั่วไปโดยอัตโนมัติโดยไม่ต้องตั้งค่าด้วยตนเอง

หมายเหตุ:

- หลังจากตั้งค่ารีโมทคอนโทรลทั่วไปแล้ว คุณอาจต้องทำการตั้งค่าผู้ใช้เพิ่มเติม
- อาจต้องใช้เวลาหลายวันในการตั้งค่ารีโมทคอนโทรลทั่วไปให้เสร็จสิ้น
- ในบางรุ่น คุณสามารถตั้งค่ารีโมทคอนโทรลแบบทั่วไปได้หลังจากแปลงเป็นอินพุตของอุปกรณ์ที่เชื่อมต่อเท่านั้น
- คุณสมบัติการตั้งค่าอัตโนมัติสำหรับรีโมทคอนโทรลสากล (เชื่อมต่ออุปกรณ์อัตโนมัติ) อาจไม่ได้รับการรองรับ ขึ้นอยู่กับอุปกรณ์ที่เชื่อมต่อ ฯลฯ

การตั้งค่ารีโมทคอนโทรลทั่วไปด้วยตนเอง

หากรีโมทคอนโทรลแบบทั่วไปไม่ได้รับการตั้งค่าอัตโนมัติหรือเชื่อมต่อกับ AV IN คุณสามารถตั้งค่าด้วยตนเองได้

1. กดปุ่ม [ⓘ] จากนั้นเลือก All Settings > General > Devices > External Devices > Universal Control Settings

2. เลือกประเภทอุปกรณ์ที่คุณต้องการตั้งค่า

3. ตั้งค่ารีโมทคอนโทรลแบบทั่วไปให้เสร็จสมบูรณ์ตามคำแนะนำบนหน้าจอ คุณสามารถเปลี่ยนหรือยกเลิกการตั้งค่ารีโมทคอนโทรลแบบทั่วไปได้

หมายเหตุ:

- คุณสมบัตินี้ใช้ได้กับเมจิรีโมทเท่านั้น
- คุณสามารถซื้อเมจิรีโมทแยกต่างหากได้ หากไม่มีมาให้
- เมื่อเปลี่ยนแปลงการตั้งค่าบนอุปกรณ์ โปรดแน่ใจว่าได้เปิดเครื่องแล้วก่อน
- เมื่อเชื่อมต่อกับเครือข่ายแล้ว คุณสามารถตั้งค่ารีโมทคอนโทรลทั่วไปด้วยข้อมูลล่าสุดได้
- คุณสมบัตินี้ตั้งค่าด้วยตนเองสำหรับรีโมทคอนโทรลแบบทั่วไปไม่ได้รับการรองรับสำหรับคอนโซลเกม
- ปุ่มบางปุ่มอาจไม่ทำงาน ขึ้นอยู่กับรุ่นของอุปกรณ์ภายนอก
- ใช้เมจิรีโมทที่อุปกรณ์ที่คุณต้องการควบคุม ตรวจสอบให้แน่ใจว่ามีแบตเตอรี่ อยู่ด้านหลังอุปกรณ์เพื่อให้แน่ใจว่ารับสัญญาณจากรีโมทคอนโทรลได้ชัดเจน

คำชี้แจงที่สำคัญเกี่ยวกับบริการเครือข่าย

เนื้อหาและบริการทั้งหมดที่ได้รับจากโทรทัศน์เครื่องนี้ เป็นของบุคคลที่สามและได้รับการคุ้มครองโดยกฎหมายลิขสิทธิ์ สิทธิบัตร เครื่องหมายการค้า หรือสิทธิในทรัพย์สินทางปัญญาอื่นๆ เนื้อหาและบริการดังกล่าวมีไว้สำหรับวัตถุประสงค์ที่ไม่ใช่เชิงพาณิชย์เท่านั้น ห้ามใช้เนื้อหาหรือบริการใดๆ โดยไม่ได้รับอนุญาตจากเจ้าของเนื้อหาหรือผู้ให้บริการ

บริษัทของเราจะไม่รับผิดชอบใดๆ ต่อการสูญเสียหรือความเสียหายโดยตรงและทางอ้อม และโดยบังเอิญที่เกิดจากการเข้าถึงบริการเนื้อหาหรือข้อมูลใดๆ หรือซอฟต์แวร์ของบุคคลที่สามผ่านชุดนี้ของคุณหรือบุคคลที่สามไม่ว่าในกรณีใดๆ บริการของบุคคลที่สามอาจถูกเปลี่ยนแปลง ลบ หรือหยุดให้บริการโดยไม่ต้องแจ้งให้ทราบล่วงหน้า บริษัทของเราไม่แสดงหรือรับประกันความพร้อมใช้งานอย่างต่อเนื่องของบริการเหล่านี้

บริการหรือเนื้อหาบางอย่างในช่วงระยะเวลาหนึ่ง บริษัทของเราจะไม่รับผิดชอบต่อบริการที่เกี่ยวข้องกับบริการและเนื้อหาดังกล่าว นอกจากนี้ เราจะไม่รับผิดชอบต่อบริการลูกค้าใดๆ โปรดติดต่อผู้ให้บริการเนื้อหาและบริการที่เกี่ยวข้องโดยตรง หากคุณมีปัญหาหรือต้องการขอรับบริการเกี่ยวกับบริการหรือเนื้อหาที่เกี่ยวข้อง

เครื่องเล่นมัลติมีเดีย

กดปุ่ม [⏮] จากนั้นกดปุ่ม [Δ] [▽] [◀] [▶] เพื่อเลือก USB

■ การเล่นไฟล์ในอุปกรณ์ดิสก์ภายในเครื่อง: ก่อนเล่นไฟล์ในดิสก์ภายในเครื่อง ให้เสียบอุปกรณ์จัดเก็บข้อมูล USB เข้ากับอินเทอร์เฟซ USB

เลือกอุปกรณ์ดิสก์ภายในเครื่อง จากนั้นกดปุ่ม [⏮] เพื่อเข้าสู่ดิสก์ เลือกไฟล์ที่ต้องการแล้วกดปุ่ม [⏮] เพื่อเข้าสู่ไฟล์เตอร์ กด [Δ] [▽] [◀] [▶] เพื่อเลือกไฟล์เป้าหมาย จากนั้นกด [⏮] เพื่อเล่น กดปุ่ม [↶] เพื่อกลับไปยังหน้าก่อนหน้า

ข้อควรคำนึง:

อุปกรณ์จัดเก็บข้อมูล USB ที่มีโปรแกรมการบันทึกอัตโนมัติในตัวหรือใช้ไดรเวอร์ของตัวเองอาจไม่สามารถบันทึกได้

- อุปกรณ์จัดเก็บข้อมูล USB บางอย่างอาจไม่รองรับหรืออาจไม่ทำงานอย่างถูกต้อง
- หากคุณใช้สายต่อ USB อุปกรณ์จัดเก็บข้อมูล USB อาจไม่ได้รับการรู้จักหรืออาจไม่ทำงานอย่างถูกต้อง
- โปรดใช้เฉพาะอุปกรณ์จัดเก็บข้อมูล USB ที่ได้รับการฟอร์แมตด้วยระบบไฟล์ FAT32 หรือ NTFS ที่ให้มาโดยระบบปฏิบัติการ Windows

- ขอแนะนำให้คุณใช้ฮาร์ดไดรฟ์ USB ภายนอกที่มีแรงดันไฟฟ้า 5 V หรือต่ำกว่า และกระแสไฟฟ้า 500 mA หรือต่ำกว่า หากคุณใช้อุปกรณ์ที่ต้องการแรงดันไฟฟ้าหรือกระแสไฟฟ้าที่สูงที่กำหนด อุปกรณ์อาจไม่ทำงานอย่างถูกต้องเนื่องจากขาดกระแสไฟฟ้า
- ขอแนะนำให้คุณใช้ฮับ USB หรืออุปกรณ์จัดเก็บข้อมูล USB ที่มีแหล่งจ่ายไฟ
- ขอแนะนำให้อุปกรณ์จัดเก็บข้อมูลที่มีความจุ 32 GB สำหรับหน่วยความจำ USB และฮาร์ดดิสก์ 2 TB
- หากฮาร์ดดิสก์ ที่มีฟังก์ชันประหยัดพลังงานไม่ทำงาน ให้ปิดฮาร์ดดิสก์แล้วเปิดใหม่อีกครั้งเพื่อให้ทำงานได้อย่างถูกต้อง ดูข้อมูลเพิ่มเติมในคู่มือของฮาร์ดดิสก์
- ข้อมูลบนอุปกรณ์จัดเก็บข้อมูล USB อาจเสียหายได้ ดังนั้นขอแนะนำให้คุณสำรองไฟล์ที่สำคัญไว้ ผู้ใช้จะต้องรับผิดชอบในการจัดการข้อมูล ทางผู้ผลิตจะไม่รับผิดชอบต่อใดๆ
- กดปุ่ม [⏮] บนรีโมตคอนโทรล หากต้องการถอดอุปกรณ์จัดเก็บข้อมูล USB ให้กดปุ่ม [Δ] เพื่อเลือก Eject ซึ่งจะปรากฏขึ้นที่ด้านบนเมื่อคุณเลือกที่อุปกรณ์จัดเก็บข้อมูล USB ที่คุณต้องการถอดออก แล้วกดปุ่ม [⏮] เพื่อยืนยัน หากคุณถอดอุปกรณ์จัดเก็บข้อมูล USB ออกโดยไม่เลือก Eject อาจเกิดข้อผิดพลาดขึ้นในทีวีหรืออุปกรณ์จัดเก็บข้อมูลของคุณ
- เมื่อคุณเชื่อมต่ออุปกรณ์จัดเก็บข้อมูล USB ของระบบไฟล์ที่ไม่รองรับโดยทีวีเข้ากับพอร์ต USB IN ข้อความฟอร์แมตจะปรากฏขึ้น หากต้องการใช้อุปกรณ์จัดเก็บข้อมูล USB ที่เชื่อมต่ออยู่ คุณควรฟอร์แมตอุปกรณ์ก่อน หลังจากฟอร์แมตแล้ว ข้อมูลทั้งหมดในอุปกรณ์จัดเก็บข้อมูล USB จะถูกลบและฟอร์แมตเป็นระบบไฟล์ NTFS หรือ FAT32
- กดปุ่ม [⏮] บนรีโมตคอนโทรล เลือก USB ที่เชื่อมต่อจาก Home Dashboard > USB แล้วกดปุ่ม [⏮] เพื่อเข้าไป เลือกปุ่ม Format เพื่อฟอร์แมตอุปกรณ์จัดเก็บข้อมูล USB
- เมื่อเชื่อมต่ออุปกรณ์จัดเก็บข้อมูล USB สามารถสร้างไฟล์/โฟลเดอร์แบบสุ่มได้ บริการสมาร์ทีวี เช่น การบันทึกและเรียกคืนภาพย้อนหลัง

การแก้ไขปัญหาเบื้องต้น

■ มีจุดเล็กๆ ปรากฏในภาพโทรทัศน์ และมีสัญญาณรบกวนร่วมด้วย

1. ตรวจสอบว่าปลั๊กเสาสภาศหลวมหรือสายเคเบิลยังอยู่ในสภาพดี
2. ตรวจสอบชนิดของเสาสภาศ
3. ปรับทิศทางและตำแหน่งของเสาสภาศ
4. ลองใช้ตัวเพิ่มสัญญาณ

■ ไม่มีการแสดงภาพหรือเสียงบนหน้าจอ

ไฟแสดงสถานะไม่ติด
ตรวจสอบว่าสายไฟเชื่อมต่ออยู่หรือไม่

■ เกิดเส้นประหรือเส้นแถบในจอทีวี

ห้ามใช้ใคร่ป้ามไฟฟ้าร่วมกับโทรทัศน์ และปรับทิศทางของเสาสภาศให้ลดลง

■ เกิดภาพซ้อนบนจอทีวี

1. ตั้งเสาสภาศในทิศทางที่สูง
2. ปรับทิศทางของเสาสภาศ

■ รูปภาพไม่มีสี

เข้าไปที่ All Settings > Picture > Advanced Settings > Colour
เพื่อเพิ่มความลึกของสี

■ ทีวีไม่มีเสียงประกอบ

1. ปรับระดับเสียงให้พอเหมาะ
2. กดปุ่ม [MUTE] บนรีโมทคอนโทรลเพื่อยกเลิกโหมดปิดเสียง

■ ไม่มีภาพสัญญาณอินพุตปรากฏบนหน้าจอเครื่อง ไฟแสดงสถานะกำลังกะพริบ

1. ตรวจสอบว่าสายเชื่อมต่อสัญญาณหลวมหรือหลุดออกหรือไม่ แล้วเชื่อมต่อใหม่
2. เครื่องอาจจะอยู่ในโหมดสแตนด์บาย กรุณารับูตเครื่อง

■ ระยะเวลาควบคุมสั้นเกินไปหรือใช้งานไม่ได้

1. นำวัตถุออกเพื่อหลีกเลี่ยงการปิดกั้นหน้าต่างรับสัญญาณรีโมทคอนโทรล
2. เปลี่ยนแบตเตอรี่

■ การเล่นเกมโอ้เข้าเกินไป


1. โปรดอัปเดตแบนด์วิดท์เครือข่ายของคุณให้สูงขึ้น
การเปิดเครื่อง/สแตนด์บาย
2. โปรดลองแทนที่ด้วยที่อยู่อื่นเพื่อให้ได้ทรัพยากรที่ดีกว่า

■ เครื่องช้า, ระบบขัดข้อง, ไม่สามารถใช้งานได้

ให้ถอดปลั๊กไฟออกก่อน จากนั้นรอประมาณ 1-2 นาที แล้วจึงเสียบปลั๊กไฟอีกครั้ง
จากนั้นจึงเปิดทีวีอีกครั้ง

วิธีการติดตั้งขาทีวี

วางเครื่องในแนวราบ แยกฐานด้านซ้ายและขวาออกจากกัน และติดตั้งฐานด้านหน้าและด้านหลัง จากนั้นติดตั้งฐานที่ด้านล่างของฝาหลังเครื่องตามทิศทางลูกศรในภาพ จัดตำแหน่งรูสกรูให้ตรงกัน จากนั้นขันสกรูให้แน่น (สังเกตว่าฐานรุ่นนี้ต้องติดตั้งตามภาพ มิฉะนั้นจะไม่สามารถติดตั้งได้)

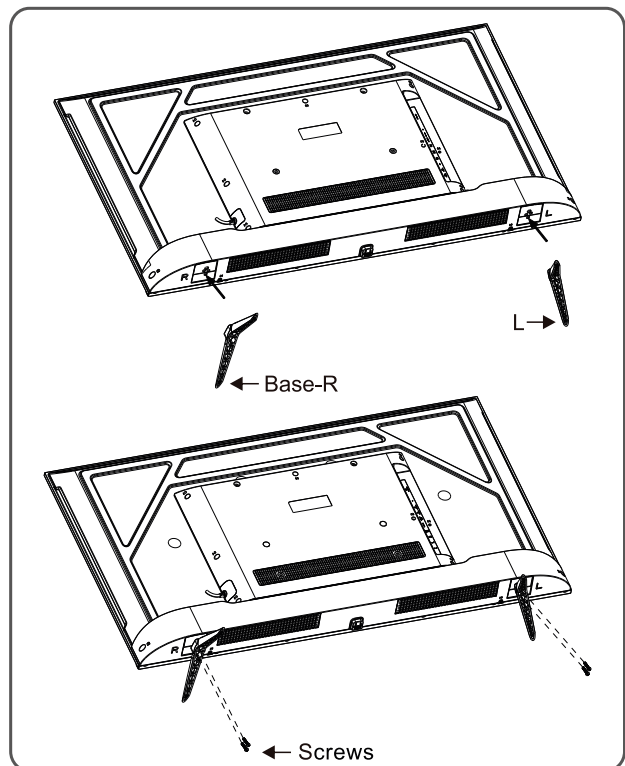



หมายเหตุ: ฐานและลักษณะของเครื่องจริงอาจแตกต่างจากภาพ โปรดดูที่อุปกรณ์จริง

การใช้งานทีวีติดผนัง



คำเตือน

- โปรดซื้อขาแขวนทีวีติดผนังที่เหมาะสมเมื่อติดตั้งทีวีบนผนัง
- ต้องแน่ใจว่าผนังสามารถรับน้ำหนักสำหรับการติดตั้งแบบยึดไม่น้อยกว่า 4 เท่าของน้ำหนักของทีวีและขาแขวนบนผนัง เพื่อหลีกเลี่ยงการตกหล่น
- โปรดดูคำแนะนำที่ให้มาพร้อมกับทีวีและขาแขวนบนผนังสำหรับการติดตั้ง
- ตรวจสอบให้แน่ใจว่าไม่มีสายเคเบิลหรือท่อร้อยสายในส่วนผนังที่จะติดตั้งตัวยึดบนผนัง
- โปรดมอบหมายให้ช่างมืออาชีพเป็นผู้ดำเนินการติดตั้งให้เสร็จสมบูรณ์ บริษัทจะไม่รับผิดชอบต่อบุคคล การบาดเจ็บส่วนบุคคล หรือความเสียหายที่เกิดจากการติดตั้งทีวีไม่ถูกต้อง

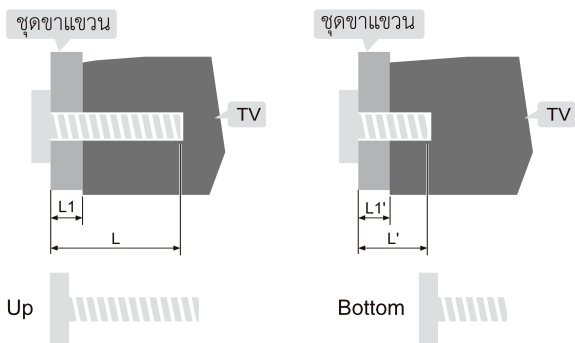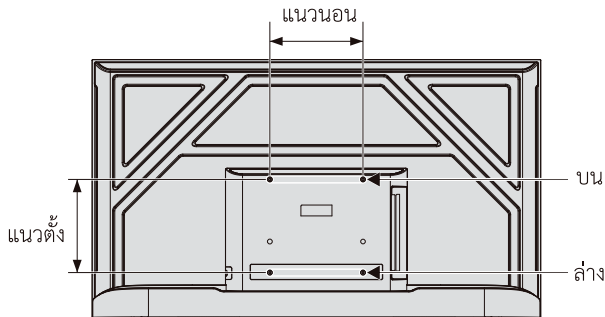

L1: ความหนาของผนัง

L1': ความหนาของผนัง

ระยะห่างระหว่างรูบนผนัง (H x V)(มม.)	สกรูที่ต้องการ(ความยาวที่แนะนำ)(มม.)
50 นิ้ว: 300 x 300	ด้านบน: 2 x M6 (18.5+L1≤L≤30+L1), สกรูสำหรับเครื่อง ด้านล่าง: 2 x ST6 (6+L1'≤L'≤9.5+L1'), สกรูแบบเกลียวปล่อย
55 นิ้ว: 300 x 300	ด้านบน: 2 x M6 (18.5+L1≤L≤30+L1), สกรูสำหรับเครื่อง ด้านล่าง: 2 x ST6 (6+L1'≤L'≤9.5+L1'), สกรูแบบเกลียวปล่อย

หมายเหตุ:

- หากพบสกรูในรูสำหรับติดผนังด้านหลังทีวี ก่อนที่จะติดตั้งตัวยึดติดผนัง ควรถอดสกรูออกแล้วเก็บไว้ใช้ในภายหลัง
- โปรดซื้อสกรูยึดผนังที่เหมาะสมกับการใช้งานจริง
- หากมีสกรูแบบเกลียวปล่อยในอุปกรณ์เสริม โปรดตัดสินใจว่าเหมาะสำหรับการใช้งานตามความเหมาะสมของตัวยึดผนังหรือไม่

50/55 นิ้ว

ST6 x 8 มม. สกรูแบบเกลียวปล่อย 2 ชิ้น

Contents

Safety Warning and Notice	1
Mounting and Connecting	3
Packing list	3
Mounting the TV set	3
Connecting peripheral equipment	4
Panel Control Keys	5
Remote Control	6
Pairing the Magic Remote	6
Using the Magic Remote	6
Basic Operations	8
Turning on/Standby	8
Signal source selection	8
Menu operation description	8
Smart TV	8
Language setting	9
Program scanning	9
REC option	9
Live Playback	10
APP	10
Network settings	10
Using TV functions through speech	10
Using universal remote control	11
Important statement on network services	12
Multimedia player	12
Troubleshooting	13
	13
Base Installation Instructions	14
Use of a TV wall mounting	15

Safety Warning and Notice


Thanks for choosing the high-performance and multifunctional intelligent LED TV produced by our company. This precious thing will bring you better audiovisual enjoyment. The design of this product has given consideration to factors affecting personal safety, and the product itself has gone through strict tests prior to delivery. However, improper operation may result in electric shock and fire disaster. To ensure safety, prolong the service life of this product, and make sure the best performance of this product can be given full play to, please read the manual and marking label carefully before using it and comply with the following safety instructions. Please keep the user manual for later use.

	Warning	May result in casualties
	Indicate the behaviors that must be prohibited	
	Attention	May result in personal injury or property losses
	Indicate the operations that must be performed	

Under Following Conditions

- Power failure or unstable voltage.
- Abnormal sound or smell from the device.
- AC power cord is damaged.
- TV set is damaged due to falling off, knock or impact.
- Any liquid or foreign matters enter into the TV set.

Turn off the TV set immediately, unplug the power cord from the power outlet, and contact authorized maintenance personnel.

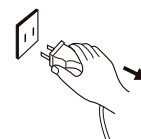

- **If coal gas or other flammable gases leak, do not unplug the power cord of the TV set or other electric appliances; instead, close the valve of the gas immediately and open the doors and windows.**



Warning



- Only use 100-240VAC, 50/60Hz power supply.
- All cables can be connected or pull out only after power supply is turned off.
- Do not fix the TV set on instable position, or else it may cause falling off, damage, or even fire.
- Do not put the TV set in the environment:
 1. With direct sunshine, moisture, overheating, undercooling or heavy dust;
 2. With flammable or explosive substance;
 3. With flammable or corrosive gas;
 4. In bathroom, kitchen, etc.
- Do not use damaged or improper power socket, and ensure that the plug and socket are connected properly.
- Keep the power plug and socket free of dust and metal pieces.
- Do not damage the power cord:
 1. It is prohibited to refit the power cord;
 2. Do not put heavy object on the power cord;
 3. Keep the power cord away from heat source;
 4. Do not drag the power cord when unplugging.
- Do not connect too many appliances to one power strip, or else it may cause fire due to high power consumption.
- Do not let open flame (e.g. lit candle) approach the TV set, or else it may cause electric shock or fire.
- Do not put the container filled with water on the TV set, to avoid electric shock or fire caused by water drop of splashing.
- Do not penetrate any sharp object, metal or liquid into the signal connector or air vents, to avoid short circuit and product damage as well as electric shock.
- The slots on the case is designed to release heat so as to assure that all inside components will not reach an extra high temperature and can work normally for a long time. Please do not cover the holes while place it.



Warning



- Do not touch the plug with wet hands, or else it may cause electric shock.
-  Do not turn on the TV set in thunderstorm weather; instead, unplug the power plug and antenna connector to avoid lightning strike.
-  Do not disassemble the TV set by yourself, or else it may cause electric shock or fire. Contact qualified personnel for maintenance.



Attention

- Do not let children climb onto the TV set.
- Keep the small accessories away from children's reach to avoid swallowing.
- If the TV set won't be used for a long time, please turn off the device and unplug the power cord.
- Before cleaning the TV set, unplug the power cord and wipe with soft cloth; do not use chemical reagents and avoid foreign substances entering into the device. The incorrect cleaning (such as cleaning fluid, water, etc) may lead to damage of product's appearance, erasing products printing information, even flow into the machine and damage components, cause machine can not display.
- To adjust the position or angle of the TV set, please disconnect all wires and move slowly to avoid falling off.
- Do not rub with hard object, knock at, bend or squeeze the screen.
- Do not use machine immediately after transferring machine to the places with high temperature from low temperature, which will cause fogging inside machine and failures.
- If the screen is broken and the liquid splashes on skin, please wash with clean water immediately for 15 minutes, and go to see your doctor.
- To carry the TV set with hands, please grasp the corners and hold the bottom; do not apply force on the panel.
- Displaying the same image for a long time or active image with fixed words, icons will leave "image persistence" on screen which



Attention

will not disappear after powering off for a long time. This undesirable phenomenon is not covered by warranty.

- **Healthy TV watching:**
 1. Watch in appropriate light; poor light or long time watching may hurt your eyes.
 2. Adjust the volume appropriate to avoid hurting your hearing.
- **Unplug the power cord of the device to cut off the power supply.**
- **If a power plug or appliance coupler is used as disconnecting device, it should ensure easy operation.**
- **Power plug shall be connected reliably. Loose power plugs may cause sparkle and fire.**
- **All the technical specifications in the user's manual and on the packaging are subject to changes without prior notice. If there is slight deviation between the user's manual and actual operation, the latter shall prevail.**



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Mounting and Connecting

Packing list


1. The TV set.
2. User Manual.
3. Remote control.
4. Power cord (or attached to TV set).


Mounting the TV set

Tips on Installation

- The TV set should be mounted near the AC power socket for easy plugging and unplugging.
- For your safety, please select appropriate wall mount bracket or base.
- To avoid hurt, it is required to place the TV set on stable plane, or fix on firm wall.
- Ask qualified personnel to mount the TV set on the wall. Improper mounting may result in instable TV set.
- Do not place the TV set at any place susceptible to mechanical vibration.
- Do not place the TV set at any place that insects may enter.
- Do not mount the TV set against air conditioner, or else the internal panel of the display may condense moisture and cause failure.
- Do not place the TV set at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave.

Mount on the base

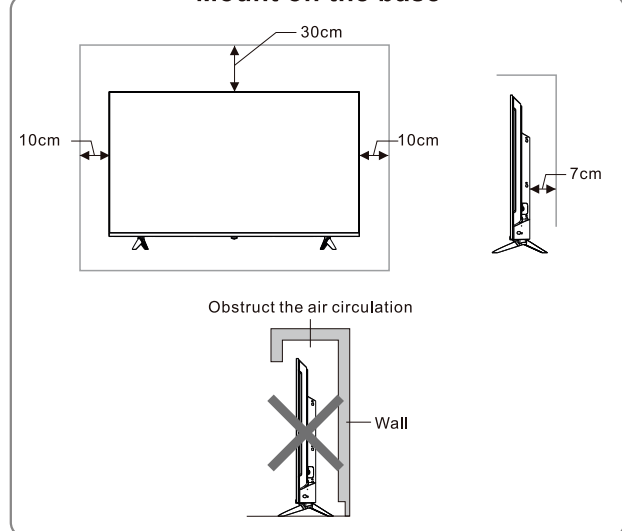

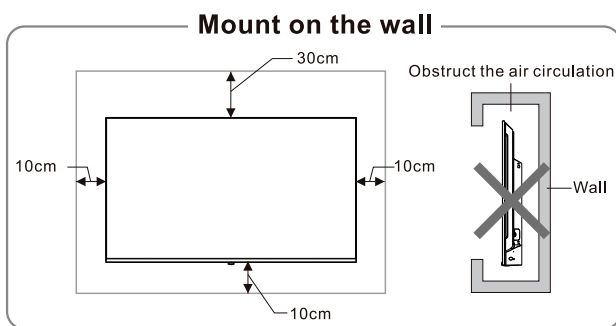

Ventilation

- Please keep this space at least around the TV, as shown in the figure.
- Do not cover the air vents or insert any object into the enclosure.
- Do not put the device in limited space, e.g. bookcase or embedded closet, unless the TV set is properly ventilated.



Warning

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:


- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Connecting peripheral equipment

Remark:

1. When you need to connect the device which support the eARC function, please select the HDMI-2 interface.
2. HDMI connector can realize DVI connector function with external HDMI/DVI commutator.
3. The peripheral equipment and cables described in this manual should be purchased separately.

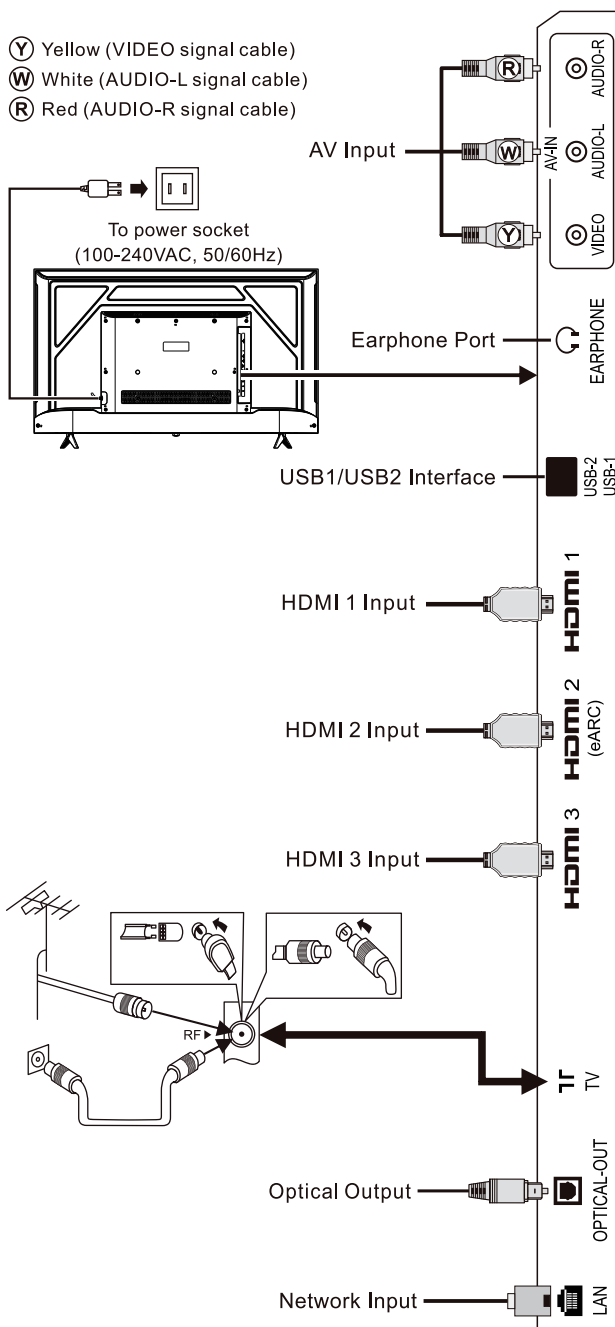




Warning

When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

Panel Control Keys

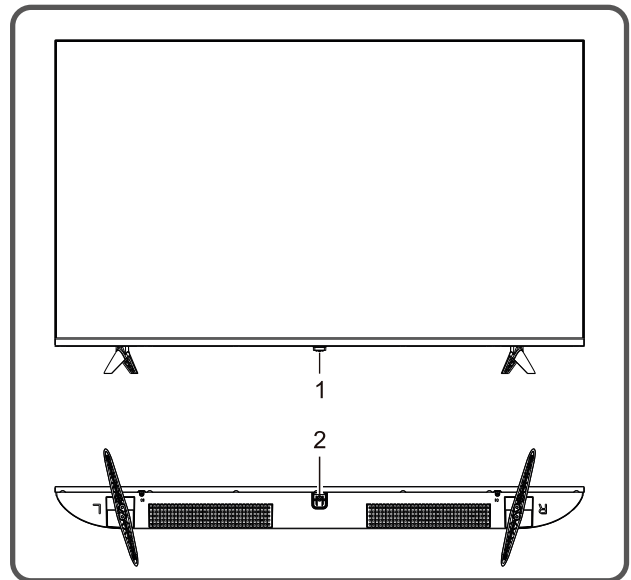

1. Power LED indicator and remote receiving window.

2. ⏻ key:

Entering power on or standby with the ⏻ key:

- ①. When insert the power code plug into the electrical socket, you can press ⏻ key to turn on the TV.
- ②. In the power-on state, long press ⏻ key to switch to standby mode.

After the TV is turned on:

- ①. In the non-OSD menu, press ⏻ key to display the function menu.
- ②. In the function menu, press ⏻ key to select the next item, and long press ⏻ key to confirm.

Remark:

- ①. The appearance varies depending on the model, and the actual product shall prevail.
- ②. Please use the remote control for more operation.

Remote Control

Remove the battery compartment cover and insert two AA (No.5, 1.5V) batteries; make sure the polarity of the batteries is in compliance with the polarity mark "+" and "-" in the battery compartment of the remote control.

Pairing the Magic Remote

Learn more about Magic Remote

You can select the functions you want easily and conveniently by moving and clicking the cursor on the TV screen, just as you would use a mouse on a computer screen.

Note: You can purchase the Magic Remote separately if it is not provided.

Pairing the Magic Remote

You must pair the Magic Remote with the webOS TV to use it. Pair the Magic Remote prior to use as follows:

1. Turn on the TV. After about 20 seconds, point the remote toward the TV and then press [⏻] key.
2. The remote control will automatically be registered, and the pairing completion message is displayed on the TV screen.


Note: If the Magic Remote failed to register, turn the TV off and back on, and then try to register again.

Re-registering the Magic Remote

If the Magic Remote's pointer does not appear on the TV, you must re-register it.

1. Hold the remote control towards the TV and long-press [GUIDE] key until the instruction appears.
2. The previously registered remote control is deregistered and then registered again.

Using the Magic Remote

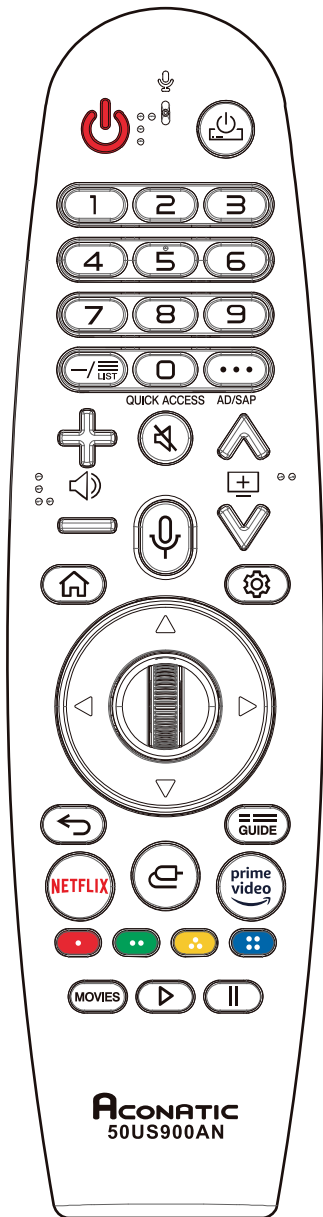

Using the remote control key

Briefly press remote control key to access various functions.

Press and hold remote control key to access various functions.

Keys	Function
Power (⏻)	Switch between working and standby status.
	You can turn on/off the power of the set-top box.
0~9	Select the channel or input numbers.

0 (QUICK ACCESS)	(# The QUICK ACCESS edit screen appears.)
	Checking the saved programmes.
 (AD/SAP)	It displays the more actions on the TV.
VOL +/- ()	It adjusts the volume level.
	Select to turn on/off the sound from the TV. (# Enter the Accessibility menu)
	Check out the recommended contents. Push and hold the key while speaking to use the voice recognition function. Note: Recommendation service may not be available depending on the countries you are in.
CH +/- ()	You can change the programme.
	Displays the Home menu. (# Displays the list used previously)
	Enters the Quick Settings menu. (# Enters the All Settings menu)
	Select items or adjust values.
Wheel ()	Scroll up and down to switch channels or interfaces. Press this key to confirm the operation.
	Move to the previous step. (# Closes the menu.)
	You can check the programme.
	Open Netflix application. (Can be used only after download.)
	Selects an input source. (# Entering into the Home Dashboard.)
	Open Prime Video application. (Can be used only after download.)
• (Red key)	Special function keys.
•• (Green key)	
••• (Yellow key)	
•••• (Blue key)	
MOVIES	Search Movies
(play)	Play.
	Pause.

Note: The functions of remote controls differ from country to country. Please refer to the actual device.

Using the Magic Remote

1. If you shake the Magic Remote left and right or turn its wheel () while pointing it at the TV, a pointer will appear on the TV screen. If you move the remote control to the direction you want, the pointer follows the movement.
2. Move the pointer to the location you want and press [] key to execute the function.
3. If the pointer has not been used for a certain period of time, it will disappear.

- When the pointer disappears from the screen, shake the Magic Remote right and left. It will then re-appear.
- The pointer will disappear if you press []/[]/[]/[] key, and the remote will work as a conventional remote.

Note:

- If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen.
- Use the remote control within the specified range (within 10 metres). The device may not function properly when outside the working distance or when an obstacle blocks the line of sight.
- Depending on the peripherals (wireless router, microwave oven, etc.), communication failures may occur.
- Impacts can cause the Magic Remote to malfunction
- Take care not to bump into nearby furniture, electronic equipment or other people when using the Magic Remote.

Precautions for using the remote control

- The remote control should be pointed at the remote control sensor during operation. An object placed between the remote control and the remote control sensor may impede normal operation.
- The remote control should be prevented from strenuous vibration. Besides, please do not set or place the remote control under direct sunshine, as heating power may result in deformation of the remote control.
- Remote control failure may occur when the remote control sensor of the main unit is under direct sunshine or strong lighting; in this case, please change the angle of lighting or this TV set, or operate the remote control near the remote control sensor.
- Low battery will influence the remote control distance, in which case, the battery should be replaced with a new one. If the remote control is going to be idle for a long time or the battery runs out, please take the battery out to prevent the remote control from being corroded by battery leakage which may result in damage and failure of the remote control.
- Please do not use batteries of different types. It is not allowed to use old and new batteries together; the batteries should be replaced in pair.
- Please do not throw the batteries into fire or charge or decompose the batteries; do not charge, short-circuit, disassemble/assemble, heat or burn used batteries. Please dispose the waste batteries pursuant to relevant regulations on environmental protection.

Basic Operations

Remark:

1. The keys operation refers to remote control operation, for panel control keys operation please refer to "**Panel Control Keys**" operation explanation.
2. The [▶] key means direction key and the [▶] (play) key means play function key
3. Menu Operation Instruction in this manual is explained according to TV mode. The operations in other modes are similar to the one in TV mode, and users can take it as reference.
4. Before power-on platform, please make sure that the power supply is stable.
5. The software of different countries is different. The specific software operation should be subject to the actual situation.
6. Because the product is constantly updated, the software is upgraded at any time, if the software operation is different from the actual operation, please refer to the actual product.

Turning on/Standby

Before power-on platform, please make sure that the power supply is stable.

Plug power cord into the electrical socket, then press [⏻] key to turn on the TV. Press the [⏻] key to enter the first use menu.

Select **Mobile Device** or **TV** to initialize settings as required, and press [⏻] to enter, then follow prompts for more settings or operations.

In power on state, press [⏻] key to switch to standby mode.

★ **Special Tips:** This device adopts energy saving technology. The device will enter standby state automatically at specified sleep time;


Signal source selection

You can connect various devices to the TV set and view high quality images. If the video device has HDMI, AV and other video output ports, you can select one of them and connect to corresponding input ports of the TV set. After connected, turn on the device and press [⏻] key, then select **Home Dashboard** and press [⏻] key to enter. Press [△]/[▽]/[◀]/[▶] key to select the input signal, and press [⏻] key to confirm.



Menu operation description

Press [⚙️] key to show the main menu on the screen:

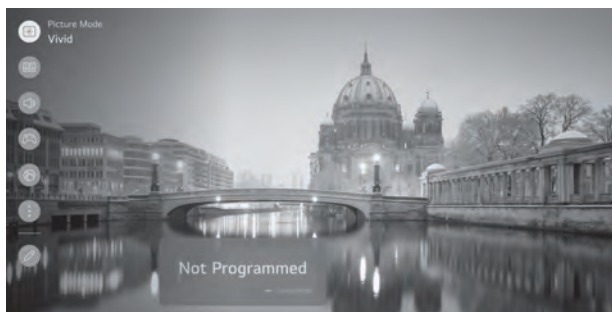


1. Press [△]/[▽] key to select a menu from **Picture Mode, Sound Mode, Sound Out, Game Optimiser, Network, All Settings, Edit Mode**.
2. Press [⏻] key to enter the submenu.
3. Press [△]/[▽] key to select an item in the menu.
4. Press [⏻] key to confirm.
5. Press [△]/[▽]/[◀]/[▶] key to adjust the value or setting.
6. Press [↶] key to return to previous submenu.

Note: The default password for the lock system is 0000.

Smart TV


Press [🏠] key to show the home page.

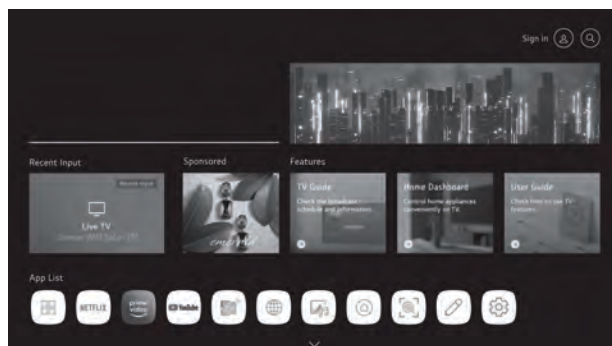

1. Press [Δ]/[∇]/[$\triangleleft$]/[$\triangleright$] key to select an application and press [Enter] key to run the application;
2. Press [$\leftarrow$] key to return to previous page.

Note: Before accessing the Internet, please connect your TV set to the Internet. Refer to "**Network Settings**" for details.

Language setting

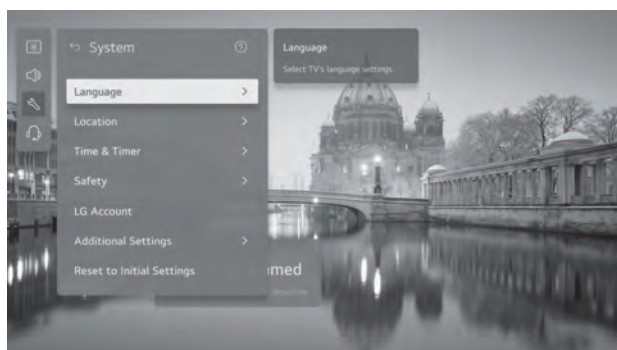


Press [Settings] key, select **All Settings > General > System > Language** and press [Enter] key to enter. Press [Δ]/[∇] key to select the item, and press [Enter] key to enter. Then press [Δ]/[∇] key to select the desired language and press [Enter] key to confirm.

Program scanning

Tune the programs before watching the TV for the first time. Before scanning, please make sure that the antenna has been connected properly .

Press [Settings] key, select **All Settings > General > Programmes > Programme Tuning & Settings**, then press [Enter] key to enter.

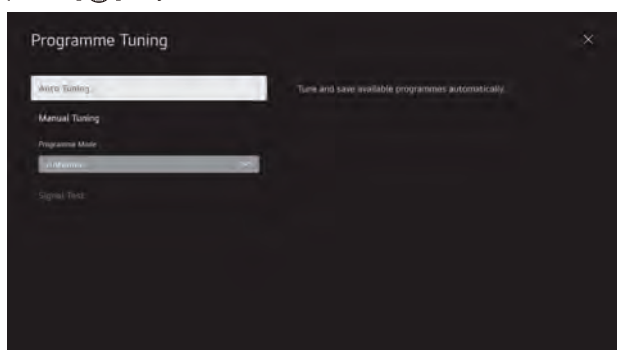

Auto Tuning

1. Select **Auto Tuning** and press [Enter] key, then set the programme tuning mode and tuning options. then the machine starts auto search.

2. Press [$\leftarrow$] key, then select **Yes** in the popup window and press [Enter] to skip current search and back to the previous page.

Manual Tuning

Note: before the manual tuning, you should set programme mode.


Take antenna manual tuning as an example.

1. Set **Programme Mode** to **Antenna**.
2. Select **Manual Tuning**, then press [Enter] key to enter.
3. For **Antenna DTV**, set the **Frequency(kHz)**, **Bandwidth(MHz)** and **UHF CH..** Select **Add**, then press [Enter] key to start searching.
4. For **Antenna TV**, set the **Storage**, **System**, **Band**, **Programme**, **Name**. Select **Search Up** or **Search Down**, then press [Enter] key to start searching.

REC option

(**Note:** This function is optional, please refer to the actual product.)

Connect a USB storage device with at least 4GB of total space. The device must have at least 1GB of available space (Refer to "**Multimedia player** → **Attention**" in the User's Manual for details on USB storage devices).

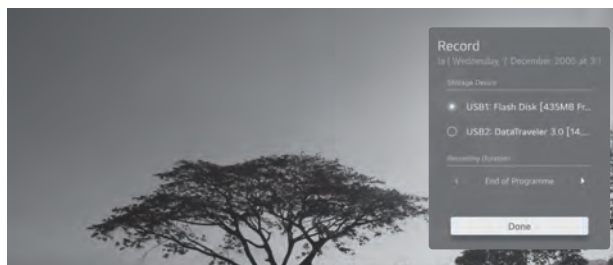

Press [$\triangleright$](play) key, and select $\odot$, then press [Enter] key to enter **Record** menu, and set storage device and recording duration. After that, select **Done**, then press [Enter] key to start recording

Press [$\leftarrow$] key, and select storage device. Select **Recordings** and press [Enter] key to display the recorded files. You can play or manage the files.


Note:

- Real-time and scheduled recordings are available only for programmes received directly by the TV.
- Programmes from the set-top box cannot be recorded.
- Protected content is not recorded.
- Only broadcast programmes you view through the antenna input terminal can be recorded.

Live Playback

(**Note:** This function is optional, please refer to the actual product.)

When user leaves program for a short time, live playback function can suspend and cache the playing program to USB HDD. When user resumes playing, the program can continue to be played.

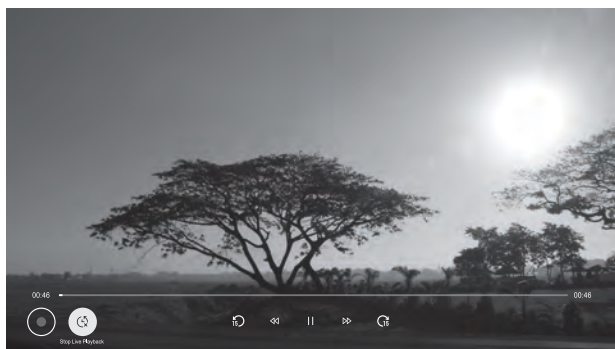

Press [▶](play) key, then Live Playback option menu shows on the screen. Select [⏸] and press [⏻] key to pause the program. Select [▶] and press [⏻] key to resume play program. Select [⏹] and press [⏻] key to stop and quit live playback.

Note:

- You cannot use a USB stick. Connect a USB HDD with 80 GB or more of total storage.
- If there is not enough remaining space in the USB HDD, Live Playback may not work properly. To use the Live Playback function, you need the USB HDD which has at least 2.3GB of free space.
- With the Live Playback function, you can play a program back for up to two hours depending on remaining USB HDD capacity. This time may vary depending on your region.
- The Live Playback function can be used only for broadcast programmes you view through the antenna input terminal. However, you cannot use this option while listening to a radio programme.

APP

Press [⏻] key, then press [◀]/[▶] key to select the **Apps** and press [⏻] key to enter. Then press [△]/[▽]/[◀]/[▶] key to select an application, and press [⏻] key to enter, then you can enter the application, or install/update the application.

Network settings



■ Wi-Fi

1. Press [⚙️] key, then select **Network > Wi-Fi Connection** and press [⏻] key to enter. Select [🔴] icon and press [⏻] key to turn it on, then the wireless network signals searched by your machine list automatically. The network searched without [🔒] icon indicates that the machine connects to the network without a password. The network with [🔒] icon indicates that it is encrypted and you must enter the correct password to connect to the network.
2. Select the network you want to connect to in the network list, and press [⏻] key;
3. Type network connecting password in the box and exit keyboard, then select **Enter** and press [⏻] key to connect to network.

■ Ethernet

Press [⚙️] key, then select **Network > Wired Connection (Ethernet)**.

- If the router connected to the network supports the DHCP feature, connecting the TV and router by wire will automatically connects to the network.
- If the automatic setup is not supported, you can select **Edit** and press [⏻] key to enter. Set the **IP Address, Subnet Mask, Gateway, DNS SERVER**, then select **Connect** and press [⏻] key to confirm.

Using TV functions through speech

You can easily and quickly access the TV's various functions through speech recognition.

1. Press and hold [🗣️] key on the remote control and speak out the function you want to launch or the keyword you want to use for your search.
2. Once you release [🗣️] key after your speech input, the corresponding function is launched.

Note:

- Some models may not be supported.
- Your Location must correspond to the language for exact search results. Some functions may not be available if your location settings and language settings are different.
- You can change the language according to **Language setting**. The languages available for voice recognition features may be changed in accordance with service operation policy.
- Details of service may vary by model.
- Please note that AI Service may be changed, removed or terminated, without notice, by manufacturer or its third party providers.

Cautions for speech recognition

- Voice recognition requires a Magic Remote, which may not be supported by certain models.
- To use all speech recognition features, you need to set your programmes, region, etc. Otherwise, you cannot use some features.
- You must have a network connection to use the speech recognition feature.
- If you have a network connection, you need to accept the terms and conditions to use speech recognition.
- To control the set top box connected to the TV with the voice recognition feature, go to **All Settings > General > Devices > External Devices > Universal Control Settings** to set up a universal remote control.
- It is recommended to point Magic Remote toward the set top box after the voice input.
- The rate of speech recognition may vary depending on the characteristics of the user (voice volume, pronunciation, accent, and talking speed) and the surroundings (noise and TV volume).
- To achieve accurate recognition of your speech, you must pronounce words in a slow and accurate manner at an appropriate voice volume at a distance of about 10 cm away from the Magic Remote's microphone.
- If your speech is not recognized properly, speech recognition may operate differently than you originally intend.

Using universal remote control

Automatically setting the universal remote control

When you set up the universal remote control, you

can control the peripherals (Blu-ray/DVD player, home theater, set-top box, etc.) with the Magic Remote rather than using their dedicated remote controls. Connect the devices to be set to the TV's HDMI IN, and turn the power of the device on. The TV will recognise the connected device to automatically set the universal remote control without manual setting.

Note:

- After setting the universal remote control, you may need to do some additional user settings.
- It may take several seconds to complete the settings for the universal remote control.
- In some models, you can set the universal remote control only after converting to an input of a connected device.
- Depending on the connected device, the automatic setting feature for universal remote control (automatic device connection) may not be supported.

Manually setting the universal remote control

If the universal remote control is not automatically set or it is connected to the AV IN, you can manually set it.

1. Press [] key, then select **All Settings > General > Devices > External Devices > Universal Control Settings**.

2. Select the type of the device you want to set.

3. Complete the settings for the universal remote control according to the guidance on the screen. You can change or cancel the universal remote control settings.

Note:

- This feature can only be used with the Magic Remote.
- You can purchase the Magic Remote separately if it is not provided.
- When changing settings on a device, make sure it is powered on first.
- Once connected to the network, you can set up the universal remote control with the latest updated information.
- The manual setting feature for universal remote control is not supported for a game console.
- Some keys may not work depending on the model of the external device.
- Point the Magic Remote at the device you want to control. Make sure that there are no objects in front of the device to ensure that the remote control signal is well received.

Important statement on network services

All contents and services obtained from this TV set belong to the third party and are protected by laws on copyright, patent right, trademark right and/or other intellectual property right. The said contents and services are only for your non-commercial purposes. It is not allowed to use any content or service without the authorization of the content owner or the service provider.

Our company will undertake no liability for any direct, indirect and accidental losses or damages caused by your or a third party's access to any content or service or any information or any third party software through this set under any circumstances.

Third party service may be changed, deleted or stopped without prior notice. Our company neither implies nor guarantees the continuous availability of some service or content within any period of time.

Our company is not held responsible for services related to the said service and content. Besides, we will not bear any liability for client service. Please directly contact relevant content and service providers if you have any problem and service request concerning relevant service or content.

Multimedia player

Press [] key, then press []/[]/[]/[] key to select **USB**.

■ **Playing Files in local disk device:** Before playing files in the local disk, insert the USB mass storage device into the USB interface.

Select local disk device in the file directory, then press [] key to enter. Select the target folder and press [] key to enter the folder. Press []/[]/[]/[] to select the target file, then press [] to play it. Press [] key to return to previous page.

Attention:

A USB storage device that has a built-in automatic recognition programme or uses its own driver might not be recognizable.

- Some USB storage devices may not be supported or may not work properly.
- If you use a USB extension cable, the USB storage device may not be recognized or may not work properly.
- Please use only USB storage devices formatted with the FAT32 or NTFS file system provided by Windows OS.

- It is recommended that you use an external USB HDD with a rated voltage of 5 V or less and a rated current of 500 mA or less. If you use a device requiring a higher voltage/current than the rated voltage/current, it may not operate properly due to lack of current.
- It is recommended that you use a USB hub or USB storage device with a power supply.
- We recommend using a storage device with a capacity of 32 GB for the USB memory and 2 TB or less for the USB hard disk.
- If a USB HDD with power-saving function does not work, turn the hard drive off and on again to make it work properly. See the owner's manual for the USB HDD for more information.
- Data on a USB storage device may be damaged, so it is recommended that you back up any important files. Users are responsible for data management. The manufacturer bears no responsibility.
- Press [] key on the remote control. To remove the USB storage device, press [] key to select **Eject** which appears at the top when you focus on the USB storage device you want to remove, and press [] key to confirm. If you disconnect the USB storage device without selecting **Eject**, an error may occur in your TV or storage device.
- When you connect a USB storage device of a file system not supported by the TV to the USB IN port, the format message appears. To use the connected USB storage device, you should format the device first. After format, all the data of USB storage device will be deleted and formatted as NTFS or FAT32 file system.
- Press [] key on your remote control. Select the connected USB from **Home Dashboard > USB**, and press [] key to enter. Select **Format** button to format the USB storage device.
- When connecting a USB storage device, a random file/folder can be created to provide Smart TV services such as the saving and retrieving of thumbnail images.

Troubleshooting

- **Snowflake spots occur in the TV images and there is noise in accompanying sound.**
 1. Check if the antenna plug is loose or the cable is in good condition.
 2. Check the antenna type.
 3. Adjust the direction and position of the antenna.
 4. Try to use signal enhancer.
- **There is neither display nor sound on the screen. The indication light is not on.**

Check if the power line is connected.
- **Dotted line or strip disturbance occurs in TV images.**


Do not use electric hair dryer aside the TV set and adjust the antenna direction to reduce disturbance.
- **Double images occur on the TV screen.**
 1. Use high oriented antenna.
 2. Adjust the direction of the antenna.
- **The images are colorless.**

Enter **All Settings > Picture > Advanced Settings > Colour** setting to increase colour depth.
- **The TV has no accompanying sound.**
 1. Adjust the volume to a proper degree.
 2. Press [MUTE] key on the remote control to cancel mute mode.
- **No signal input images show on the machine screen. The indicator light is blinking.**
 1. Check if the signal connecting cable is loose or falls off. Reconnect it.
 2. The machine may be in standby mode, please reboot.
- **The remote control distance is short or out of control.**
 1. Remove the object to avoid blocking the remote control receiving window.
 2. Replace the battery.
- **Online video play is very slow.**
 1. Please upgrade your network bandwidth to a higher one.
 2. Please try to replace with other addresses to obtain better resources.
- **Machine is slow, system crash, can't operate the machine.**

Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the TV again.

Base Installation Instructions

Put the machine flat first, distinguish left and right base and base installation front and back direction, then install the bases in the bottom of the machine back cover as arrow direction in figure. Align screw holes, then fasten screws (notice that base module has to be adjusted at figure status, otherwise it cannot be installed in.)

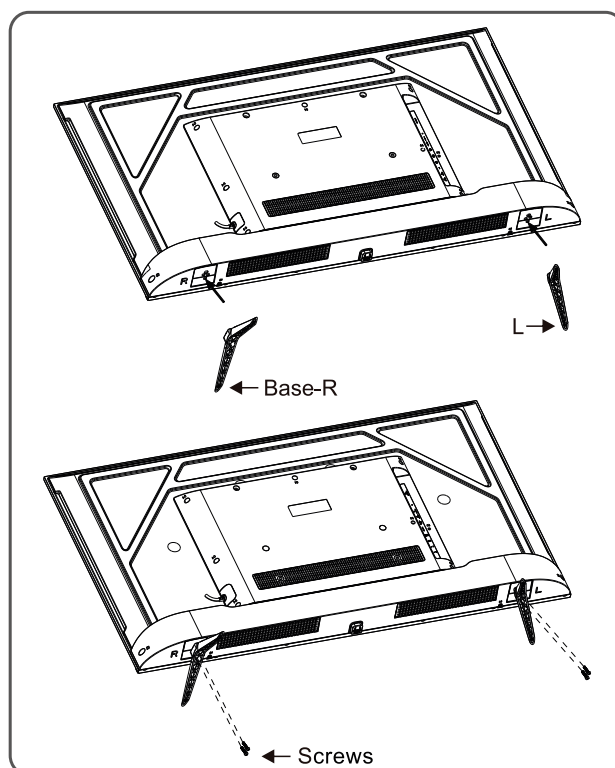

Remark: The actual base and machine appearance may be different from pictures; please refer to the actual device.

Troubleshooting

- **Snowflake spots occur in the TV images and there is noise in accompanying sound.**
 1. Check if the antenna plug is loose or the cable is in good condition.
 2. Check the antenna type.
 3. Adjust the direction and position of the antenna.
 4. Try to use signal enhancer.
- **There is neither display nor sound on the screen. The indication light is not on.**

Check if the power line is connected.
- **Dotted line or strip disturbance occurs in TV images.**


Do not use electric hair dryer aside the TV set and adjust the antenna direction to reduce disturbance.
- **Double images occur on the TV screen.**
 1. Use high oriented antenna.
 2. Adjust the direction of the antenna.
- **The images are colorless.**

Enter **All Settings > Picture > Advanced Settings > Colour** setting to increase colour depth.
- **The TV has no accompanying sound.**
 1. Adjust the volume to a proper degree.
 2. Press [MUTE] key on the remote control to cancel mute mode.
- **No signal input images show on the machine screen. The indicator light is blinking.**
 1. Check if the signal connecting cable is loose or falls off. Reconnect it.
 2. The machine may be in standby mode, please reboot.
- **The remote control distance is short or out of control.**
 1. Remove the object to avoid blocking the remote control receiving window.
 2. Replace the battery.
- **Online video play is very slow.**
 1. Please upgrade your network bandwidth to a higher one.
 2. Please try to replace with other addresses to obtain better resources.
- **Machine is slow, system crash, can't operate the machine.**

Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the TV again.

Base Installation Instructions

Put the machine flat first, distinguish left and right base and base installation front and back direction, then install the bases in the bottom of the machine back cover as arrow direction in figure. Align screw holes, then fasten screws (notice that base module has to be adjusted at figure status, otherwise it cannot be installed in.)

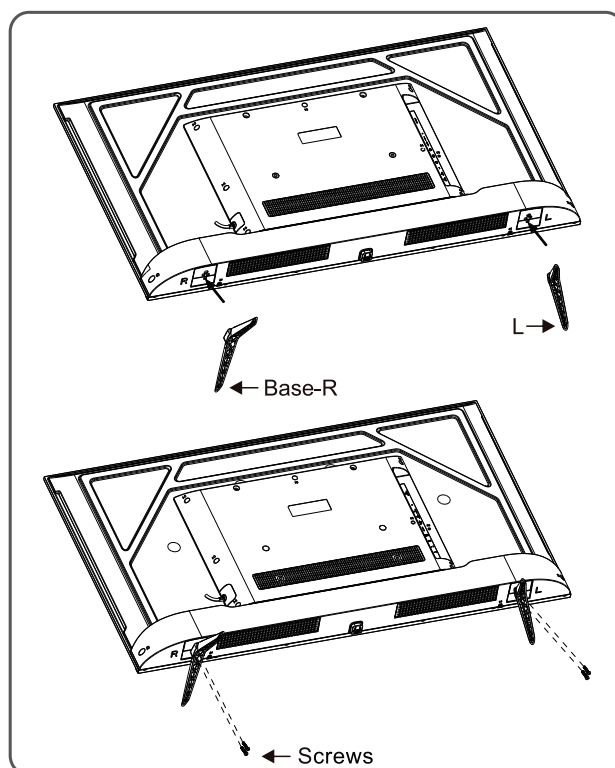


Remark: The actual base and machine appearance may be different from pictures; please refer to the actual device.

ACONATIC

บริษัท ไอเอฟ โอเรียนท์ ไทย จำกัด (มหาชน)
HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161-162 ซอยงามวงศ์วาน47(จีนเซก2) โทร. 0-2954-5281 , 0-2580-6955
แขวงทุ่งสองห้อง เขตหลักสี่ Core Line. 02-591-9444 , 02-589-5115
กรุงเทพมหานคร 10210

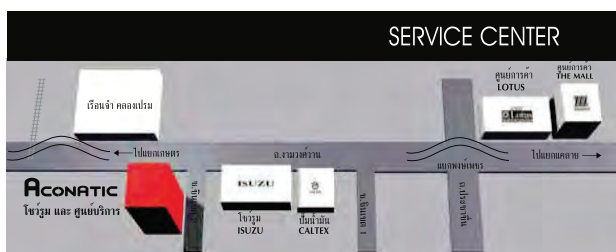

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของสินค้าและรายละเอียดสินค้าโดยมีต้องแจ้งให้ทราบล่วงหน้า