

Aconatic

คู่มือการใช้งาน LED TV รุ่น 65US410AN

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งานโทรทัศน์
เก็บคู่มือนี้ไว้ใช้อ้างอิง

สารบัญ

ข้อควรระวังเรื่องความปลอดภัย.....	2
การติดตั้งทีวีและการเชื่อมต่อ.....	4
รายการบรรจุภัณฑ์.....	4
การติดตั้งขาทีวี.....	4
การติดตั้งทีวี.....	4
การเชื่อมต่อสัญญาณต่างๆ.....	5
ปุ่มทีวี.....	6
การใช้งานรีโมทคอนโทรล.....	7
การใช้งานเบื้องต้น.....	8
การ เปิด / ปิด เครื่อง.....	8
การเลือกแหล่งสัญญาณ.....	8
การใช้งานหน้าจอ.....	9
คำแนะนำสำหรับฟังก์ชันสมาร์ท.....	9
การตั้งค่าภาษา.....	9
การค้นหาช่องรายการ.....	9
การบันทึกช่องรายการ.....	9
การตั้งค่าโหมดทีวี.....	9
แอป.....	10
การตั้งค่าเครือข่าย.....	10
ฟังก์ชัน เปิดเครื่องผ่านเครือข่าย LAN / Wlan.....	10
ข้อสำคัญเกี่ยวกับบริการเครือข่าย.....	10
มัลติมีเดีย.....	10
การแก้ไขปัญหาเบื้องต้น.....	11
การใช้ขาแขวนสำหรับทีวี.....	12

ข้อควรระวังเรื่องความปลอดภัย

ขอบคุณที่เลือกทีวี LEDอัจฉริยะที่มีประสิทธิภาพสูงและหลายฟังก์ชันซึ่งผลิตโดยบริษัทของเรา สิ่งนี้จะนำความเพลิดเพลินในการรับชมภาพและเสียงที่ดีกว่ามาสู่คุณ การออกแบบผลิตภัณฑ์นี้ได้นำถึงปัจจัยที่มีผลต่อความปลอดภัยส่วนบุคคล และผลิตภัณฑ์นี้ได้ผ่านการทดสอบอย่างเข้มงวดก่อนที่จะจัดส่ง อย่างไรก็ตาม การใช้งานที่ไม่เหมาะสมอาจทำให้เกิดอันตรายจากกระแสไฟฟ้าและไฟไหม้ได้ เพื่อความปลอดภัย ยึดอายุการใช้งานของผลิตภัณฑ์ และให้ผลิตภัณฑ์ทำงานได้ดีที่สุด กรุณาอ่านคู่มือและฉลากที่ระบุรายละเอียดให้ละเอียดก่อนใช้งานและปฏิบัติตามข้อควรระวังด้านความปลอดภัยดังต่อไปนี้ กรุณาเก็บคู่มือผู้ใช้ไว้เพื่อใช้งานในอนาคต


	คำเตือน	อาจทำให้เกิดการบาดเจ็บหรือเสียชีวิต
		สัญลักษณ์บ่งบอกถึงพฤติกรรมต้องห้าม
	ข้อควรระวัง	อาจทำให้เกิดการบาดเจ็บส่วนบุคคลหรือความเสียหายต่อทรัพย์สิน
		สัญลักษณ์ แสดงถึง ขั้นตอนที่ต้องดำเนินการ

ภายใต้เงื่อนไขต่อไปนี้

- เกิดการขัดข้องของไฟฟ้าหรือแรงดันไฟฟ้าไม่เสถียร
- มีเสียงหรือกลิ่นผิดปกติจากอุปกรณ์
- สายไฟ AC เสียหาย
- ทีวีได้รับความเสียหายจากการตกหล่น กระแทก หรือชน
- มีของเหลวหรือวัตถุแปลกปลอมเข้าไปในทีวี

ให้ปิดทีวีทันที ถอดปลั๊กไฟออกจากเต้าเสียบ

และติดต่อบุคลากรซ่อมบำรุงที่ได้รับการรับรอง

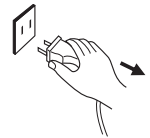

- หากมีการรั่วไหลของก๊าซหรือก๊าซที่ติดไฟอื่น ๆ ห้ามถอดปลั๊กไฟของทีวีหรืออุปกรณ์ไฟฟ้าอื่น ๆ แต่ให้ปิดวาล์วก๊าซทันที และเปิดประตูและหน้าต่างเพื่อระบายอากาศ



คำเตือน

- ใช้แหล่งจ่ายไฟที่มีแรงดัน 100-240VAC, 50/60 Hz เท่านั้น
- การเชื่อมต่อหรือถอดสายเชื่อมต่อ ก็ต่อเมื่อปิดแหล่งจ่ายไฟแล้วเท่านั้น
- หลีกเลี่ยงการติดตั้งทีวีในตำแหน่งที่ไม่มั่นคง เพราะอาจทำให้ทีวีตกหล่น เสียหาย หรือเกิดอัคคีภัยได้
- ห้ามวางทีวีในสภาพแวดล้อมต่อไปนี้:
 1. มีแสงแดดตรง ร้อนชื้น เย็นจัด หรือฝุ่นหนาแน่น
 2. มีสารที่ติดไฟหรือระเบิดได้
 3. มีแก๊สที่ติดไฟหรือกัดกร่อน
 4. ในห้องน้ำ ห้องครัว หรือสถานที่ที่มีความชื้นสูง
- ห้ามใช้เต้ารับที่เสียหายหรือไม่เหมาะสม และตรวจสอบให้แน่ใจว่าปลั๊กและเต้ารับเชื่อมต่อกันอย่างถูกต้อง
- เก็บปลั๊กไฟและเต้ารับให้ปลอดภัยจากฝุ่นและเศษโลหะ
- ข้อห้ามที่ก่อให้เกิดสายไฟชำรุดมีดังนี้
 1. ห้ามดัดแปลงสายไฟ
 2. ห้ามวางวัตถุหนักทับสายไฟ
 3. หลีกเลี่ยงการนำสายไฟไปใกล้แหล่งความร้อน
 4. ห้ามดึงสายไฟขณะถอดปลั๊ก



คำเตือน



- ห้ามเชื่อมต่ออุปกรณ์ไฟฟ้าหลายอย่างเข้ากับปลั๊กพ่วงเดียวกันมากเกินไป เพราะอาจทำให้เกิดไฟไหม้เนื่องจากการใช้พลังงานสูง
- ห้ามให้เปลวไฟ(เช่น เทียน) เข้าใกล้ทีวี เพราะอาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้
- ห้ามวางภาชนะที่มีน้ำบนทีวี เพื่อป้องกันไฟฟ้าช็อตหรือไฟไหม้จากการกระเด็นของน้ำ
- ห้ามใส่วัตถุแหลมคม โลหะ หรือของเหลวเข้าไปในช่องระบายสัญญาณหรือช่องระบายอากาศ เพื่อป้องกันการเกิดไฟฟ้าลัดวงจร ความเสียหายของผลิตภัณฑ์ และไฟฟ้าช็อต
- ช่องที่ตัวเครื่องถูกออกแบบมาเพื่อระบายความร้อน เพื่อให้ส่วนประกอบภายในทั้งหมดไม่ร้อนเกินไปและสามารถทำงานได้ตามปกติเป็นเวลานาน กรุณาอย่าปิดช่องระบายอากาศเหล่านี้ขณะวางเครื่อง



ห้ามจับปลั๊กด้วยมือเปียก เพราะอาจทำให้เกิดไฟฟ้าช็อตได้



ห้ามเปิดทีวีในสภาพอากาศที่มีพายุฝนฟ้าคะนอง แต่ควรถอดปลั๊กไฟและชั่วคราวเสาอากาศออกเพื่อป้องกันฟ้าผ่า



การถอดประกอบทีวีด้วยตนเองเป็นสิ่งที่อันตราย เพราะอาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้ได้ ควรให้ช่างผู้ชำนาญเป็นผู้ดำเนินการ



ข้อควรระวัง

- ห้ามถูดด้วยวัตถุแข็ง กระแทก ดัด หรือบีบหน้าจอ
- ห้ามใช้เครื่องทันทีหลังจากย้ายไปยังที่มีอุณหภูมิสูงจากที่มีอุณหภูมิต่ำ เพราะจะทำให้เกิดฝ้าภายในเครื่องและเกิดความเสียหายได้
- หากหน้าจอแตกและของเหลวกระเด็นโดนผิวหนัง กรุณาล้างด้วยน้ำสะอาดทันทีเป็นเวลา 15 นาที และพบแพทย์
- ในการยกทีวีด้วยมือ กรุณาจับที่มุมและถือที่ด้านล่าง ห้ามใช้แรงกดที่หน้าจอ
- การแสดงภาพเดียวเป็นเวลานานหรือภาพเคลื่อนไหวที่มีค่าหรือไอคอนคงที่ จะทำให้เกิด 'ภาพค้าง' บนหน้าจอซึ่งจะไม่หายไปหลังจากปิดเครื่องเป็นเวลานาน ปรากฏการณ์นี้ไม่อยู่ในเงื่อนไขการรับประกัน
- การดูทีวีอย่างถูกวิธี:
 1. ดูในสภาพแสงที่เหมาะสม แสงน้อยหรือการดูเป็นเวลานาน อาจทำให้สายตาสบายได้
 2. ปรับระดับเสียงให้เหมาะสมเพื่อหลีกเลี่ยงการทำลายการได้ยิน
- ถอดปลั๊กไฟของเครื่องเพื่อทำการตัดการจ่ายไฟ
- หากใช้ปลั๊กไฟหรือหัวต่อเครื่องเป็นอุปกรณ์ตัดการเชื่อมต่อ ควรให้สามารถใช้งานได้ง่าย
- ปลั๊กไฟต้องเชื่อมต่ออย่างแน่นหนา ปลั๊กไฟที่หลวมอาจทำให้เกิดประกายไฟและไฟไหม้ได้
- ข้อมูลทางเทคนิคทั้งหมดในคู่มือผู้ใช้และบนบรรจุภัณฑ์อาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า หากมีความคลาดเคลื่อนเล็กน้อยระหว่างคู่มือผู้ใช้กับการใช้งานจริง ให้การใช้งานจริงเป็นหลัก



ข้อควรระวัง

- ห้ามให้เด็กปีนขึ้นไปบนทีวี
- เก็บอุปกรณ์เสริมขนาดเล็กให้พ้นมือเด็กเพื่อป้องกันเด็กกลืนสิ่งของ
- หากจะไม่ใช้ทีวีเป็นเวลานาน กรุณาปิดเครื่องและถอดปลั๊กไฟ
- ก่อนทำความสะอาดทีวี ให้ถอดปลั๊กไฟและเช็ดด้วยผ้านุ่ม ห้ามใช้สารเคมีและหลีกเลี่ยงไม่ให้สิ่งแปลกปลอมเข้าสู่เครื่อง การทำความสะอาดที่ไม่ถูกต้อง (เช่น การใช้สารทำความสะอาด น้ำ ฯลฯ) อาจทำให้รูปลักษณ์ของผลิตภัณฑ์เสียหาย ข้อมูลการพิมพ์บนผลิตภัณฑ์ลบเลือน หรือแม้กระทั่งไหลเข้าเครื่องและทำให้ส่วนประกอบเสียหาย ทำให้เครื่องไม่สามารถแสดงผลได้
- ในการปรับตำแหน่งหรือมุมของทีวี กรุณาถอดสายทั้งหมดออกและย้ายเข้าๆ เพื่อป้องกันการตกหล่น


การติดตั้งและเชื่อมต่อ

รายการบรรจุภัณฑ์

1. ทีวี
2. คู่มือการใช้งาน
3. รีโมทคอนโทรล
4. สายไฟ
5. สกรู VESA x 4
6. แบตเตอรี่ x 2
7. ขาตั้งทีวี x 2
8. สกรูขาตั้ง x 4

คำแนะนำในการติดตั้งขาตั้ง

1. ก่อนอื่น ให้วางตัวทีวีไว้บนพื้นผิวเรียบโดยใช้ผ้านุ่มๆ ปูทับไว้ โดยคว่ำหน้าจอลง
2. ติดขาตั้งทีวีที่มีเครื่องหมาย "R" และ "L" เข้ากับส่วนการติดตั้งที่มีเครื่องหมาย "R" และ "L" ตามลำดับ ตรวจสอบให้แน่ใจว่าเครื่องหมายลูกศรบนขาตั้งคว่ำหน้าลง
3. ยึดขาตั้งด้วยสกรูที่ให้มา

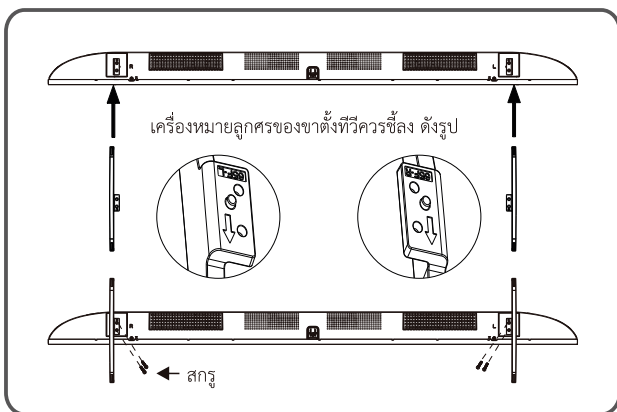


หมายเหตุ: ภาพถ่ายใช้เพื่อการอ้างอิงเท่านั้น

การติดตั้งทีวี


เคล็ดลับในการติดตั้ง

- ควรวางทีวีใกล้ปลั๊กไฟเพื่อความสะดวกในการเสียบและดึงปลั๊กออก
- เพื่อความปลอดภัยของคุณ กรุณาเลือกขาแขวนผนังหรือขาตั้งทีวีที่เหมาะสม
- เพื่อหลีกเลี่ยงการบาดเจ็บ จำเป็นต้องวางทีวีบนพื้นผิวที่มั่นคงหรือยึดติดกับผนังที่แข็งแรง
- ห้ามติดตั้ง หรือ ยึด ทีวี ในตำแหน่งเอียง
- ให้บุคลากรที่มีคุณสมบัติช่วยติดตั้งทีวีที่ผนัง การติดตั้งที่ไม่เหมาะสมอาจทำให้ทีวีไม่มั่นคง
- อย่าวางทีวีในที่ที่มีการสั่นสะเทือนจากเครื่องจักร
- อย่าวางทีวีในที่ที่แมลงอาจเข้ามาได้
- อย่าวางทีวีใกล้เครื่องปรับอากาศ มิฉะนั้นแผงภายในของจออาจเกิดการควบแน่นของความชื้นและทำให้เกิดความเสียหาย
- อย่าวางทีวีในที่ที่มีสนามแม่เหล็กแรงหรือสัญญาณรบกวนจากคลื่นแม่เหล็กไฟฟ้า

การติดตั้งแบบขาตั้ง

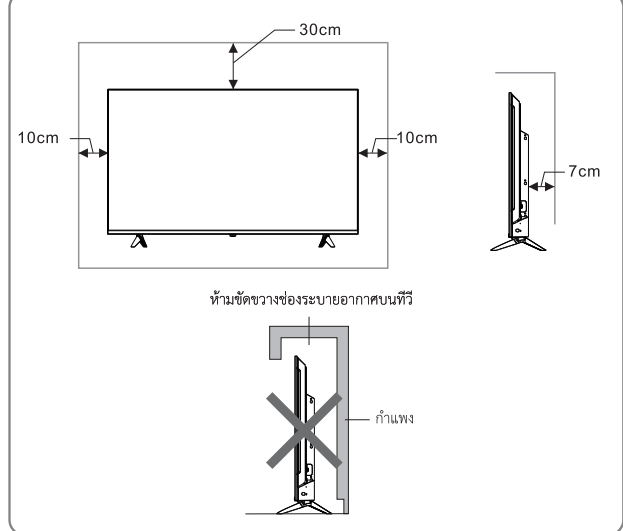

การติดตั้งแบบแขวน

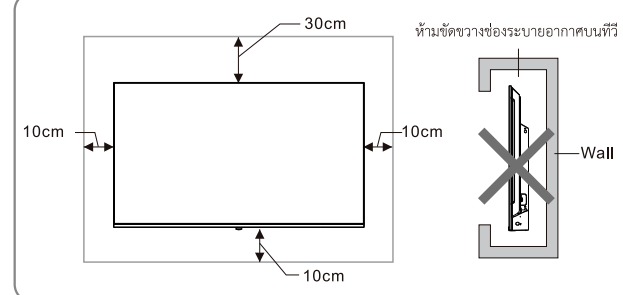

การระบายอากาศ

- โปรดรักษาพื้นที่รอบ ๆ ทีวีตามที่แสดงในรูปภาพอย่างน้อยตามที่ระบุ
- ห้ามปิดช่องระบายอากาศหรือใส่สิ่งของใด ๆ เข้าไปในกรอบของทีวี
- ห้ามวางอุปกรณ์ในพื้นที่ที่จำกัด เช่น ชั้นหนังสือหรือตู้ที่ฝังไว้ เว้นแต่ว่าทีวี จะได้รับการระบายอากาศอย่างเหมาะสม



คำเตือน

อย่าวางทีวีในที่ที่ไม่มั่นคง ทีวีอาจหล่นลงมา ทำให้เกิดการบาดเจ็บสาหัสหรือถึงขั้นเสียชีวิตได้ โดยเฉพาะอย่างยิ่งกับเด็ก สามารถหลีกเลี่ยงได้โดยการปฏิบัติตามข้อควรระวัง ดังนี้

- ใช้ตู้หรือขาตั้งที่แนะนำโดยผู้ผลิตทีวี
- ใช้เฟอร์นิเจอร์ที่สามารถรองรับน้ำหนักของทีวีได้อย่างปลอดภัย
- ตรวจสอบให้แน่ใจว่าทีวีไม่ได้ยื่นออกมานอกขอบของเฟอร์นิเจอร์ที่รองรับ
- ไม่วางทีวีบนเฟอร์นิเจอร์สูง (เช่น ตู้หรือชั้นหนังสือ) โดยไม่ยึดทั้งเฟอร์นิเจอร์และทีวีกับที่ยึดที่เหมาะสม
- ไม่วางทีวีบนผ้าหรือวัสดุอื่น ๆ ที่อาจอยู่ระหว่างทีวีและเฟอร์นิเจอร์ที่รองรับ
- อบรมให้เด็ก เกี่ยวกับอันตรายที่เกิดขึ้นจากการปีนเฟอร์นิเจอร์ เพื่อไปถึงทีวี

หากทีวีปัจจุบันของคุณกำลังถูกเก็บรักษาหรือย้ายตำแหน่ง ควรปฏิบัติตามข้อควรพิจารณาดังกล่าวข้างต้นเช่นกัน

การเชื่อมต่ออุปกรณ์เสริม


คำแนะนำการเชื่อมต่อ:

1. ช่อง USB รองรับการเชื่อมต่ออุปกรณ์เสริม เช่น อุปกรณ์เก็บข้อมูลเมมส์แบบUSB คีย์บอร์ดแบบ USB เป็นต้น
2. เมื่อต้องการเชื่อมต่ออุปกรณ์ที่รองรับฟังก์ชัน ARC ให้เลือกช่อง HDMI-1
3. ใช้ตัวแปลง HDMI/DVI เชื่อมต่ออุปกรณ์ DVI ผ่านพอร์ต HDMI
4. อุปกรณ์เสริมและสายเคเบิลที่อธิบายในคู่มือนี้จะต้องซื้อแยกต่างหาก




คำเตือน

เมื่อต้องการเชื่อมต่อเสาอากาศภายนอกกับช่องสัญญาณของทีวี ให้ปิดสวิตช์ไฟหลักของทีวีเสียก่อน หลีกเลี่ยงการนำเสาอากาศภายนอกเข้าใกล้กับสายไฟฟ้าแรงสูงเพื่อป้องกันอันตรายจากไฟฟ้าแรงสูง และเสาอากาศที่เชื่อมต่อกับทีวีต้องแยกจากการต่อลงกราวด์ มิฉะนั้นอาจทำให้เกิดอันตรายจากไฟไหม้หรืออันตรายอื่นๆ ได้

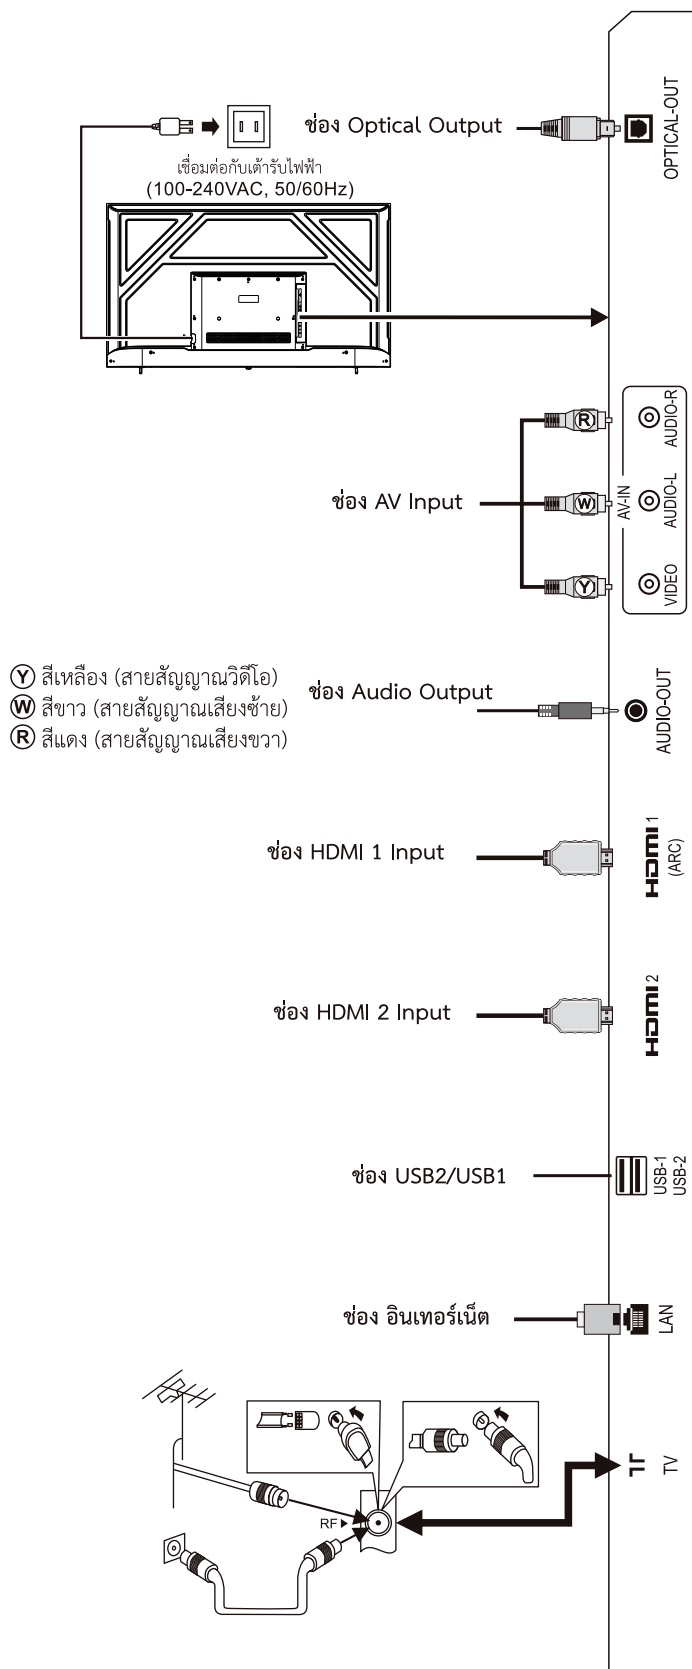

หมายเหตุ ภาพที่แสดงเป็นเพียงสำหรับการอ้างอิงเท่านั้น

ปุ่มทีวี

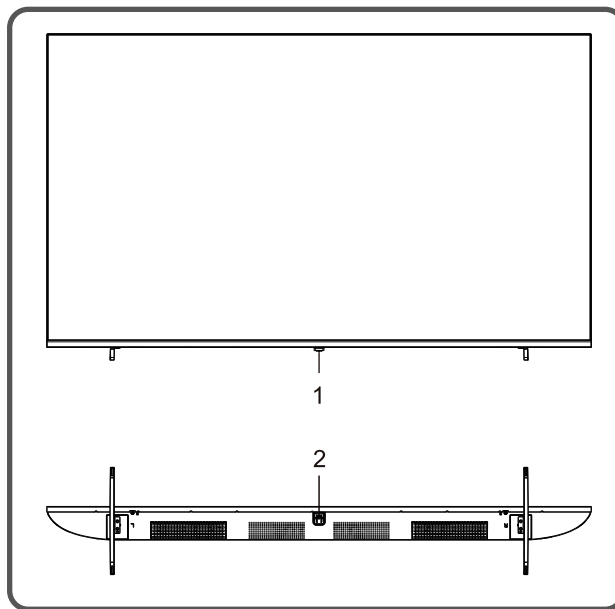

1. ไฟ LED แสดงสถานะการ เปิด/ปิด และช่องรับสัญญาณจากรีโมท

2. ปุ่มควบคุมทีวี (U)

เมื่อทีวี ปิด อยู่:

- กดปุ่ม U 1 ครั้งเพื่อเปิดทีวี

เมื่อทีวี เปิด อยู่:

ปุ่ม U จะทำงานเฉพาะโหมด (TV/AV / HDMI 1/ HDMI 2/ USB) เท่านั้น

- กดปุ่ม 1 ครั้งแสดงเมนูฟังก์ชันการใช้งาน[Power, Channel +/-, Volume +/-, Input]

- กดปุ่ม U 1 ครั้งเพื่อเลือกเมนู

- กดปุ่ม U ค้างไว้ เพื่อยืนยันเมนูที่เลือก

คำแนะนำ:

- ①. ลักษณะที่ปรากฏจะแตกต่างกันไปขึ้นอยู่กับรุ่น
- ②. โปรดใช้รีโมทคอนโทรลเพื่อการใช้งานเพิ่มเติม

การใช้งานรีโมทคอนโทรล


วิธีการติดตั้งแบตเตอรี่ในรีโมทคอนโทรล

ถอดฝาครอบช่องใส่แบตเตอรี่ออกใส่แบตเตอรี่ AAA 1.5V จำนวน 2 ก้อนให้ตรงตามเครื่องหมายขั้วบวก "+" และขั้วลบ "-" ที่อยู่ในช่องใส่แบตเตอรี่ของรีโมทคอนโทรล

ข้อควรระวังในการใช้งานรีโมทคอนโทรล

- รีโมทคอนโทรลควรชี้ไปที่เซนเซอร์รับสัญญาณของรีโมทคอนโทรลในระหว่างการใช้งานวัตถุที่วางอยู่ระหว่างรีโมทคอนโทรลกับเซนเซอร์รับสัญญาณอาจทำให้การทำงานผิดปกติ
- ควรหลีกเลี่ยงการให้รีโมทคอนโทรลได้รับการสั่นสะเทือนอย่างรุนแรงนอกจากนี้ ควรหลีกเลี่ยงการวางรีโมทคอนโทรลไว้ในที่มีแสงแดดโดยตรง เพราะความร้อนอาจทำให้รีโมทคอนโทรลเสียรูปทรง
- หากเซนเซอร์รับสัญญาณของทีวีอยู่ในที่มีแสงแดดหรือแสงไฟอาจทำให้รีโมทคอนโทรลไม่ทำงานในกรณีนี้ ให้ปรับมุมของแสงหรือมุมของทีวี หรือใช้รีโมทคอนโทรลใกล้กับเซนเซอร์รับสัญญาณ
- แบตเตอรี่ที่อ่อนจะส่งผลกระทบต่อการใช้งานของรีโมทคอนโทรลในกรณีนี้ ควรเปลี่ยนแบตเตอรี่ใหม่ หากรีโมทคอนโทรลจะไม่ได้ใช้งานเป็นเวลานานหรือแบตเตอรี่หมด ควรถอดแบตเตอรี่ออกเพื่อป้องกันความเสียหายจากการรั่วไหลของแบตเตอรี่
- ไม่ควรใช้แบตเตอรี่ที่มีประเภทต่างกัน หรือใช้แบตเตอรี่เก่าและใหม่ร่วมกันควรเปลี่ยนแบตเตอรี่เป็นคู่ในครั้งเดียว
- ห้ามโยนแบตเตอรี่ลงไฟ ห้ามชาร์จ หรือแยกแบตเตอรี่ หลีกเลี่ยงการชาร์จ, ถัดวงจร, แยกชิ้นส่วน, ความร้อน หรือเผาแบตเตอรี่ที่ใช้แล้วควรทิ้งแบตเตอรี่ที่ใช้แล้วตามข้อกำหนดด้านสิ่งแวดล้อม

ปุ่มรีโมทคอนโทรล

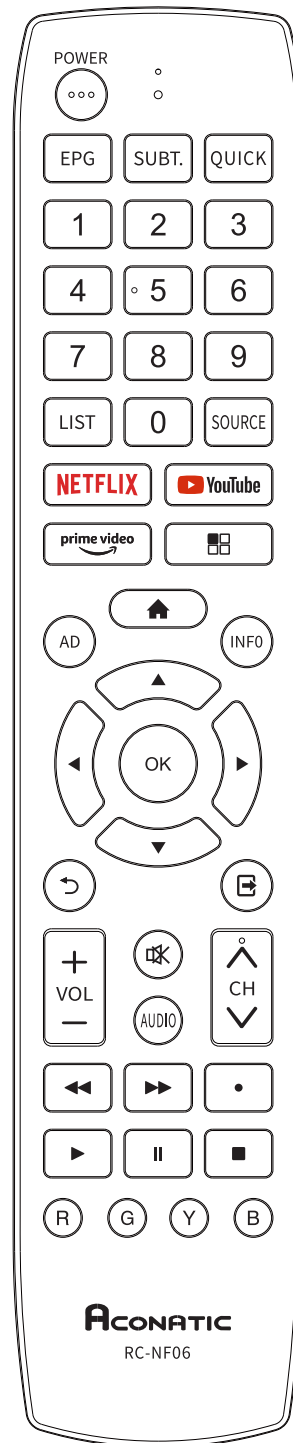

ปุ่ม	ฟังก์ชัน
Power (⏻)	ปุ่ม เปิด / ปิด เครื่อง
Mute (🔇)	ปุ่ม เปิด / ปิด เสียง
Number keys	ปุ่มหมายเลข หรือ เลือกช่องรายการ
QUICK	ปุ่ม เมนูช่วยเข้าเข้าถึงฟังก์ชัน อย่างรวดเร็ว
LIST	ปุ่มแสดงช่องรายการ
EPG	ปุ่มแสดงแผงผังรายการอิเล็กทรอนิกส์
NETFLIX	ปุ่มแอปพลิเคชัน NETFLIX
YouTube	ปุ่มแอปพลิเคชัน YOUTUBE
prime video	ปุ่มแอปพลิเคชัน Prime Video
Home (🏠)	ปุ่มเข้าหน้าโฮม
◀, ▶, ▲, ▼	ปุ่มสำหรับเลื่อนรายการ หรือ ปรับค่า
OK	ปุ่มสำหรับยืนยัน
Return (↵)	ปุ่มสำหรับกลับไปยังหน้ารายการก่อนหน้านี้
Exit (🚪)	ปุ่มสำหรับออกหน้ารายการ
VOL+/-	ปุ่ม เพิ่ม / ลด ระดับเสียง
Menu (☰)	ปุ่มแสดงเมนูการตั้งค่า ที่ทีวี
SOURCE	ปุ่มแสดงเมนูเลือกแหล่งสัญญาณ
CH+/- (⏮ CH ⏭)	ปุ่มเปลี่ยนช่องรายการรับชม
Red key	ปุ่มสำหรับการใช้งานฟังก์ชันนอกเหนือจากที่ระบุ
Green key	
Yellow key	
Blue key	
AD	เปิด/ปิด เสียงที่เกี่ยวข้อง
SUBT.	ปุ่มสำหรับ เปิด/ปิด คำบรรยาย
INFO	ปุ่มสำหรับแสดงข้อมูลรายการ
AUDIO	ปุ่ม เมนูเลือกภาษาเสียง
◀◀	ปุ่มสำหรับกรอย้อนกลับ
▶▶	ปุ่มสำหรับกรอไปข้างหน้า
Record (●)	ปุ่มสำหรับบันทึกรายการรับชม
▶ (play)	ปุ่มสำหรับ เล่น รายการ ในโหมดลติมิเดีย
II	ปุ่ม หยุดเล่นชั่วคราว ในโหมดลติมิเดีย
■	ปุ่ม หยุดเล่น ในโหมดลติมิเดีย

หมายเหตุ: ลักษณะของรีโมทคอนโทรลอาจแตกต่างจากรูปภาพนี้

การใช้งานเบื้องต้น

หมายเหตุ:

1. ปุ่ม [▶] หมายถึงปุ่มทิศทาง และปุ่ม [▶]play หมายถึงปุ่มฟังก์ชันการเล่นการอธิบายการใช้งานเมนูในคู่มือนี้อธิบายตามโหมดทีวี
2. การใช้งานในโหมดอื่น ๆ มีความคล้ายคลึงกับในโหมดทีวี และผู้ใช้สามารถใช้อ้างอิงได้
3. ก่อนเปิดใช้งาน กรุณาตรวจสอบให้แน่ใจว่าแหล่งจ่ายไฟมีความเสถียร
4. ซอฟต์แวร์อาจแตกต่างกันไปตามแต่ละประเทศ
5. การใช้งานจริง อาจแตกต่างจากที่อธิบายในคู่มือผู้ใช้ เนื่องจากซอฟต์แวร์มีการอัปเดตอยู่ตลอดเวลา

การเปิด/ ปิด เครื่อง

เสียบสายไฟเข้ากับเต้ารับไฟฟ้า จากนั้นกดปุ่ม [⏻] เพื่อเปิดทีวี เมื่อคุณใช้ทีวีเป็นครั้งแรก จะเข้าสู่การตั้งค่าเริ่มต้น และคุณสามารถตั้งค่าตามความต้องการของคุณ

ในสถานะเปิดเครื่อง กดปุ่ม [⏻] เพื่อสลับไปยังโหมดสแตนด์บาย

★**ข้อควรทราบ:** อุปกรณ์นี้ใช้เทคโนโลยีประหยัดพลังงาน หากไม่มีสัญญาณอินพุตในสถานะเปิดเครื่อง จะเข้าสู่โหมดสแตนด์บายโดยอัตโนมัติในทันที

การเลือกแหล่งสัญญาณ

คุณสามารถเชื่อมต่ออุปกรณ์ต่าง ๆ กับทีวีและรับชมภาพคุณภาพสูง หากอุปกรณ์วิดีโอมีช่องเอาต์พุตวิดีโอเช่น HDMI, AV และอื่น ๆ คุณสามารถเลือกช่องใดช่องหนึ่งและเชื่อมต่อกับช่องอินพุตที่ตรงกันของทีวี หลังจากเชื่อมต่อแล้ว เปิดอุปกรณ์และกดปุ่ม [SOURCE] จากนั้นเมนูแหล่งสัญญาณจะปรากฏบนหน้าจอ กดปุ่ม [▲] / [▼] เพื่อเลือกสัญญาณอินพุต และกดปุ่ม [OK] เพื่อยืนยัน

คำอธิบายการใช้งานเมนู

กดปุ่ม [] เพื่อแสดงเมนูบนหน้าจอ

1. กดปุ่ม []/[] เพื่อเลือกเมนูจาก วิดีโอ, เสียง, ทวี, ตั้งค่า, การควบคุมผู้ปกครอง, อื่นๆ.
2. กดปุ่ม []/[] เพื่อเข้าสู่เมนูย่อย.
3. กดปุ่ม []/[] เพื่อเลือกรายการ
4. เมื่อกดปุ่ม [] เพื่อยืนยัน
5. กดปุ่ม []/[] หรือ []/[] เพื่อปรับค่า หรือ การตั้งค่า
6. กดปุ่ม [] เพื่อกลับไปยังเมนูก่อนหน้า เมื่อทีวีแสดงเมนูย่อย
7. ระหว่างการใช้งานเมนู ไอคอนของตัวเลือกที่ไม่สามารถใช้งานได้ จะเปลี่ยนเป็นสีเทา

หมายเหตุ: รหัสผ่านเริ่มต้นสำหรับระบบล็อกคือ 0000

คำแนะนำสำหรับฟังก์ชันสมาร์ท

กดปุ่ม [] เพื่อแสดงหน้าแรก

1. กดปุ่ม []/[] เพื่อเลือกแอปพลิเคชัน
2. กดปุ่ม [] เพื่อเรียกใช้งานแอปพลิเคชัน
3. กดปุ่ม [] เพื่อออกจากโหมดสมาร์ท

หมายเหตุ: ก่อนการเข้าถึงอินเทอร์เน็ต กรุณาเชื่อมต่อทีวีของคุณกับอินเทอร์เน็ต ดูรายละเอียดเพิ่มเติมใน "การตั้งค่าเครือข่าย"

การตั้งค่าภาษา

กดปุ่ม [] เลือก ตั้งค่า > ภาษา OSD และกดปุ่ม []

เพื่อเข้าสู่เมนูกดปุ่ม []/[] เพื่อเลือกภาษาที่ต้องการ จากนั้นกดปุ่ม []

การค้นหาช่องรายการ

สแกนช่องก่อนดูทีวีเป็นครั้งแรก ก่อนการสแกน กรุณาตรวจสอบให้แน่ใจว่าได้เชื่อมต่อเสาอากาศอย่างถูกต้องและเลือกแหล่งสัญญาณเป็น ATV หรือ DTV

ค้นหาสัญญาณ ATV

หลังจากเลือกแหล่งสัญญาณเป็น ATV แล้ว กดปุ่ม [] และเลือก ทวี จากนั้นกดปุ่ม [] เพื่อเข้าสู่รายการ

1. เลือก ทวี > การสแกนช่อง และกดปุ่ม [] จากนั้นเครื่องจะเริ่มการสแกนอัตโนมัติ
2. เลือก ทวี > การสแกนด้วยตนเองแบบอนาล็อก และ ตั้งค่า ความถี่เริ่มต้น(MHz) จากนั้นเลือก สแกนขึ้น หรือ สแกนลง และกดปุ่ม [] เพื่อค้นหาช่องรายการด้วยตนเอง

ค้นหาสัญญาณ DTV

หลังจากเลือกแหล่งสัญญาณเป็น DTV แล้ว กดปุ่ม [] และเลือก ทวี > โหมดจูนเนอร์ > DVB-T/DVBC ตามแหล่งสัญญาณ

หลังจากเลือก DVB-T

1. เลือก ทวี > การสแกนช่อง และกดปุ่ม [] จากนั้นทีวีจะเริ่มการสแกนอัตโนมัติ

2. เลือก ทวี > การสแกนด้วยตนเอง > ช่อง RF และกดปุ่ม [] เพื่อเข้าสู่ เลือกช่อง จากนั้นกดปุ่ม [] เพื่อค้นหาช่องด้วยตนเอง หลังจากเลือก DVBC

1. เลือก ทวี > การสแกนช่อง และกดปุ่ม [] เพื่อเข้าสู่ หลังจากตั้งค่า โหมดสแกน แล้ว ให้เลือก การสแกน จากนั้นกดปุ่ม [] เพื่อค้นหาช่อง
2. เลือก ทวี > การสแกนด้วยตนเอง และตั้งค่า ความถี่ (kHz), การแปลงสัญญาณ, อัตราสัญลักษณ์ (Ksym/s) เลือก การสแกน จากนั้นกดปุ่ม [] เพื่อค้นหาช่องด้วยตนเอง

การบันทึกช่องรายการ

ผู้ใช้สามารถบันทึกรายการต่างๆ เป็นเวลานานๆ ได้ด้วยฟังก์ชันบันทึก (PVR) นี้ ก่อนอื่น ให้เชื่อมต่ออุปกรณ์ USB เข้ากับทีวี ในโหมด DTV กดปุ่มบันทึก [] จากนั้นระบบจะเริ่มการบันทึก กดปุ่ม [] เพื่อหยุดและออกจาก การบันทึก

กดปุ่ม [] และเลือก การตั้งค่า > การตั้งค่าเครื่องบันทึก > รายการบันทึก จากนั้นกดปุ่ม [] เพื่อแสดงไฟล์บันทึกและเล่น

ขณะเล่น ให้กดปุ่ม []/[](play)/[]/[]/[] เพื่อควบคุมการใช้งาน

หมายเหตุ: ฟังก์ชันการบันทึกสามารถรองรับระบบไฟล์ FAT 32 เท่านั้น ระบบไฟล์อื่นจะต้องทำการฟอร์แมต ก่อนที่จะฟอร์แมต ควรสำรองข้อมูลที่สำคัญไว้ เนื่องจากข้อมูลในจะไม่สามารถกู้คืนได้หลังจากการฟอร์แมต

การตั้งค่าโหมดไทม์ชิฟท์

เมื่อผู้ใช้ต้องออกจากโปรแกรมชั่วคราว ฟังก์ชัน Time Shift สามารถหยุดรายการได้ชั่วคราวและบันทึกรายการที่กำลังเล่นไปยัง USB เมื่อผู้ใช้กลับมาเล่นต่อ โปรแกรมจะสามารถเล่นต่อจากจุดที่หยุดไว้ได้

ในโหมด DTV ให้กดปุ่ม [] และเลือก การตั้งค่า > การตั้งค่าเครื่องบันทึก > โหมดไทม์ชิฟท์ จากนั้นกดปุ่ม [] เพื่อเข้าสู่เมนู และกดปุ่ม [] เมนูฟังก์ชัน Time Shift จะปรากฏบนหน้าจอและโปรแกรมจะอยู่ในสถานะหยุดชั่วคราว กดปุ่ม [](play) เพื่อกลับมาเล่นโปรแกรมต่อ กดปุ่ม [] เพื่อหยุดและออกจากฟังก์ชันไทม์ชิฟท์

ขณะเล่น ให้กดปุ่ม []/[]/[](Play)/[]/[] เพื่อควบคุมการใช้งาน

แอป

กดปุ่ม [▲] แล้วกดปุ่ม [◀]/[▶] เพื่อเลือกแอปพลิเคชันและกดปุ่ม [OK] เพื่อเข้าสู่แอปพลิเคชัน สำหรับ YouTube, Amazon Prime Video และ Netflix คุณสามารถกดปุ่ม [YouTube], [prime video] และ [NETFLIX] เพื่อใช้งานแอปเหล่านั้นได้ ในโหมดสแตนด์บายคุณต้องเปิดทีวีและใช้งาน Netflix ได้โดยการกดปุ่ม [NETFLIX] บนรีโมทคอนโทรล

การตั้งค่าเครือข่าย

กดปุ่ม [■] แล้วเลือก การตั้งค่า > เครือข่าย > การกำหนดค่า

> อินเทอร์เน็ต เลือก ไร้สาย หรือ อีเทอร์เน็ต

■ ไร้สาย

- หลังจากเลือก ไร้สาย แล้ว ให้กดปุ่ม [OK] จากนั้นเลือก การตั้งค่าไร้สาย > การสแกน และกดปุ่ม [OK] ทีวีของคุณจะค้นหาสัญญาณเครือข่ายไร้สายโดยอัตโนมัติ เครือข่ายที่ค้นหาได้โดยไม่มีไอคอน  หมายความว่าทีวีสามารถเชื่อมต่อกับเครือข่ายได้โดยไม่ต้องใช้รหัสผ่าน ส่วนเครือข่ายที่มีไอคอน  หมายความว่าเครือข่ายนั้นถูกเข้ารหัสและคุณต้องใส่รหัสผ่านที่ถูกต้องเพื่อเชื่อมต่อกับเครือข่าย
- เลือกเครือข่ายที่คุณต้องการเชื่อมต่อในรายการเครือข่าย และกดปุ่ม [OK]
- ใส่รหัสผ่านของเครือข่ายในกล่องและออกจากแป้นพิมพ์ จากนั้นเลือก Connect และกดปุ่ม [OK] เพื่อเชื่อมต่อกับเครือข่าย
- หากเครือข่ายถูกซ่อนไว้ เลือก การตั้งค่าเครือข่าย > คู่มือ และกดปุ่ม [OK] เพื่อเข้าไป ตั้งชื่อเครือข่าย (SSID) และกดปุ่ม [▶] เพื่อเข้าไป เลือกโหมดการรักษาความปลอดภัย จากนั้นใส่รหัสผ่านที่ถูกต้องเพื่อเชื่อมต่อ
- หากคุณเลือก การตั้งค่าเครือข่าย > อัตโนมัติ ให้ใส่ PIN หรือ PBC เพื่อเชื่อมต่อกับเครือข่ายโดยอัตโนมัติ

■ อีเทอร์เน็ต

- หลังจากเลือก อีเทอร์เน็ต แล้ว กดปุ่ม [OK] จากนั้นเลือก การตั้งค่า IP > ประเภทที่อยู่ > อัตโนมัติ และทีวีของคุณจะเชื่อมต่อกับเครือข่ายโดยอัตโนมัติ
- เลือก ประเภทที่อยู่ > คู่มือ และกดปุ่ม [▲]/[▼] เพื่อเลือก ที่อยู่ IP, ซับเน็ตมาสก์, เกตเวย์เริ่มต้น, DNS หลัก และ DNS รอง เพื่อทำการตั้งค่า จากนั้นกดปุ่ม [↶] เครื่องของคุณจะเชื่อมต่อกับเครือข่ายโดยอัตโนมัติ

ฟังก์ชัน เปิดเครื่องผ่านเครือข่าย LAN / Wlan

จะยอมรับระบบรีโมท เพื่อเปิดเครื่องขณะที่เครื่องปิดอยู่ โดยส่งรูปแบบเฉพาะเจาะจง (ใช้งานได้เมื่อเชื่อมต่อเครือข่ายแล้ว)

กดปุ่ม [■] จากนั้นเลือกการตั้งค่า > เครือข่าย >

การกำหนดค่า > เปิดเครื่องผ่านเครือข่าย Lan / เปิดเครื่องผ่านเครือข่าย Wlan และกดปุ่ม [OK] เพื่อเข้าสู่เมนู

กดปุ่ม [▲]/[▼] เพื่อตั้งค่าเป็น "เปิด" หรือ "ปิด" และกดปุ่ม [OK] เพื่อยืนยัน

ข้อสำคัญเกี่ยวกับบริการเครือข่ายเนื้อหาและบริการ

ทั้งหมดที่ได้รับจากทีวีเครื่องนี้เป็นของบุคคลที่สามและได้รับการคุ้มครองตามกฎหมายว่าด้วยลิขสิทธิ์ สิทธิบัตร สิทธิในเครื่องหมายการค้า และ/หรือสิทธิในทรัพย์สินทางปัญญาอื่นๆ เนื้อหาและบริการดังกล่าวมีไว้สำหรับวัตถุประสงค์ที่ไม่ใช่เชิงพาณิชย์เท่านั้น ห้ามใช้เนื้อหาหรือบริการใดๆ โดยไม่ได้รับอนุญาตจากเจ้าของเนื้อหาหรือผู้ให้บริการ บริษัทของเราจะไม่รับผิดชอบต่อความสูญเสียหรือความเสียหายโดยตรงทางอ้อม และบังเอิญใดๆ ที่เกิดขึ้นจากการเข้าถึงเนื้อหาหรือบริการใดๆ หรือข้อมูลใดๆ หรือซอฟต์แวร์ของบุคคลที่สามใดๆ ผ่านชุดนี้ ไม่ว่ากรณีใดๆ บริการของบุคคลที่สามอาจมีการเปลี่ยนแปลง ลบ หรือหยุดโดยไม่ต้องแจ้งให้ทราบล่วงหน้า บริษัทของเราไม่ได้บอกเป็นนัยหรือรับประกันความพร้อมใช้งานอย่างต่อเนื่องของบริการหรือเนื้อหาบางรายการในช่วงระยะเวลาใดๆ บริษัทของเราไม่รับผิดชอบต่อบริการที่เกี่ยวข้องกับบริการและเนื้อหาดังกล่าว นอกจากนี้ เราจะไม่รับผิดชอบต่อบริการลูกค้า โปรดติดต่อผู้ให้บริการเนื้อหาและบริการที่เกี่ยวข้องโดยตรง หากคุณมีปัญหาและข้อร้องขอบริการที่เกี่ยวข้องกับบริการหรือเนื้อหา"

มัลติมีเดีย

กดปุ่ม [▲] และกดปุ่ม [▲]/[▼]/[◀]/[▶] เพื่อเลือกสื่อ จากนั้นจากนั้น กดปุ่ม [OK] เพื่อ เข้าสู่รายการ และ เลือกประเภทไฟล์ที่ต้องการเล่นจาก รูปภาพ () , เพลง () , วิดีโอ ()

■ การเล่นไฟล์ในอุปกรณ์ดิสก์ในเครื่อง: ก่อนเล่นไฟล์ในดิสก์ในเครื่อง ให้เสียบอุปกรณ์จัดเก็บข้อมูล USB เข้ากับพอร์ต USB

เลือกอุปกรณ์ดิสก์ในเครื่องในไดเรกทอรีไฟล์และกดปุ่ม [OK]

เพื่อเข้าไป เลือกโฟลเดอร์เป้าหมายและกดปุ่ม [OK] เพื่อเข้าไป

ไปในโฟลเดอร์นั้น จากนั้นกดปุ่ม [▲]/[▼]/[◀]/[▶]

เพื่อเลือกไฟล์เป้าหมายและกดปุ่ม [▶] (Play) หรือ [OK]

เพื่อเล่นไฟล์นั้น กดปุ่ม [↶] เพื่อกลับไปหน้าจอก่อนหน้านี้

คำเตือน:

1. อุปกรณ์ USB ที่ไม่ได้มาตรฐาน: อาจไม่สามารถตรวจจับอุปกรณ์ USB ที่ไม่ได้มาตรฐานได้ ในกรณีนี้ให้ลองเปลี่ยนอุปกรณ์ USB ที่เป็นมาตรฐาน
2. ข้อจำกัดของรูปแบบไฟล์: ระบบสตรีมมิ่งมีข้อจำกัดเฉพาะเกี่ยวกับรูปแบบของไฟล์ การเล่นไฟล์อาจไม่เป็นปกติหากไม่ตรงตามข้อกำหนดของระบบ
3. การถอดอุปกรณ์ USB: อย่าถอดอุปกรณ์ USB ขณะกำลังเล่นไฟล์ เพราะอาจทำให้ระบบหรืออุปกรณ์เกิดปัญหาได้
4. อุปกรณ์ที่รองรับ: ระบบรองรับมาตรฐานอุปกรณ์ USB 1.1 และ USB 2.0 เช่น อุปกรณ์เก็บข้อมูล USB และฮาร์ดดิสก์แบบถอดได้
5. กระแสเอาต์พุตของพอร์ต USB: กระแสเอาต์พุตสูงสุดของพอร์ต USB ของอุปกรณ์นี้คือ 500mA และจะเปิดใช้งานการป้องกันตนเองหากเกินขีดจำกัดนี้ กรุณาใช้แหล่งจ่ายไฟภายนอกหากต้องเชื่อมต่ออุปกรณ์ที่ต้องการกระแสไฟสูงกว่า
6. ความซับซ้อนของระบบ: ระบบอาจมีปัญหาหรือบางฟังก์ชันอาจไม่ทำงานขณะกำลังอ่านหรือเล่นไฟล์เนื่องจากความเข้ากันได้และความเสถียรของอุปกรณ์ USB ในกรณีนี้ให้ปิดอุปกรณ์และรีเซ็ตระบบใหม่

ขณะเล่นไฟล์: กดปุ่ม [OK] เพื่อแสดงหรือซ่อนแถบเครื่องมือ
กดปุ่ม [◀▶]/[▶▶]/[▶] (Play)/[⏏] [■] บนรีโมทคอนโทรล
เพื่อควบคุมการทำงาน

การแก้ไขปัญหาเบื้องต้น


- ภาพที่ปรากฏบนจอโทรทัศน์มีจุดคล้ายหิมะ และเสียงมีเสียงรบกวน
 1. ตรวจสอบว่าปลั๊กสายอากาศหลวม หรือสายเคเบิลอยู่ในสภาพดีหรือไม่
 2. ตรวจสอบประเภทของสายอากาศ (VHF/UHF)
 3. ปรับทิศทางและตำแหน่งของสายอากาศ
 4. ลองใช้ตัวเสริมสัญญาณ
- ไม่มีภาพหรือเสียงแสดงบนหน้าจอ และไฟบอกสถานะไม่ติด
ตรวจสอบว่าสายไฟเชื่อมต่อหรือไม่
- มีเส้นประหรือแถบการรบกวนเกิดขึ้นในภาพโทรทัศน์
อย่าใช้ใคร่เป่าผมไฟฟ้าใกล้กับชุดโทรทัศน์ และปรับทิศทางของสายอากาศเพื่อลดการรบกวน
- มีภาพซ้อนเกิดขึ้นบนหน้าจอโทรทัศน์
 1. ใช้สายอากาศที่มีการขึ้นสูง
 2. ปรับทิศทางของสายอากาศ
- ภาพที่ปรากฏไม่มีสี
เข้าไปที่การตั้งค่า "Video" เพื่อเพิ่มความอิ่มตัวของสี
- ไม่มีเสียงประกอบในโทรทัศน์
 1. ปรับระดับเสียงให้อยู่ในระดับที่เหมาะสม
 2. กดปุ่ม [MUTE] บนรีโมทคอนโทรลเพื่อยกเลิกโหมดปิดเสียง
- ไม่มีภาพสัญญาณเข้าปรากฏบนหน้าจอโทรทัศน์ และไฟบอกสถานะกะพริบ
 1. ตรวจสอบว่าสายสัญญาณเชื่อมต่อหลวม หรือหลุดหรือไม่
 2. จากนั้นเชื่อมต่อใหม่โทรทัศน์อาจอยู่ในโหมดสแตนด์บาย กรุณารับรู้เครื่อง
- ระยะเวลาควบคุมระยะใกล้สั้นหรือไม่สามารถควบคุมได้
 1. เอาสิ่งกีดขวางที่บังหน้าต่างรับสัญญาณควบคุมระยะไกลออก
 2. เปลี่ยนแบตเตอรี่
- การเล่นเกมออนไลน์ช้ามาก
 1. กรุณาอัปเดตแบนด์วิดท์เครือข่ายของคุณให้สูงขึ้น
 2. ลองเปลี่ยนไปใช้ที่อยู่อื่นเพื่อรับทรัพยากรที่ดีกว่า
- โทรทัศน์ค้าง ค้าง หรือไม่ทำงาน
ถอดปลั๊กไฟออกก่อน และเชื่อมต่อปลั๊กไฟอีกครั้งหลังจากผ่านไปประมาณ 1-2 นาที จากนั้นเปิดโทรทัศน์อีกครั้ง

การใช้ขาแขวนสำหรับทีวี



ข้อควรระวัง

- เมื่อติดตั้งโทรทัศน์บนผนัง โปรดเลือกตัวยึดติดผนังโทรทัศน์ที่เหมาะสม
- ตรวจสอบให้แน่ใจว่าความสามารถในการรับน้ำหนักของผนังสำหรับการติดตั้งนั้นไม่น้อยกว่า 4 เท่าของน้ำหนักของชุดโทรทัศน์และตัวยึดติดผนังเพื่อหลีกเลี่ยงการตกกระแทก
- โปรดอ้างอิงคำแนะนำที่มาพร้อมกับโทรทัศน์และการติดตั้งบนผนัง
- ตรวจสอบให้แน่ใจว่าไม่มีสายเคเบิลหรือท่อร้อยสายในผนัง
- ควรให้ช่างเทคนิคทำการติดตั้ง บริษัทจะไม่รับผิดชอบต่ออุบัติเหตุในระหว่างที่เกิดขึ้นหรือความเสียหายที่เกิดจากการติดตั้งโทรทัศน์ที่ไม่เหมาะสม
- อย่าติดตั้งหรือยึดทีวี ในแนวเอียง

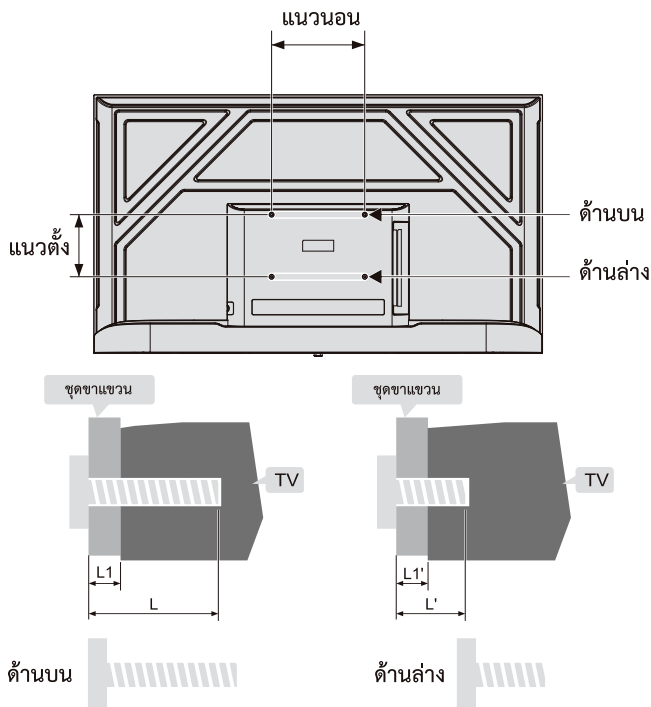

L1: ความหนาตัวยึดผนัง

L1': ความหนาตัวยึดผนัง

ระยะห่างระหว่างรูยึดบนผนัง (แนวตั้ง x แนวนอน) (มม.)	สกรูที่ใช้ในการติดตั้ง (แนะนำความยาวของสกรู) (มม.)
50"/55": 300 x 300	ด้านบน : 2 x M6 ($18.5 + L1 \leq L \leq 30 + L1$), สกรูแบบเกลียว ด้านล่าง : 2 x ST6 ($6 + L1' \leq L' \leq 9.5 + L1'$), สกรู Tapping พร้อมแหวนรอง
65": 300 x 300	ด้านบน : 2 x M6 ($18.5 + L1 \leq L \leq 30 + L1$), สกรูแบบเกลียว ด้านล่าง : 2 x M6 ($14 + L1' \leq L' \leq 28 + L1'$), สกรูแบบเกลียว

หมายเหตุ:

- หากพบสกรูสำหรับยึดผนังทางด้านหลังโทรทัศน์ก่อนที่จะติดตั้ง จะต้องถอดสกรูออกก่อน
- ควรเลือกซื้อสกรูที่ถูกต้องและเหมาะสมกับการใช้งาน
- หากมีสกรูที่มาพร้อมกับขาแขวน ควรตรวจสอบว่าสามารถติดตั้งกับชุดโทรทัศน์ได้หรือไม่

HDMI®

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby

AUDIO

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Contents

Safety Warning and Notice	2
Mounting and Connecting	4
Packing list.....	4
Stands Installation Instructions.....	4
Mounting the TV set.....	4
Connecting peripheral equipment.....	5
TV Control Key	6
Remote Control	7
Basic Operations	8
Turning on/Standby.....	8
Signal source selection.....	8
Menu operation description.....	9
Smart TV.....	9
OSD Language setting.....	9
Channel scanning.....	9
REC option.....	9
Time shift option.....	9
APP.....	10
Network settings.....	10
Wake On Lan / Wake On Wlan.....	10
Important statement on network services.....	10
Multimedia player.....	10
Troubleshooting	11
Technical Specifications	12
Use of a TV wall mounting	13

Safety Warning and Notice

Thanks for choosing the high-performance and multifunctional intelligent LED TV produced by our company. This precious thing will bring you better audiovisual enjoyment. The design of this product has given consideration to factors affecting personal safety, and the product itself has gone through strict tests prior to delivery. However, improper operation may result in electric shock and fire disaster. To ensure safety, prolong the service life of this product, and make sure the best performance of this product can be given full play to, please read the manual and marking label carefully before using it and comply with the following safety instructions. Please keep the user manual for later use.


	Warning	May result in casualties
		Indicate the behaviors that must be prohibited
	Attention	May result in personal injury or property losses

	Indicate the operations that must be performed
---	--

Under Following Conditions

- Power failure or unstable voltage.
- Abnormal sound or smell from the device.
- AC power cord is damaged.
- TV set is damaged due to falling off, knock or impact.
- Any liquid or foreign matters enter into the TV set.

Turn off the TV set immediately, unplug the power cord from the power outlet, and contact authorized maintenance personnel.

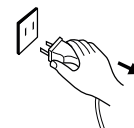

- If coal gas or other flammable gases leak, do not unplug the power cord of the TV set or other electric appliances; instead, close the valve of the gas immediately and open the doors and windows.
- The picture is for reference only.



Warning

-  ● Only use 100-240VAC, 50/60Hz power supply.
- All cables can be connected or pull out only after power supply is turned off.
- Do not fix the TV set on instable position, or else it may cause falling off, damage, or even fire.
- Do not put the TV set in the environment:
 1. With direct sunshine, moisture, overheating, undercooling or heavy dust;
 2. With flammable or explosive substance;
 3. With flammable or corrosive gas;
 4. In bathroom, kitchen, etc.
- Do not use damaged or improper power socket, and ensure that the plug and socket are connected properly.
- Keep the power plug and socket free of dust and metal pieces.
- Do not damage the power cord:
 1. It is prohibited to refit the power cord;
 2. Do not put heavy object on the power cord;
 3. Keep the power cord away from heat source;
 4. Do not drag the power cord when unplugging.



Warning



- Do not connect too many appliances to one power strip, or else it may cause fire due to high power consumption.
- Do not let open flame (e.g. lit candle) approach the TV set, or else it may cause electric shock or fire.
- Do not put the container filled with water on the TV set, to avoid electric shock or fire caused by water drop or splashing.
- Do not penetrate any sharp object, metal or liquid into the signal connector or air vents, to avoid short circuit and product damage as well as electric shock.
- The slots on the case is designed to release heat so as to assure that all inside components will not reach an extra high temperature and can work normally for a long time. Please do not cover the holes while place it.



Do not touch the plug with wet hands, or else it may cause electric shock.



Do not turn on the TV set in thunderstorm weather; instead, unplug the power plug and antenna connector to avoid lightning strike.



Do not disassemble the TV set by yourself, or else it may cause electric shock or fire. Contact qualified personnel for maintenance.



Attention

- Do not let children climb onto the TV set.
- Keep the small accessories away from children's reach to avoid swallowing.
- If the TV set won't be used for a long time, please turn off the device and unplug the power cord.
- Before cleaning the TV set, unplug the power cord and wipe with soft cloth; do not use chemical reagents and avoid foreign substances entering into the device. The incorrect cleaning (such as cleaning fluid, water, etc) may lead to damage of the TV.
- To adjust the position or angle of the TV set, please disconnect all wires and move slowly to avoid falling off.



Attention

- Do not rub with hard object, knock at, bend or squeeze the screen.
- Do not use TV immediately after transferring TV to the places with high temperature from low temperature, which will cause fogging inside TV and failures.
- If the screen is broken and the liquid splashes on skin, please wash with clean water immediately for 15 minutes, and go to see your doctor.
- To carry the TV set with hands, please grasp the corners and hold the bottom; do not apply force on the panel.
- Displaying the same image for a long time or active image with fixed words, icons will leave "image persistence" on screen which will not disappear after powering off for a long time. This undesirable phenomenon is not covered by warranty.
- Healthy TV watching:
 1. Watch in appropriate light; poor light or long time watching may hurt your eyes.
 2. Adjust the volume appropriate to avoid hurting your hearing.
- Unplug the power cord of the device to cut off the power supply.
- If a power plug or appliance coupler is used as disconnecting device, it should ensure easy operation.
- Power plug shall be connected reliably. Loose power plugs may cause sparkle and fire.
- All the technical specifications in the user's manual and on the packaging are subject to changes without prior notice. If there is slight deviation between the user's manual and actual operation, the latter shall prevail.

Mounting and Connecting

Packing list

1. The TV set.
2. User Manual.
3. Remote control.
4. Power cord (or attached to TV set).
5. VESA screws × 4
6. Batteries × 2
7. Stand × 2
8. Stand screws × 4


Stands Installation Instructions

1. First of all, put the TV body on the flat surface, with a soft cloth on it, laying it with the screen facing down.

2. Attach TV stand marked with "R" and with "L" to the installation part marked with "R" and with "L" respectively.

Make sure that the arrow mark on the stands faces down.

3. Fasten the stands with included screws.

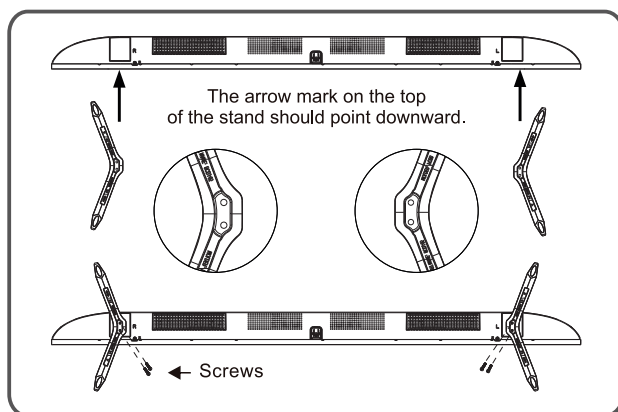


Remark: The pictures are for reference only

Mounting the TV set


Tips on Installation

- The TV set should be mounted near the AC power socket for easy plugging and unplugging.
- For your safety, please select appropriate wall mount bracket or base.
- To avoid hurt, it is required to place the TV set on stable plane, or fix on firm wall.
- Do not install/mount the TV with tilting condition.
- Ask qualified personnel to mount the TV set on the wall. Improper mounting may result in instable TV set.
- Do not place the TV set at any place susceptible to mechanical vibration.
- Do not place the TV set at any place that insects may enter.
- Do not mount the TV set against air conditioner, or else the internal panel of the display may condense moisture and cause failure.
- Do not place the TV set at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave.

Mount on the base

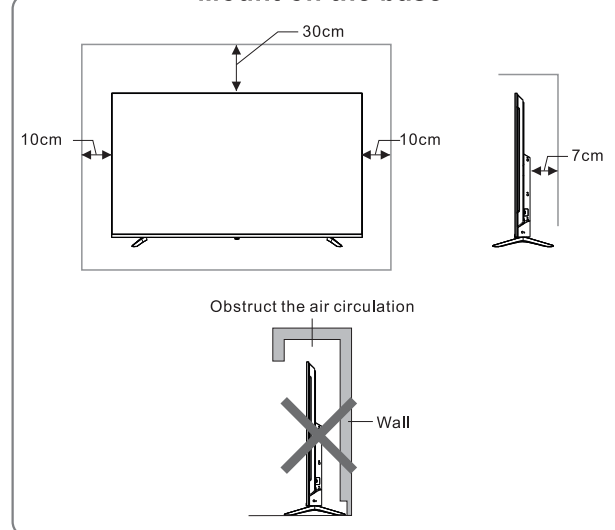

Mount on the wall

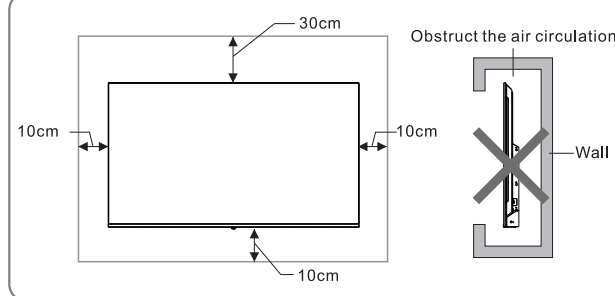

Ventilation

- Please keep this space at least around the TV, as shown in the figure.
- Do not cover the air vents or insert any object into the enclosure.
- Do not put the device in limited space, e.g. bookcase or embedded closet, unless the TV set is properly ventilated.



Warning

Never place a television set in an unstable location. A TV set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the TV set.
- Only using furniture that can safely support the TV set.
- Ensuring the TV set is not overhanging the edge of the supporting furniture.
- Not placing the TV set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV set to a suitable support.
- Not placing the TV set on cloth or other materials that may be located between the TV set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the TV set or its controls.

If your existing TV set is being retained and relocated, the same considerations as above should be applied.

Connecting peripheral equipment


Remark:

1. USB interfaces support peripheral equipment, including USB mass storage device, USB mouse, keyboard, etc.
2. When you need to connect the device which support the ARC function, please select the HDMI-1 interface.
3. HDMI connector can realize DVI connector function with external HDMI/DVI commutator.
4. The peripheral equipment and cables described in this manual should be purchased separately.




Warning

When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

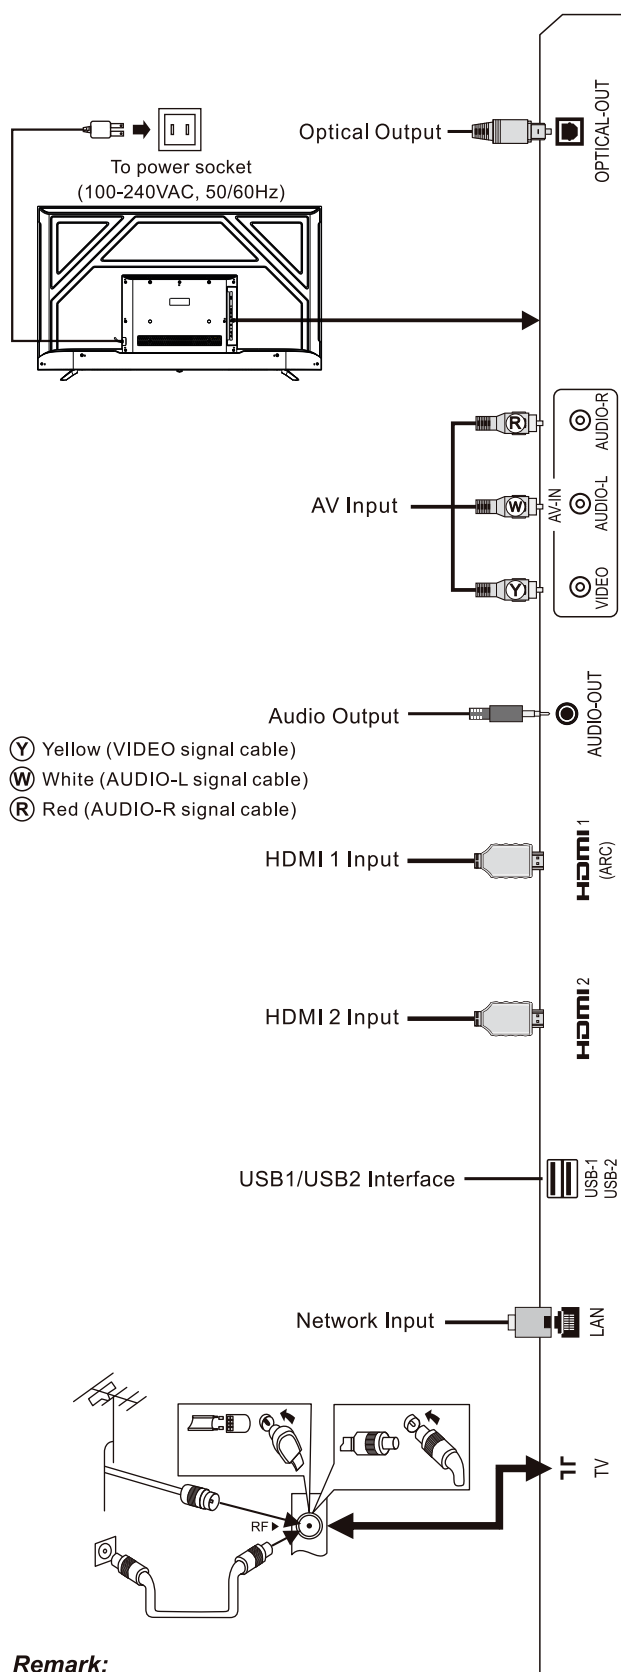

TV Control Key

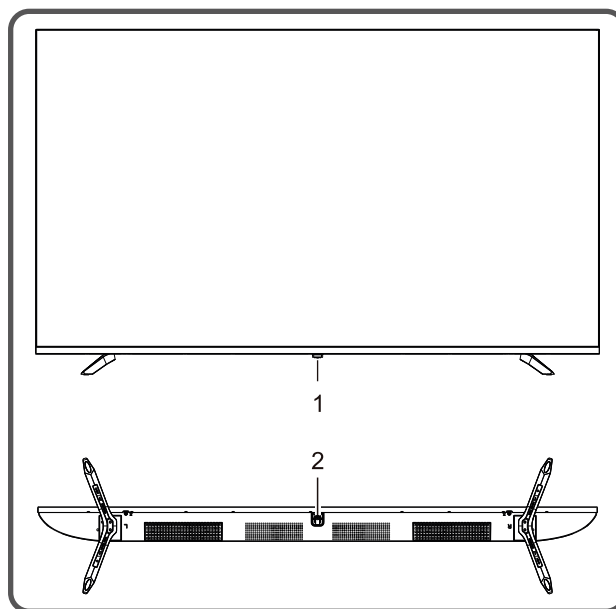

1. Power LED indicator and remote receiving window.

2. TV Control Key (⏻)

When the TV is turned off:

- Short press the ⏻ key to turn on the TV.

When the TV is turned on :

The ⏻ key works only in the Input (TV/AV/HDMI1/HDMI2/USB)

- Short press to display the function menu [Power, (Channel +/-), Volume +/-, Input].

- Short press the ⏻ key to select the menu.

- Long press the ⏻ key to confirm the selected menu.

Remark:

①. The appearance varies depending on the model.

②. Please use the remote control for more operation.

Remote Control


Method for Installation of Remote Control Battery

Remove the battery compartment cover and insert two AAA (1.5V) batteries; make sure the polarity of the batteries is in compliance with the polarity mark "+" and "-" in the battery compartment of the remote control.

Precautions for using the remote control

- The remote control should be pointed at the remote control sensor during operation. An object placed between the remote control and the remote control sensor may impede normal operation.
- The remote control should be prevented from strenuous vibration. Besides, please do not set or place the remote control under direct sunshine, as heating power may result in deformation of the remote control.
- Remote control failure may occur when the remote control sensor of the main unit is under direct sunshine or strong lighting; in this case, please change the angle of lighting or this TV set, or operate the remote control near the remote control sensor.
- When the batteries are running low, the remote control doesn't work well. In that case, please replace them with new ones. If the remote control is not used for a long time or the battery runs out, please take the battery out to prevent the remote control from being corroded by battery leakage which may result in damage and failure of the remote control.
- Please do not use batteries of different types. It is not allowed to use old and new batteries together; the batteries should be replaced in pair.
- Please do not throw the batteries into fire or charge or decompose the batteries; do not charge, short-circuit, disassemble/assemble, heat or burn used batteries. Please dispose the waste batteries pursuant to relevant regulations on environmental protection.

Keys of the Remote Control

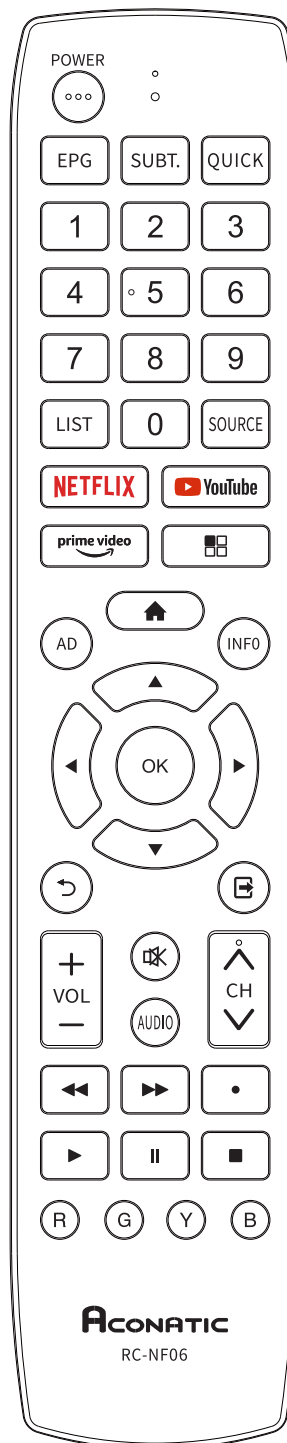

Keys	Function
Power (⏻)	Switch between working and standby status.
Mute (🔇)	Turn on/off the sound.
Number keys	Select the channel or input numbers.
QUICK	Quick menu.

LIST	Show channel list.
EPG	Electronic program guide.
NETFLIX	Open Netflix application.
YouTube	Open YouTube application.
prime video	Open Prime Video application.
Home (🏠)	Show home page.
◀, ▶, ▲, ▼	Select items or adjust values.
OK	Confirm the operation.
Return (↩)	Return to previous menu page.
Exit (🚪)	Exit OSD menu or application.
VOL+/-	Turn up/down the volume.
Menu (☰)	Show OSD menu.
SOURCE	Show signal source menu.
CH+/- (⏮ CH ⏭)	Change program channel.
Red key	Special function keys.
Green key	
Yellow key	
Blue key	
AD	Turn on/off the associated audio.
SUBT.	Select Subtitle Open.
INFO	Show information bar.
AUDIO	Select audio language.
⏮	Fast backward.
⏭	Fast forward.
Record (●)	Start to record current program.
▶ (play)	Play function in multimedia.
⏸	Time shift key. (PAUSE)
■	STOP.

Note: The appearance of the remote control may be different from this diagram.

Basic Operations

Remark:

1. The [▶] key means direction key and the [▶](play) key means play function key
2. Menu Operation Instruction in this manual is explained according to TV mode. The operations in other modes are similar to the one in TV mode, and users can take it as reference.
3. Before power-on platform, please make sure that the power supply is stable.
4. The software may differ depending on the country.
5. The actual operation may differ from that in User Manual because the software is updated constantly.

Turning on/Standby

Plug power cord into the electrical socket, then press [⏻] key to turn on the TV.

When you first use the TV, it goes into the initialization settings, and set it according to your needs.

In power on state, press [⏻] key to switch to standby mode.

★ **Special Tips:** This TV set adopts energy saving technology. If there is no signal input in power on state, it will enter standby state automatically in five minutes.

Signal source selection

You can connect various devices to the TV set and view high quality images. If the video device has HDMI, AV and other video output ports, you can select one of them and connect to corresponding input ports of the TV set. After connected, turn on the device and press [SOURCE] key, then menu of signal source will be displayed on the screen. Press [▲]/[▼] key to select the input signal, and press [OK] key to confirm.

Menu operation description

Press [■] key to show the main menu on the screen:

1. Press [▲]/[▼] key to select a menu from **Video, Audio, TV, Setup, Parental, About**.
2. Press [OK]/[▶] key to enter the submenu.
3. Press [▲]/[▼] key to select an item in the menu.
4. Press [OK] key to confirm.
5. Press [◀]/[▶] key or [▲]/[▼] key to adjust the value or setting.
6. Press [↶] key to return to previous menu when the TV displays the submenu.
7. During menu operation, the icons of invalid options will change into grey.

Note: The default password for the lock system is 0000.

Smart TV

Press [▲] key to show the home page.

1. Press [◀]/[▶] key to select an application;
2. Press [OK] key to run the application;
3. Press [■] key to exit the smart mode.

Note: Before accessing the Internet, please connect your TV set to the Internet. Refer to "Network Settings" for details.

OSD Language setting

Press [■] key, select **Setup > OSD Language** and press [OK] key to enter. Press [▲]/[▼] key to select the desired language, and then press [OK] key.

Channel scanning

Scan the channels before watching the TV for the first time. Before scanning, please make sure that the antenna has been connected properly, and select the signal source as **ATV** or **DTV**.

ATV Scanning

After selecting **ATV** source, press [■] key, and Select **TV**, then press [OK] key to enter.

1. Select **Channel Scan**, and press [OK] key, then the TV starts auto scanning.
2. Select **Analog Manual Scan**, and set **Start Frequency (MHz)**. Select **Scan Up** or **Scan Down**, and press [OK] key to manually search for channels.

DTV Scanning

After selecting **DTV** source, press [■] key, and select **TV > Tuner Mode > DVBT/DVBC** according to your needs.

After select **DVBT**.

1. Select **TV > Channel Scan**, and press [OK] key, then the TV starts auto scanning.
2. Select **TV > Manual Scan > RF Channel**, and press [▶] key to enter. Select channel, then press [OK] key to manually search for channels.

After select **DVBC**.

1. Select **TV > Channel Scan**, and press [OK] key to enter. After setting **Scan Mode**, select **Scan**, then press [OK] key to search for channels.
2. Select **TV > Manual Scan**, and set **Frequency (kHz)**, **Modulation**, **Symbol Rate (Ksym/s)**. Select **Scan**, then press [OK] key to manually search for channels.

REC option

User can record programs from a long time by this recording function (PVR). First of all, connect USB device to the TV. In DTV mode, Press Record [●] key, then the system begins recording. Press [■] key to stop and quit recording.

Press [■] key, and select **Setup > Record Setting > Record List**, then press [OK] key to display the record files and play them.

While playing, press [◀◀]/[▶▶]/[▶](play)/[||]/[■] key to handle.

Note: The recording function can only support memorizer with FAT32 file system. Memorizer with other file systems need to be formatted; Before formatting memorizer, back-up useful data because the content of memorizer can not recover after formatting.

Time shift option

When user leaves program for a short time, time-shift function can suspend and cache the playing program to USB device. When user resumes playing, the program can continue to be played.

In DTV mode, press [■] key, and select **Setup > Record Setting > Time Shifting Mode**, then press [OK] key to enter. Select **on**, and press [||] key, Time Shift option menu shows on the screen and the program is in suspended state. Press [▶](play) key to resume play program. Press [■] key to stop and quit time-shift.

While playing, press [◀◀]/[▶▶]/[▶](play)/[||]/[■] key to handle.

APP

Press [] key, then press []/[] key to select an application and press [OK] key to enter. As to YouTube, Amazon Prime Video, and Netflix, you can press the [YouTube], [prime video] and [NETFLIX] keys to use them. In the standby mode, you can turn on the TV and use Netflix by pressing [NETFLIX] key on the remote control.

Network settings

Press [] key, then select **Setup > Network > Configuration > Interface**, select **Wireless** or **Ethernet**.

■ Wireless

1. After selecting **Wireless**, press [OK] key, then select **Wireless Setting > Scan**, and press [OK] key, then the wireless network signals are searched by your TV list automatically. The network searched without icon indicates that the TV to the network without a password. The network with icon indicates that it is encrypted and you must enter the correct password to connect to the network;
2. Select the network you want to connect to in the network list, and press [OK] key;
3. Type network connecting password in the box and exit keyboard, then select **Connect** and press [OK] key to connect to network.
4. If the network is hidden, select **Wireless Setting > Manual**, and press [OK] key to enter. Set the network name (SSID), and press [] key to enter. Select security mode, then enter the correct password to connect.
5. If you select **Wireless Setting > Auto**, then enter the PIN or PBC to automatically connect to the network.

■ Ethernet

1. After selecting **Ethernet**, press [OK] key, then select **IP Setting > Address Type > AUTO**, and your TV will connect to the Network automatically;
2. Select **Address Type > Manual**, and press []/[] key to select **IP Address**, **Subnet Mask**, **Default Gateway**, **Primary DNS** and **Secondary DNS** to set them. Then press [] key, your TV will connect to the Network automatically.

Wake On Lan / Wake On Wlan

It allows remote systems to wake up the sleeping TV by sending a frame of a specific format which the client anticipates. (It is available when network is connected.)

Press [] key, then select **Setup > Network > Configuration > Wake On Lan / Wake On Wlan**, and press [OK] key to enter. Press []/[] key to set it as "On" or "Off", and press [OK] key to confirm.

Important statement on network services

All contents and services obtained from this TV set belong to the third party and are protected by laws on copyright, patent right, trademark right and/or other intellectual property right. The said contents and services are only for your non-commercial purposes. It is not allowed to use any content or service without the authorization of the content owner or the service provider.

Our company will undertake no liability for any direct, indirect and accidental losses or damages caused by your or a third party's access to any content or service or any information or any third party software through this set under any circumstances.

Third party service may be changed, deleted or stopped without prior notice. Our company neither implies nor guarantees the continuous availability of some service or content within any period of time.

Our company is not held responsible for services related to the said service and content. Besides, we will not bear any liability for client service. Please directly contact relevant content and service providers if you have any problem and service request concerning relevant service or content.

Multimedia player

Press [] key, then press []/[]/[]/[] key to select **Media** and press [OK] key to enter. Select the file type from Photo (), Music (), Video ().

■ **Playing Files in local disk device:** Before playing files in the local disk, insert the USB mass storage device into the USB interface.

Select local disk device in the file directory and press [OK] key to enter. Select the target folder and press [OK] key to enter the folder. Then press []/[]/[]/[] to select the target file and press [](play) or [OK] key play it. Press [] key to return to previous page.

Attention:

1. Nonstandard USB devices can't be recognized probably; in this case, please replace a standard USB device;
2. The stream media system has certain restriction on the format of files; the playing will be abnormal if it is out of the system restriction;
3. Do not remove the USB device while playing, or else the system or device may have problem;
4. The system supports standard USB1.1 and USB2.0 devices, such as USB mass storage devices and removable hard disks;
5. The maximum output current of the USB port of this device is 500mA, and the self-protection will be enabled if it is beyond this limit; please use external power supply if an external device of higher current will be connected;
6. The system is complicated; when it is reading or playing files, the screen may be still or certain functions may be invalid due to the compatibility and stability of the USB device; in this case, please turn off the device and re-initialize the system.

While playing, press [OK] key to display or hide the toolbar. Press [◀◀]/[▶▶]/[▶](play)/[⏸]/[■] key on the remote control to operate.

Troubleshooting

■ Snowflake spots occur in the TV images and there is noise in accompanying sound.

1. Check if the antenna plug is loose or the cable is in good condition.
2. Check the antenna type (VHF/UHF).
3. Adjust the direction and position of the antenna.
4. Try to use signal enhancer.

■ There is neither display nor sound on the screen. The indication light is not on.

Check if the power line is connected.

■ Dotted line or strip disturbance occurs in TV images.

Do not use electric hair dryer aside the TV set and adjust the antenna direction to reduce disturbance.

■ Double images occur on the TV screen.

1. Use high oriented antenna.
2. Adjust the direction of the antenna.

■ The images are colorless.

Enter "Video" setting to increase color saturation.

■ The TV has no accompanying sound.

1. Adjust the volume to a proper degree.
2. Press [MUTE] key on the remote control to cancel mute mode.

■ No signal input images show on the TV screen. The indicator light is blinking.

1. Check if the signal connecting cable is loose or falls off. Reconnect it.
2. The TV may be in standby mode, please reboot.

■ The remote control distance is short or out of control.

1. Remove the object to avoid blocking the remote control receiving window.
2. Replace the batteries.

■ Online video play is very slow.

1. Please upgrade your network bandwidth to a higher one.
2. Please try to replace with other addresses to obtain better resources.



■ The TV is slow, crash or doesn't work.

Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the TV again.

Use of a TV wall mounting

Warning

- Please purchase a suitable TV wall mount when mounting your TV on the wall.
- Ensure that the bearing capacity of the wall for mount installation is no less than 4 times the weight of the TV set and the wall mount so as to avoid falling.
- Please refer to the instructions provided with the TV set and wall mount for installation.
- Make sure there is no cable or conduit in the wall section where a wall mount will be installed.
- Please entrust a professional technician to complete installation. The company shall not be liable for accidents, personal injury or damage caused by improper installation of TV set.
- Do not install/mount the TV with tilting condition.

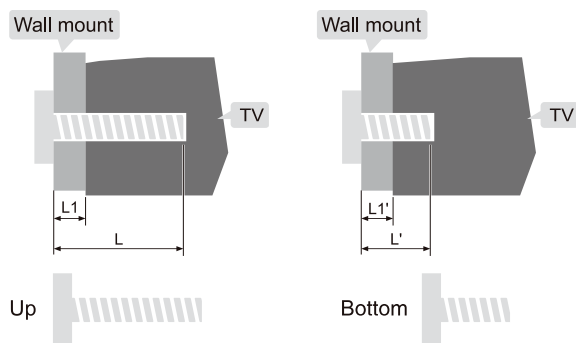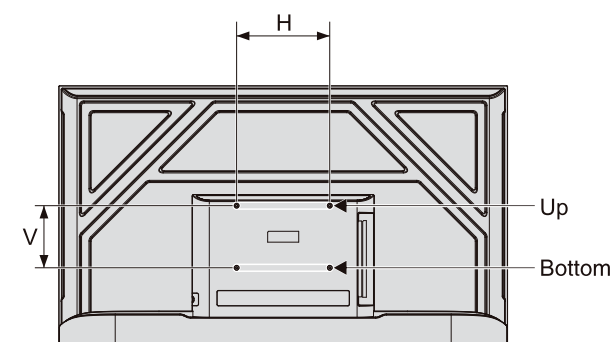

L1: Thickness of wall mount

L1': Thickness of wall mount

Distance between holes on the wall($H \times V$)(mm)	Required screws (recommended bolt length)(mm)
65": 300 x 300	Up: 2 x M6 ($18.5 + L1 \leq L \leq 30 + L1$), Machine screws Bottom: 2 x M6 ($6 + L1' \leq L' \leq 8 + L1'$), Machine screws

Note:

- If any screws are found in the screw hole for wall mount behind the TV set before installing the wall mount, the screws shall be removed and put in place for later use.
- Please buy the wall screws according to the actual situation.

HDMI®

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


Dolby AUDIO

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

ACONATIC

บริษัท ไอเอฟ โอเรียนท์ ไทย จำกัด (มหาชน)
HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161-162 ซอยงามวงศ์วาน47(จีนเซก2) โทร. 0-2954-5281 , 0-2580-6955
แขวงทุ่งสองห้อง เขตหลักสี่ Core Line. 02-591-9444 , 02-589-5115
กรุงเทพมหานคร 10210

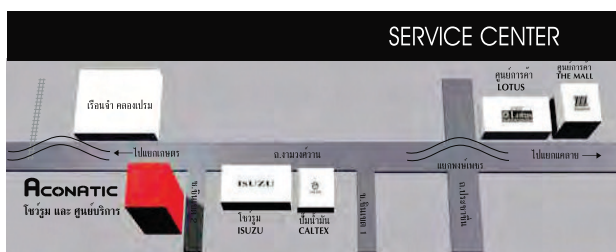

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของสมนาคุณและรายละเอียดสินค้าโดยมีต้องแจ้งให้ทราบล่วงหน้า